



Original instructions

Electric pallet truck

FXH 20
FXH 25



1322 1323 2370 2371

11548011751 EN - 02/2021 - 07

first in intralogistics

Address of manufacturer and contact details ▷

STILL GmbH
Berzeliusstraße 10
22113 Hamburg, Germany
Tel. +49 (0) 40 7339-0
Fax: +49 (0) 40 7339-1622
Email: info@still.de
Website: <http://www.still.de>



1 Introduction

Your industrial truck	2
General	2
CE labelling	3
Copyright and property rights	3
EC declaration of conformity	4
Identification label	5
Rules for the operating company of industrial trucks	5
Eco-design requirements for electric motors and variable speed drives	6
Spare parts list	7
Permissible use	8
Description of use and climatic conditions	8
Unauthorised use	9
Additional information on the conditions of use for pallet trucks in ride-on mode	9
Explanation of symbols used	9
Disposing of components and batteries	9

2 Safety

Safety regulations	12
Safety regulations for handling consumables	13
Permissible consumables	13
Oils	13
Hydraulic fluid	14
Battery acid	14
Disposal of consumables	15
Emissions	16
Noise emission values	16
Vibration characteristics for vibrations to which the body is exposed	16
Residual dangers, residual risks	17
Stability	17

Definition of responsible persons	18
Operating company	18
Specialist	18
Drivers	18
Safety tests	20
Regular safety inspection of the truck	20
3 Overviews	
Truck overview	22
Overview	22
General view of the technical compartment	23
Control and display components	24
Driver's compartment	24
Electronic key (option)	25
Display operating unit	27
Markings	28
Labels	28
Serial number	29
4 Use	
Technical description	32
List of checks prior to start-up	33
Checks and actions prior to commissioning	34
Checking the emergency off switch	34
Checking the brakes	34
Checking the horn	37
Truck operating instructions	38
Stepping on/off the truck	40
Driver's compartment settings	41
Adjusting the seat	41
Adjusting the floor	42
Seat heater option	42
Using the display-operating unit	44
Selection buttons	44
Display of the drive wheel position	44
Operation of the display unit	45
Driving safety guidelines	51

Driving	52
Defining directions	52
Operation of operator presence detection on the version without pedals	52
Starting the truck	54
Driving with the version without pedals	55
Steering	57
Horn	58
Braking on the version without pedals	59
Parking brake	61
Drive program	63
Using the truck on a slope	65
Driving: Single-pedal option	67
Specific features of the single-pedal option	67
Operation of operator presence detection with the single-pedal option	67
Driving with the single-pedal option	68
Braking with the single-pedal option	70
Driving: Dual-pedal option	73
Specific features of the dual-pedal option	73
Operation of operator presence detection with the dual-pedal option	73
Driving with the dual-pedal option	74
Braking with the dual-pedal option	76
Operating the FleetManager™ option	78
Description of the FleetManager option	78
Commissioning a truck equipped with the FleetManager™ option	79
FleetManager™ option: Colour code for the LEDs	80
Disconnecting a truck equipped with the FleetManager™ option	82
Transporting loads	84
Load handling safety rules	84
Grabbing a loading unit	84
Transporting pallets or other containers	85
Lift control elements	86
Handling a single load	87
Cold store use	89
Cold store usage (optional)	89
Handling the battery	91
Battery type	91
Order picking	91
Opening and closing the battery hood	92
Charging the battery using an external charger	93
Changing the side access battery	95

Handling the truck in an emergency	100
Truck towing procedure	100
Handling the truck in specific situations	102
Slinging the truck	102
Lifting the truck	103
Transporting the truck	103
Transporting the truck in the lift	104
Driving on loading bridges	104
5 Maintenance	
General maintenance information	106
General	106
Servicing and maintenance personnel training and qualification	107
Battery maintenance staff	107
Maintenance operations that do not require special training	107
Ordering spare parts and consumables	107
Safety guidelines for maintenance	108
Servicing and maintenance measures	108
Working on the electrical equipment	108
Safety devices	108
Recommended lubricants	109
Technical data for inspection and maintenance	109
Accessing the technical compartment	111
1000-hour maintenance plan	113
5000-hour maintenance plan	113
10,000-hour service plan	114
Chassis, bodywork and fittings	115
Cleaning the truck	115
General information on battery maintenance	116
Checking the condition of the load arms	117
Steering and wheels	118
Checking the condition of the wheels	118
Electrical equipment	119
Cleaning and blowing out the electrical components	119
Checking the battery acid level and electrolyte density	119
Checking the condition of cables, terminals and the battery connector	121

Hydraulic systems	122
Checking the hydraulic system for leaks	122
Checking the hydraulic oil level	122
Storage and decommissioning	124
Storage of truck	124
Permanent Putting Out of Commission (Destruction)	125
6 Technical specifications	
FXH 20 datasheet	128

1

Introduction

Your industrial truck

Your industrial truck

General

The truck described in these operating instructions corresponds to the applicable standards and safety regulations.

If the truck is to be operated on public roads, it must conform to the existing national regulations for the country in which it is being used. The driving permit must be obtained from the appropriate office.

The truck has been fitted with state-of-the-art technology. Following these operating instructions will allow the truck to be handled safely. By complying with the specifications in these operating instructions, the functionality and the approved features of the truck will be retained.

Get to know the technology, understand it and use it safely - these operating instructions provide the necessary information and help to avoid accidents and to keep the truck ready for operation beyond the warranty period.

Therefore:


- Before commissioning the truck, read the operating instructions and follow the instructions.
- Always follow all of the safety information contained in the operating instructions and on the truck.

CE labelling

The manufacturer uses CE labelling to indicate that the truck complies with the standards and regulations valid at the time of marketing. The supplied EC declaration of conformity confirms this. The CE labelling is attached to the nameplate.

An independent structural change or an addition to the tow tractor can compromise safety, thereby invalidating the EC declaration of conformity.

The EC declaration of conformity must be carefully stored and made available to the responsible authorities.

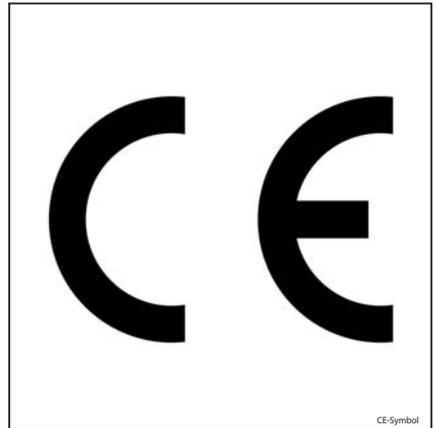

Copyright and property rights

This manual - and any excerpts thereof - may not be reproduced, translated or transmitted in any form to third parties without the express written permission of the manufacturer.

EC declaration of conformity

EC declaration of conformity**Declaration**

STILL GmbH
Berzeliusstrasse 10
22113 Hamburg
GERMANY

We declare that the machine

Industrial truck **according to these operating instructions**
Model **according to these operating instructions**

conforms to the latest version of the Machinery Directive 2006/42/EC.

Person authorised to compile the technical documents:

See EC compliance declaration

STILL S.A.S.

The manufacturer declares that the truck complies with the requirements of the EC directives valid at the time of marketing. This is confirmed by the EC declaration of conformity and by the EC labelling on the nameplate.

An independent structural change or addition to the truck can compromise safety, thus invalidating the EC declaration of conformity.


The EC declaration of conformity must be carefully stored and made available to the relevant authorities.

Identification label



NOTE

Indicate the serial number for all technical enquiries.

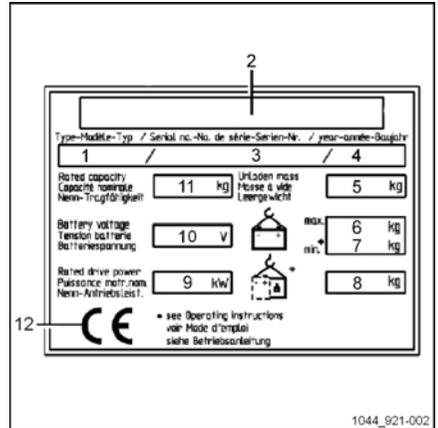

- 1 Model
- 2 Manufacturer
- 3 Serial number
- 4 Year of manufacture
- 5 Unladen weight (without battery) in kg
- 6 Maximum battery weight
- 7 Minimum battery weight (for a lithium-ion battery, the weight of the ballast container is included)
- 8 Additional weight (ballast weight) in kg
- 9 Nominal motor power (kW)
- 10 Battery voltage in V
- 11 Nominal capacity in kg
- 12 EC conformity symbol

Rules for the operating company of industrial trucks

In addition to these operating instructions, a code of practice containing additional information for the operating companies of industrial trucks is also available.

This guide provides information for handling industrial trucks:

- Information on how to select suitable industrial trucks for a particular area of application
- Prerequisites for the safe operation of industrial trucks
- Information on the use of industrial trucks
- Information on transport, initial commissioning and storage of industrial trucks

Eco-design requirements for electric motors and variable speed drives

Internet address and QR code

The information can be accessed at any time by pasting the address <https://m.still.de/vdma> in a web browser or by scanning the QR code.



Eco-design requirements for electric motors and variable speed drives

All motors in this industrial truck are exempt from Regulation (EU) 2019/1781 because these motors do not meet the description given in Article 2 "Scope", Item (1) (a) and because of the provisions in Article 2 (2) (h) "Motors in cordless or battery-operated equipment" and Article 2 (2) (o) "Motors designed specifically for the traction of electric vehicles".

All variable speed drives in this industrial truck are exempt from Regulation (EU) 2019/1781 because these variable speed drives do not meet the description given in Article 2 "Scope", Item (1) (b).

Spare parts list

The spare parts list can be downloaded by entering the address <https://sparepartlist.still.eu> into a web browser or by scanning the QR code displayed to the side.

When the web page is open, please type in the following password: **Spareparts24!**

On the next screen, please enter your email address and truck serial number to receive the link by email. Then download the spare parts list.



Permissible use

Permissible use

The truck described in these operating instructions is suitable for lifting and transporting loads.

The truck should only be used for the purposes for which it was designed, as described in these instructions.

If the truck needs to be used for purposes other than those specified in these instructions, you should first:

- Obtain permission from the manufacturer
- Obtain permission from the competent authorities, if applicable

The purpose of obtaining these permissions in advance is to limit danger as far as possible.

Description of use and climatic conditions

Normal use

- Indoor and outdoor use.
- Ambient temperature in tropical and Nordic regions ranging from -10°C to 45°C
- Start capability from -10°C to 45°C.
- Maximum start time of 20 seconds
- Use at up to 2000 metres above sea level.

Special use (partly with special measures) for trucks equipped with Gel or Lead batteries

- Use, for example, in the event of abrasive dust (such as AL203), lint, acid, leach, salt and incombustible substances.
- Ambient temperature in tropical regions up to 55 °C.
- Start capability at -25°C.
- Use at up to 3,500 metres above sea level.

Unauthorised use

Any danger caused as a result of unauthorised use becomes the responsibility of the operator or driver and not that of the manufacturer.

Use for purposes other than those described in these operating instructions is prohibited.

Transporting people is prohibited.

The forklift truck should not be used in areas where there is a risk of fire, explosion or corrosion, or in areas that are particularly dusty.

Stacking or unstacking is not permissible on inclined surfaces or ramps.

Additional information on the conditions of use for pallet trucks in ride-on mode

The truck has been designed for operators who weigh between 40 and 115 kg.

For those who weigh more or less than this, please contact the manufacturer for further guidance on using this truck.

Explanation of symbols used

DANGER

Compulsory procedure that must be followed to avoid life-threatening danger or physical harm.

WARNING

Compulsory procedure that must followed to avoid injury.

CAUTION

Compulsory procedure that must be followed to avoid damage to and/or destruction of equipment.

NOTE

For technical requirements that require special attention.

ENVIRONMENT NOTE

To prevent environmental damage.

Disposing of components and batteries

The truck is made up of different materials.

If components or batteries must be replaced and scrapped, they must be:

- disposed of
- treated or
- recycled in accordance with regional and national regulations

NOTE

The documentation provided by the battery manufacturer must be observed when disposing of batteries.

ENVIRONMENT NOTE

We recommend working with a waste management company when disposing of components and batteries.

Disposing of components and batteries

2

Safety

Safety regulations

Safety regulations

These operating instructions, which come with the truck, must be communicated to all those concerned and in particular to personnel responsible for maintenance and driving. The employer must make sure that the forklift operator has properly understood all the safety information.

Please observe the directives and safety regulations attached, in particular:

- Information concerning the use of materials handling trucks
- Regulations concerning traffic lanes and working areas
- Appropriate behaviour, rights and responsibilities of the driver
- Use in particular areas
- Information about the weight and dimensions of pallets or any other container
- Information concerning starting, driving and braking
- Information concerning maintenance and repair

- Regular checks and technical inspections
- Recycling of lubricants, oils and batteries
- Residual risks.

Care is recommended both for the user and the person in charge (employer) with regard to adhering to all safety rules concerning the use of material-handling trucks.

When instructing forklift operators, we recommend the following points are emphasized:

- The features of the truck
- The special accessories
- The specific features of the working environment.

Train the user in how to drive the truck, until it is under proper control.

Then, and only then, proceed to transferring pallets.

Forklift truck stability is guaranteed when the unit is used correctly.

Safety regulations for handling consumables

Permissible consumables

WARNING

Consumables can be dangerous.

It is necessary to follow the safety regulations when handling these substances.

Refer to the maintenance data table for the permissible substances necessary for operation.

Oils



DANGER

Oils are flammable!

- Follow the statutory regulations
- Do not allow oils to come into contact with hot motor parts.
- No smoking, fires or flames!



DANGER

Oils are toxic!

- Avoid contact and consumption
- In case of inhalation of steam or fumes, breathe fresh air immediately.
- After contact with the eyes, rinse thoroughly with water (for at least 10 minutes) and then consult an eye specialist.
- If swallowed, do not induce vomiting. Seek immediate medical attention.



WARNING

Prolonged intensive contact with the skin can result in loss of skin oils and cause irritation.

- Avoid contact and consumption.
- Wear protective gloves!
- After any contact, wash the skin with soap and water and then apply a skin care product.
- Immediately change soaked clothing and shoes.

WARNING

There is a risk of slipping on spilled oil, particularly when combined with water!

- Collect spilled oil immediately using an oil-binding agent and dispose of it in accordance with regulations.



ENVIRONMENT NOTE

Oils are water pollutants!

Always store oil in containers that comply with the applicable regulations.

Avoid spilling oils.

Collect spilt oil immediately using an oil binding agent and dispose of it in accordance with regulations.

Dispose of old oils according to the applicable regulations.

Safety regulations for handling consumables

Hydraulic fluid



⚠️ WARNING

During operation of the forklift truck, hydraulic fluids are pressurised and are hazardous to your health.

- Do not spill these fluids!
- Follow the statutory regulations
- Do not allow the fluids to come into contact with hot motor parts.
- Do not allow to come into contact with the skin.
- Avoid inhaling the spray
- Penetration of pressurised fluids into the skin is particularly dangerous if these fluids escape at high pressure due to leaks in the hydraulic system. In case of such injury, seek medical advice immediately.
- To avoid injury, use appropriate personal protective equipment (e.g. protective gloves, industrial goggles, skin protection and skin care products).



🚫 ENVIRONMENT NOTE

Hydraulic fluid is a water-polluting substance!

Always store hydraulic fluid in containers complying with the regulations.

Avoid spilling.

Spilt hydraulic fluid should be removed with oil-binding agents at once and disposed of according to the regulations.

Dispose of old hydraulic fluid according to regulations.

Battery acid



⚠️ WARNING

Battery acid contains dissolved sulphuric acid. This is toxic.

- Avoid contact and consumption.
- In case of injury, seek medical advice immediately.



⚠️ WARNING

Battery acid contains dissolved sulphuric acid. This is corrosive.

- When working with battery acid, always wear protective clothing and eye protection.
- Do not allow any acid to get onto the clothing or skin or into the eyes; if this does happen, rinse immediately with plenty of clean water.
- In case of injury, seek medical advice immediately.
- Immediately rinse away spilt battery acid with plenty of water.
- Follow the statutory regulations



🚫 ENVIRONMENT NOTE

- Dispose of used battery acid in line with the applicable regulations.

Disposal of consumables



ENVIRONMENT NOTE

Materials that have to be disposed of following maintenance, repair and cleaning must be systematically collected and disposed of in accordance with regulations. Observe the national regulations for your country. Work may only be carried out in areas designated for this purpose. Take care to minimise, as far as possible, any impact on the environment.

- Any spillage of fluids such as hydraulic oil, brake fluid or gear lubricant oil must be immediately soaked up with an oil-binding agent.
- The regulations for disposal of used oil are applicable.
- Any spillage of battery acid must be neutralised immediately.

Emissions

Emissions

Noise emission values

Calculated during the test cycle performed in accordance with standard EN 12053.

Acoustic pressure level in the driver's compartment			
FXH 20	L _{PAZ}	=	68 dB (A)
FXH 25	L _{PAZ}	=	68 dB (A)
Uncertainty	K _{PA}	±	2.5 dB (A)

 **NOTE**

Lower or higher noise values may occur when using industrial trucks, e.g. due to the mode of operation, environmental factors and other sources of noise.

Vibration characteristics for vibrations to which the body is exposed

The values were determined according to EN 13059 using trucks with standard equipment according to the datasheet (driving over test course with humps).

Specified characteristics for upper limb vibrations	
Vibration characteristics	< 2.5 m/s ²

 **NOTE**

The vibration characteristics for bodily vibrations cannot be used to determine the actual load level of vibrations during operation. This depends on the operating conditions (state of ground, mode of operation etc.) and should therefore be determined on site, where appropriate. It is mandatory to specify the hand-arm vibrations even where the values do not indicate any hazard, as in this case.

Residual dangers, residual risks

Despite all operational precautions and compliance with standards and rules, the possibility of additional risks when using the truck cannot be entirely excluded.

The truck and all its components comply with the regulations relating to current applicable safety rules.

Persons in the vicinity of the truck must be particularly cautious and react immediately in the event of any malfunction, incident, breakdown etc.

WARNING

Personnel in contact with the truck must be informed of the risks related to using the truck.

These operating instructions draw your attention to the safety rules.

The risks are:

- Escape of consumables due to leaks, ruptured lines and tanks etc.
- Risk of accident when driving over difficult ground such as slopes, soft or irregular surfaces or in poor visibility etc.

Stability

Stability is only guaranteed if the industrial truck is used according to the indicated recommendations.

It is not guaranteed in the event of:

- cornering at high speeds
- moving with a load that is protruding to the side (e.g. sideshift)

- Falling, tripping etc. when moving on the industrial truck, especially in the wet, with leaking consumables or icy surfaces.
- Loss of stability due to the load being unstable or the load slipping etc.
- Risk of fire and explosion due to batteries and electrical voltages.
- Human error - Disregarding safety regulations.

It is important to adjust the speed of the truck depending on the load and ground conditions.

The stability of the truck has been tested to the latest standards. These standards only take account of the static and dynamic tilting forces that can arise during operation that complies with the specifications and operating rules. Risks caused by misuse or incorrect operation that jeopardise the stability cannot be ruled out in extreme situations.

- turning and driving diagonally on descents or ascents
- driving on descents or ascents with the load on the downhill side
- loads that are too wide or too heavy
- driving with an unstable load
- ramp edges or steps.

Definition of responsible persons

Definition of responsible persons

Operating company

The operating company is the natural or legal person or group who operates the truck or on whose authority the truck is used.

The operating company must ensure that the truck is only used for its intended purpose and in compliance with the safety guidelines set out in these operating instructions.

The operating company must ensure that all users read and understand the safety information in these instructions.

The operating company is responsible for the scheduling and correct performance of regular safety checks.

It is recommended that these checks comply with national performance specifications.

Specialist

A specialist is deemed to be:

- A person whose experience and technical training has allowed him to develop relevant knowledge of industrial trucks
- A person who is also familiar with national health and safety regulations and generally recognised technical directives and conven-

tions (standards, VDE regulations, technical regulations of other European Union member states or countries that are signatories to the treaty that established the European Economic Area). This expertise allows him to assess the condition of industrial trucks in terms of health and safety

Drivers

This truck may only be driven by suitable persons who are at least 18 years of age, have been trained in driving, have demonstrated their skills in driving and handling loads, and have been specifically designated to drive the truck. Specific knowledge of the truck is also necessary.

The driver must be familiar with the operating instructions and have access to them at all times.

The driver must:

- Have read and understood the operating instructions
- Have familiarised himself with safe operation of the truck
- Be physically and mentally able to drive the truck safely

Driver rights, duties and rules of behaviour

The driver must be duly informed of his rights and duties.

The driver must be granted the required rights.

The driver must wear protective equipment (protection suit, safety helmet, industrial goggles and protective gloves) that is appropriate for the conditions, the task and the load to be lifted. The driver must also wear safety footwear to be able to drive and brake in complete safety.

⚠ DANGER

The use of drugs, alcohol or medications that affect reactions impair the ability to drive the truck.

Individuals under the influence of the above-mentioned substances are not permitted to perform work of any kind on or with the truck.

Definition of responsible persons

Prohibition of use by unauthorised persons

The driver is responsible for the truck during working hours. He must not allow unauthorised persons to operate the truck.

When leaving the truck, the driver must secure it against unauthorised use.

Safety tests

Safety tests

Regular safety inspection of the truck

Safety inspection based on time and extraordinary incidents ▷

The operating company (see chapter entitled "Definition of responsible persons") must ensure that the truck is checked by a specialist at least once a year or after noteworthy incidents.

As part of this inspection:

- A full check of the technical condition of the truck in terms of accident safety must be performed
- The truck must be thoroughly checked to detect any damage that may have been caused by improper use
- A test log must be created.

The results of the inspection must be retained until at least a further two inspections have been carried out.

The inspection date is indicated by an adhesive label on the truck.

- Arrange for the service centre to perform periodic safety inspections on the truck.
- Observe the guidelines for tests carried out on the truck in accordance with FEM 4.004.

The operator is responsible for ensuring that any defects are remedied immediately.

- Contact your service centre.



NOTE

Observe the regulations in force in your country.




3

Overviews

Truck overview

Truck overview


Overview

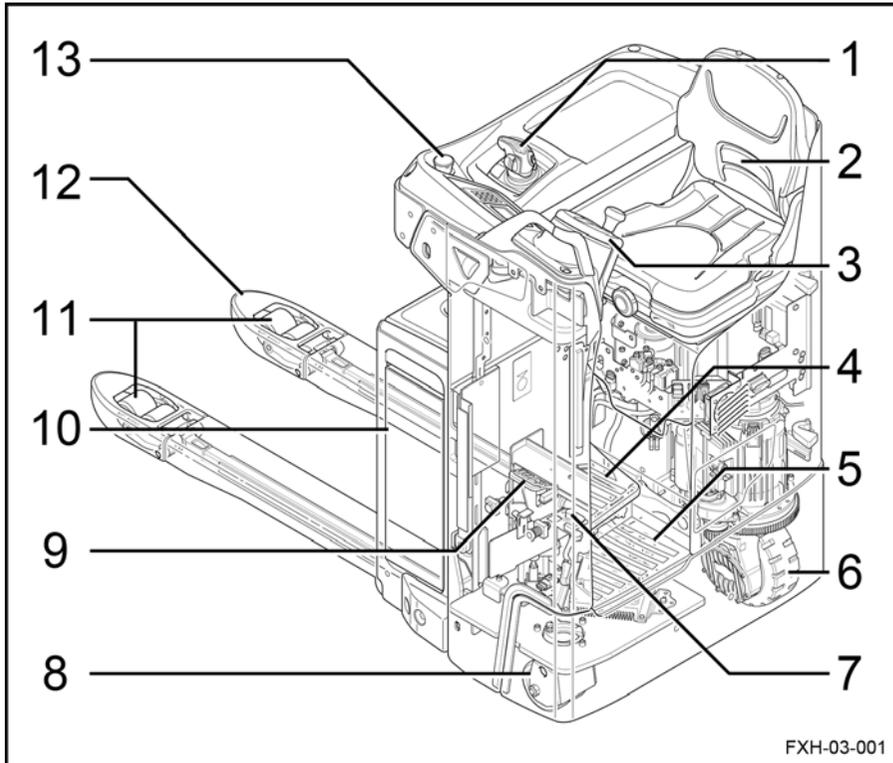

- | | |
|---|-----------------------------------|
| 1 | Control unit |
| 2 | Seat |
| 3 | Steering wheel |
| 4 | Adjustable floor |
| 5 | Platform |
| 6 | Drive wheel |
| 7 | Operator presence button or pedal |

- | | |
|----|-----------------------|
| 8 | Stabiliser wheels |
| 9 | Brake pedal |
| 10 | Battery compartment |
| 11 | Load wheels or bogies |
| 12 | Load arms |
| 13 | Emergency off switch |

General view of the technical compartment

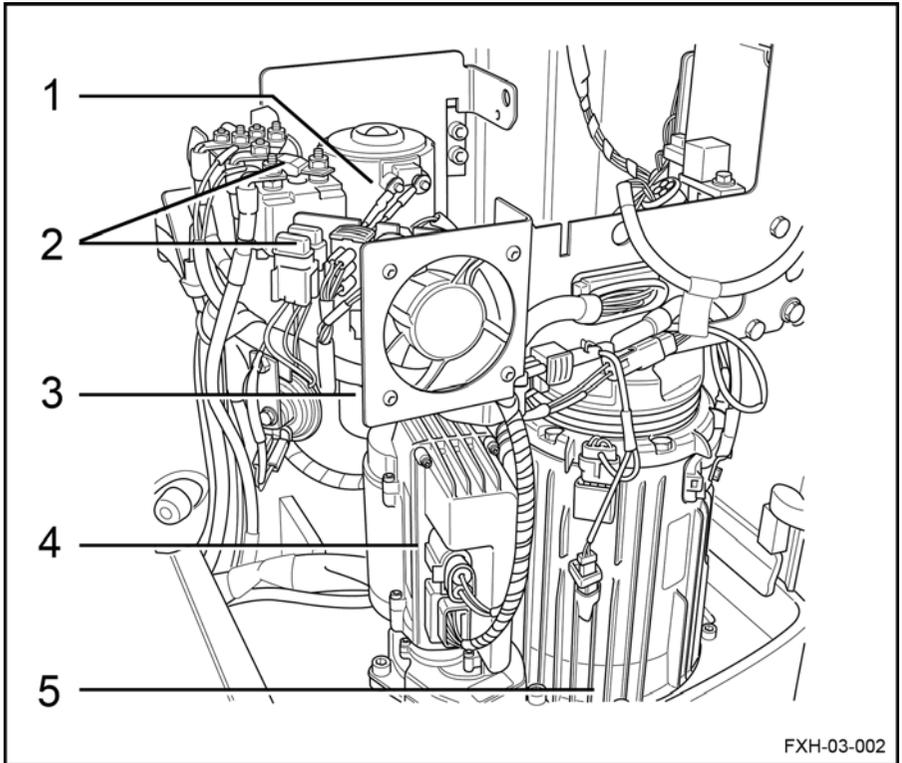

FXH-03-002


- 1 Pump-motor unit
- 2 Fuses
- 3 Tank

- 4 ES30-24 steering unit
- 5 Traction motor

Control and display components

Control and display components


Driver's compartment

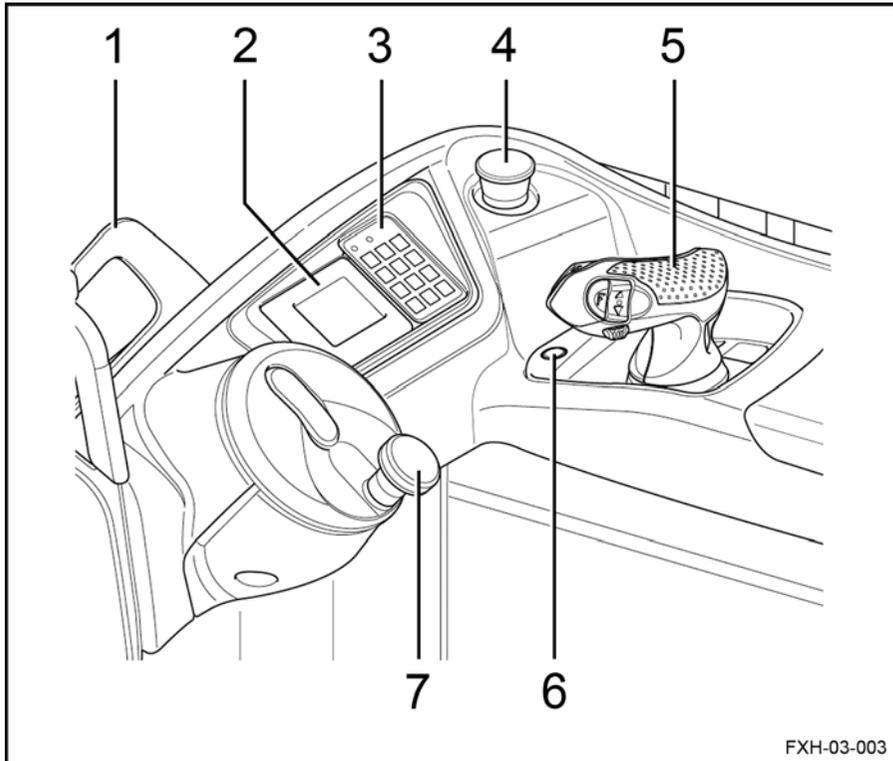

FXH-03-003

- | | | | |
|---|--------------------------------|---|----------------|
| 1 | Handle | 5 | Joystick |
| 2 | Display | 6 | Parking brake |
| 3 | Switch key (or electronic key) | 7 | Steering wheel |
| 4 | Emergency off switch | | |

Electronic key (option)

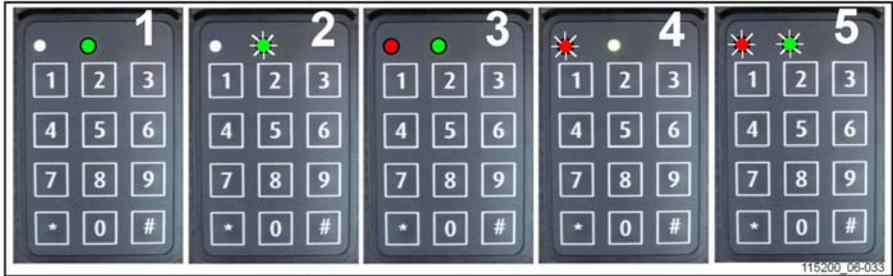

- | | | | |
|---|------------------------------|---|------------------------------------|
| 1 | Switch ON (operating mode) | 4 | Key fault or incorrect code |
| 2 | Switch OFF and awaiting code | 5 | Time delay of automatic switch-off |
| 3 | Programming mode active | | |


Operation	Enter	Status of LEDs	Comments
USE			
ON	*12345# (by default)	○ red off ● continuous green (1) (correct PIN) ● red flashing ○ green off (4) (incorrect PIN)	12345 default PIN
OFF	# (3 seconds)	○ red off ● green flashing (2)	Truck power off

PROGRAMMING (truck switch OFF only (2))			
ADMINISTRATOR CODE ESSENTIAL FOR ALL ELECTRONIC KEY SETTINGS	*00000000# (by default)	● continuous red ● continuous green (3)	Once the LEDs have gone out, the electronic key automatically reverts to "operating mode".
New operator code	*0*45678#	○ red off ● green flashing (2) (code accepted)	Example of new operator code: 45678
Allocating operator codes	*2*54321#	○ red off ● green flashing (2) (code accepted)	*2*: operator reference 10 options from 0 to 9
Deleting operator codes	*2*#	○ red off ● green flashing (2) (deletion accepted)	*2*: operator reference (between 0 and 9)
Modifying administrator codes	* * 9 * 1 2 3 4 5 6 7 8 #	○ red off ● green flashing (2) (code accepted)	

Control and display components

PROGRAMMING (truck switch OFF only (2))			
Restoring the initial administrator code			To reactivate the default administrator code (00000000), please contact your agent or nearest dealer.
Activating the automatic switch-off	* * 2 * 1 #	● red flashing ● green flashing (5) (5 seconds before switch-off)	Power switches off automatically after 10 minutes (600 seconds by default) if the truck is not in use.
Setting the time delay of the automatic switch-off	* * 3 * 6 0 #	○ red off ● green flashing (2) (value accepted)	Example: automatically switches off after 1 minute (60 seconds) if not in use. Minimum setting = 10 seconds/maximum = 3000 seconds
Deactivating the automatic switch-off	* * 2 * 0 #	○ red off ● green flashing (2) (command accepted)	

Display operating unit

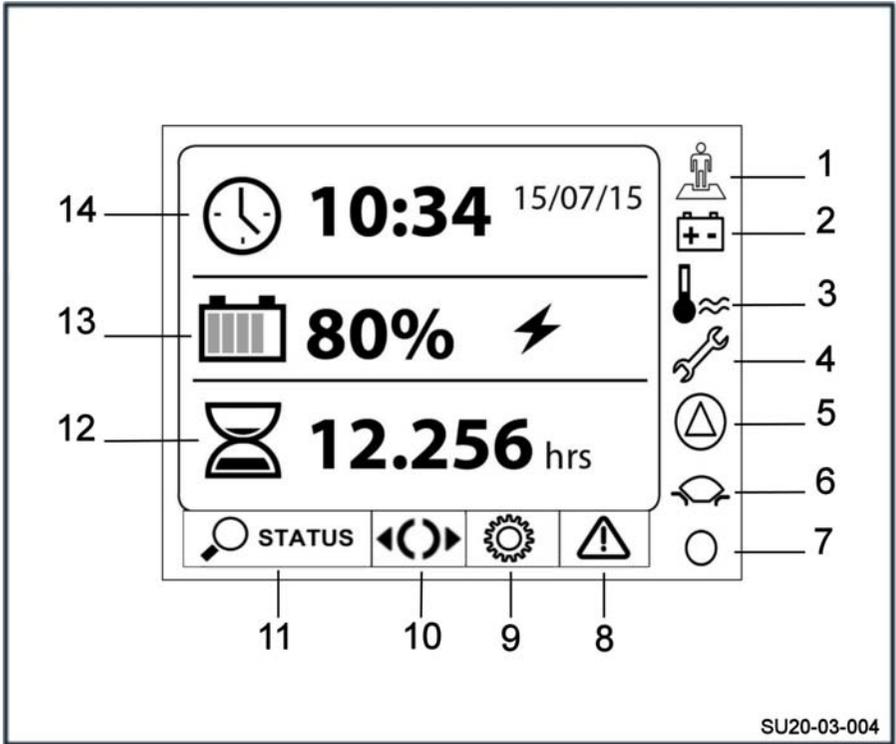

- | | | | |
|---|---------------------------------|----|--|
| 1 | Operator present light | 8 | Error Code menu |
| 2 | Battery indicator light | 9 | Settings menu |
| 3 | Temperature indicator light | 10 | Drive wheel position menu |
| 4 | Settings indicator light | 11 | Truck status menu |
| 5 | Warning indicator light | 12 | Display of the operating time of the truck |
| 6 | Drive programme indicator light | 13 | Display of the battery charge |
| 7 | Activity indicator light | 14 | Display of the date and time |

For more information, refer to Chapter 4 **Using the display operating unit**.


Serial number

NOTE

Indicate the serial number for all technical enquiries.

The serial number contains the following information:

- 1 Production location
- 2 Type
- 3 Year of production
- 4 Count number

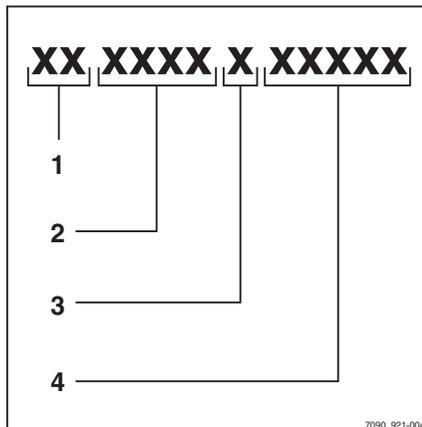

Markings

4

Use

Technical description

Technical description

Pallet trucks FXH 20 and FXH 25 are used for transporting pallets and/or containers in small spaces.

The following models are available:

- FXH 20: 2000 kg
- FXH 25: 2500 kg

Features

During ride-on driving, this pallet truck provides the operator with good visibility. The operator can cover long distances safely.

- 12 km/h unladen
- 10 km/h laden

Drive system

The truck drive system comprises:

- 3,0 kW traction motor
- LAC (Linde Asynchronous Controller) microprocessor controller to control traction and lift
- ES30–24 steering unit
- Pump unit with a power of: 1.2 kW (model FXH 20) and 1.5 kW (model FXH 25)

Batteries

Power is supplied by:

- A gel battery or a lead battery
- Or a lithium-ion battery (the truck therefore has specific characteristics)

They are side access batteries only.

Steering

The electric steering offers driving precision and easier manoeuvring.

The truck is equipped with a 0,185 kW asynchronous steering motor.

The steering is controlled with a steering wheel and a control module.

The drive unit is mounted on a turntable. Steering is provided by an electric geared motor that positions the turntable.

The steering motor is controlled by a variable speed transmission. It receives information from the steering wheel and the wheel angle position. The speed of the truck is automatically reduced when cornering.

Braking

The truck is equipped with two brake systems:

- An electromagnetic system with progressive braking
- A counter-current system

Driver's compartment

The driver's compartment includes:

- A steering wheel and a joystick
- A key switch
- A display
- An emergency off switch
- A seat
- An operator presence detection device (depending on the version)
- A truck raising/lowering handle

Optional equipment available:

- Electronic key
- Cold store (-35°C)
- Document holder



The operating instructions can be found in the document holder, located on the technical compartment door.

List of checks prior to start-up

WARNING

Damage or other defects on the truck or attachments (special equipment) can result in accidents.

If damage or other faults are noticed on the truck or attachments (special equipment) during the following inspections, do not use the truck until it has been properly repaired. Do not remove or disable the safety systems and switches. Do not change the pre-set values.

Before start-up, ensure that the truck operates correctly.

To do this, perform the following checks:

- The load arms must not show any signs of noticeable damage (for example: bending, cracks, significant wear).
- Check that there are no signs of leaking consumables under the truck.
- Do not restrict the field of vision. Ensure the visible area specified by the manufacturer is observed.
- Attachment parts (special equipment) must be properly secured and function according to their operating instructions.

- Damaged or missing stickers must be replaced in compliance with the marking position table.
- The roller channels must be coated in a visible layer of grease.
- The wheels must show no signs of defects or heavy wear. They must be mounted correctly.
- Check that there are no foreign objects that could hinder the operation of the wheels and rollers.
- The warning devices (horn etc.) must work.
- The battery hood must be closed.
- Check that the hoods are correctly positioned.
- The operator must be qualified to drive the truck. The operator must be able to reach the controls and operate them (especially the anti-crush device). Do not obstruct access to the controls.

Please inform your supervisor if you notice any defects.

Checks and actions prior to commissioning

Checks and actions prior to commissioning

Checking the emergency off switch ▷


To check the operation of the emergency off switch, proceed as follows:

- Drive the truck.
- Press the emergency off switch (1).

The truck stops immediately. The truck power supply is cut. The electrical controls and motors are no longer supplied with power.

- Pull the emergency off switch (1)

The functions are available again.

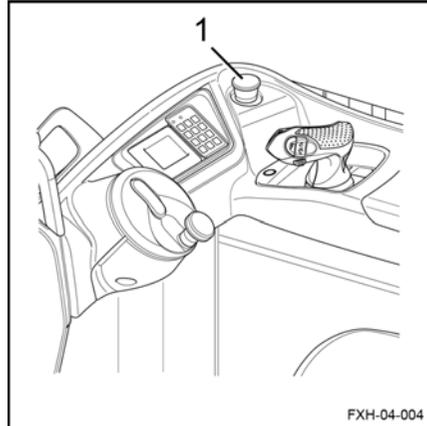

NOTE

Ensure that the stabiliser wheels operate correctly. This influences braking effectiveness.

Checking the brakes



NOTE

Braking is progressive and increases as the brake pedal is depressed.

Braking on the version without pedals ▷

Braking using the brake pedal


- Push the joystick to move the truck forwards.
- Press the brake pedal (1).

The truck brakes progressively until the truck comes to a complete stop.

Braking by releasing the joystick

- Push the joystick to move the truck forwards.
- Release the joystick.

The truck brakes progressively until the truck comes to a complete stop.

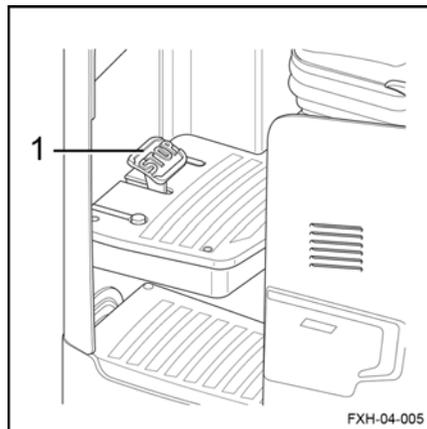

Braking by reversing the drive direction

- Push the joystick to move the truck forwards.

- Push the joystick in the opposite direction.

The truck brakes progressively and then moves off in the opposite direction until the desired speed has been reached.

NOTE

Also ensure that the stabiliser wheels operate correctly. This influences braking effectiveness.

Braking with the single-pedal option

Braking using the brake pedal

- Toggle the drive switch and press the accelerator pedal (2) to move the truck forwards.
- Press the brake pedal (1).

The truck brakes progressively until the truck comes to a complete stop.

Braking by releasing the accelerator pedal


- Use the drive switch located on the joystick to set the direction of travel.
- Press the accelerator pedal (2) to move the truck forwards.
- Release the accelerator pedal.

The truck brakes progressively until the truck comes to a complete stop.

Braking by reversing the drive direction

- Toggle the drive switch located on the joystick to set the direction of travel.
- Press the accelerator pedal (2) to move the truck forwards.
- Move the drive switch in the opposite direction.
- Keep the accelerator pedal depressed.

The truck brakes progressively and then moves off in the opposite direction until the desired speed has been reached.

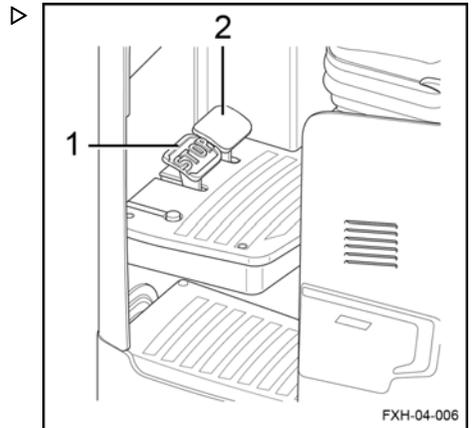

Checks and actions prior to commissioning



NOTE

Also ensure that the stabiliser wheels operate correctly. This influences braking effectiveness.

Braking with the dual-pedal option

Braking using the brake pedal

- Press the accelerator pedal (2) or (3) to move the truck forwards.
- Release the accelerator pedal.
- Press the brake pedal (1).

The truck brakes progressively until the truck comes to a complete stop.

Braking by releasing the accelerator

- Press the accelerator pedal (2) or (3) to move the truck forwards.
- Release the accelerator pedal.

The truck brakes progressively until the truck comes to a complete stop.

Braking by reversing the drive direction


- Press the accelerator pedal (2) or (3) to move the truck forwards.
- Press the other accelerator pedal.
- Keep the pedal depressed.

The truck brakes progressively and then moves off in the opposite direction until the desired speed has been reached.



NOTE

Also ensure that the stabiliser wheels operate correctly. This influences braking effectiveness.

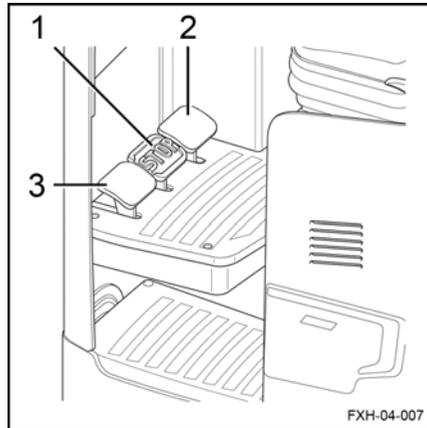


Checking the horn

The horn is located on the rear side of the control module.

To check the operation of the horn, proceed as follows:

- Press the button (1) on the control module

The horn sounds.

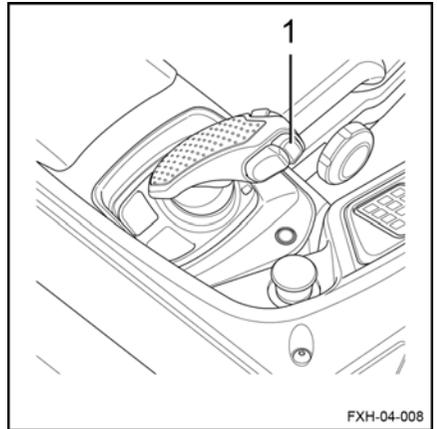

Truck operating instructions

Truck operating instructions

The trucks are designed for indoor and outdoor use in non-hazardous atmospheres. The temperature should be between -10°C and +45°C and the relative humidity of the air less than 95%.



NOTE

A cold store option is available for lower temperatures.

The places where the truck is used must comply with the applicable regulations (condition of the ground, lighting etc.).

The trucks must be used on dry, clean and flat ground.

Before using the truck, it is essential to check the working environment. This check can take the form of visual inspection.

The work area must be clear. The truck's path must be free of obstacles and people.

The forklift operator must be alert to anything that might prevent manoeuvres being carried out safely. The following may create a potential danger:

- A person near the truck
- The forklift operator must not use an MP3 player or any other electrical equipment that could impair awareness of his/her surroundings
- There must be no signs of oil or grease on the floor

The forklift operator must take care when transporting a load. The load dimensions can interfere with manoeuvres and restrict the field of vision. The speed of the truck must also be reduced as the truck could tip over when breaking or cornering.

The loads must be consistent, with a maximum recommended height of 2 m.

For uses other than those shown above, please consult the After-Sales Service Centre.

It is important to use pallets that are in good condition.

Speed must be reduced when moving over obstacles to prevent the truck from becoming unbalanced and vibrations in the forklift operator's arms.

The trucks can drive across ramps and shallow inclines. With an initial lift, they can cross larger obstacles.

WARNING

Risk of loss of stability

- Always adapt your driving to the ground conditions (uneven surfaces etc.), particularly hazardous working areas and the load.



NOTE

- *To prevent the bottom of the load lift system from scraping the ground, always move the load arms to the raised position before setting off*
- *Always switch off the ignition before leaving the truck*

WARNING

Risk of injury

Always keep your hands on the controls. Never put your hands near moving parts and assemblies without first lowering the load arms to the ground and disconnecting the battery.

For effective protection, safety shoes must be worn.

WARNING

Driving safety guidelines:

- The driver must drive slowly around corners and when entering narrow passageways.
- The driver must always maintain a safe braking distance from vehicles or people in front of him.
- The driver must avoid stopping suddenly, making U-turns too quickly and overtaking in dangerous areas with poor visibility.

⚠ CAUTION

Risk of injury

Before using a side access truck, check that the battery is correctly locked.

Stepping on/off the truck


Stepping on/off the truck

**⚠ WARNING**

Risk of falling, tripping or slipping when stepping on/off the truck.

Use the handle and the seat to help when stepping on/off the truck

- Grip the handle (1) with your left hand.
- Hold onto the seat (2) with your right hand.
- Step onto the fixed platform (3), paying close attention to your step.
- Step onto the adjustable floor (4), paying close attention to your step. Be careful not to press the pedals.
- Sit on the seat.

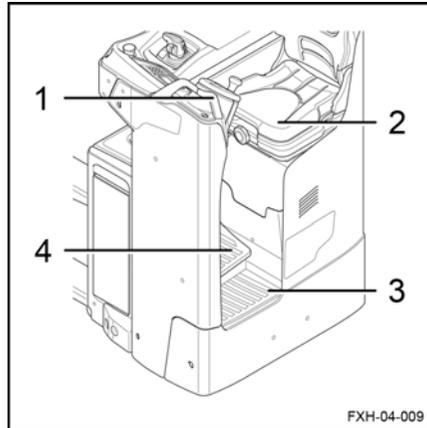**⚠ CAUTION**

Risk of injury or impact from the edges of the truck.

Be careful not to hit yourself on the edge of the floor when stepping onto the truck.

⚠ CAUTION

Risk of damaging the equipment.

- Never pull on the steering wheel when stepping onto the truck.

Excessive force on the steering wheel can damage it and cause a malfunction.

⚠ DANGER**Risk of injury**

To avoid accidental start-up, do not use the control module as a handle.

Use the handle and the seat.

Driver's compartment settings

Adjusting the seat

The driver's seat has several settings, allowing you to adjust the driving position to suit you:

- The lever (1) allows you to adjust the tilt of the backrest
- The lever (2) allows you to adjust the horizontal position
- The adjustment wheel (3) allows you to adjust the weight of the operator for the operator presence detector

To adjust the seat, proceed as follows:

- Sit on the seat.

Adjusting the backrest:

- Pull the adjustment lever (1) to tilt the backrest

Adjusting the depth:

- Pull the adjustment lever (2) to move the seat forwards or backwards

Weight setting:

The seat is equipped with an operator presence detector:

The operator must adjust his weight by increments of 10 kg to trigger this detection.


- Turn the adjustment wheel (3) until the desired weight is reached

NOTE

The seat's operator presence detector cannot be activated if the weight setting is too high or too low.

This operation also enables you to adjust the hardness of the seat.

- Put the truck into service.

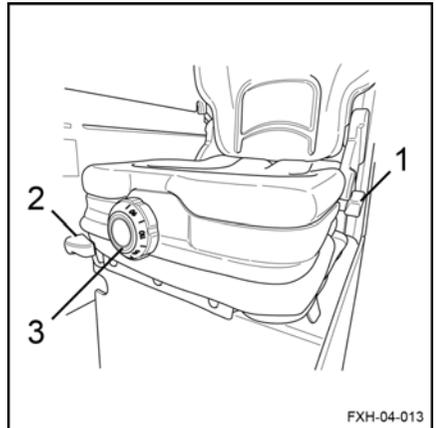


Driver's compartment settings

Adjusting the floor

The floor is fitted with a pressure-based height adjustment system.

To adjust the floor height, proceed as follows:

- Sit on the seat.
- Press the floor unlocking button (2) and hold it down for the duration of the operation.
- Exert pressure on the floor (3) by pushing it with your right leg to obtain a good driving position.
- Release the button.

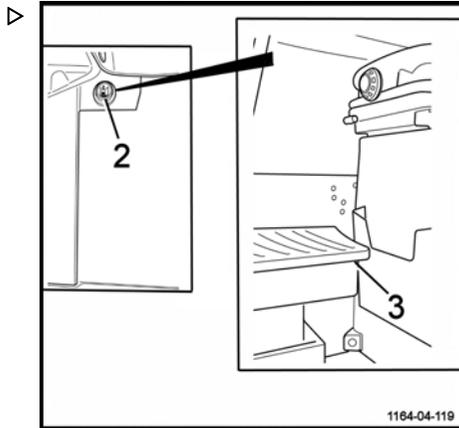

NOTE

Adjusting the floor is not possible when the truck is in cold store. The adjustment cylinder does not work at low temperatures.

Seat heater option


The driver's seat may be equipped with the **seat heater** option.

The heater turns on when the operator's presence on the seat is detected.

To activate the heater, proceed as follows:

- Sit on the seat
- Adjust the weight of the operator
- Put the truck into service
- Press the LED button (1) to activate the heating

The LED button (1) illuminates to indicate that the heater is in operation.

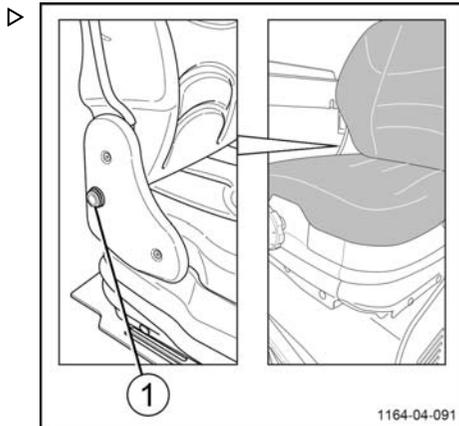

NOTE

When the driver gets up or leaves the seat, the heating stops in order to conserve battery power.

No visual information is shown on the display.

- Check whether the LED button (1) is on

- Press the LED button (1) to reactivate the heater


Using the display-operating unit

Using the display-operating unit

Selection buttons

The operator selects the menus using the four selection buttons:

- The **Blue Q** button (1) to select Blue Q mode, hare mode or tortoise mode
- The **left arrow** button (2) to scroll left through the drop-down menu
- The **right arrow** button (3) to scroll right through the drop-down menu
- The **confirm** button (4) to confirm the highlighted choice on the screen

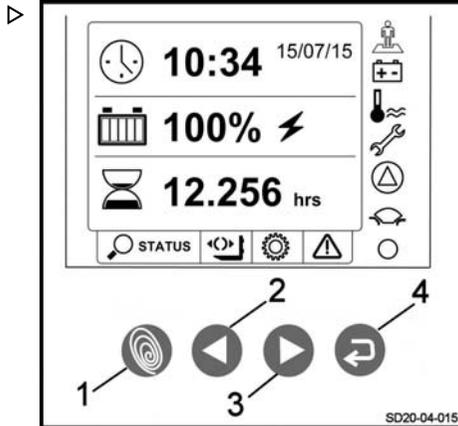


Display of the drive wheel position

The forklift operator can find out the position of the drive wheel by referring to the display.

Proceed as follows:

- Press the **left arrow** or **right arrow** button to scroll through the menu.
- Select the Wheel menu (2).
- Press the **confirm** button (1).

The position of the drive wheel is then shown on the display (3).

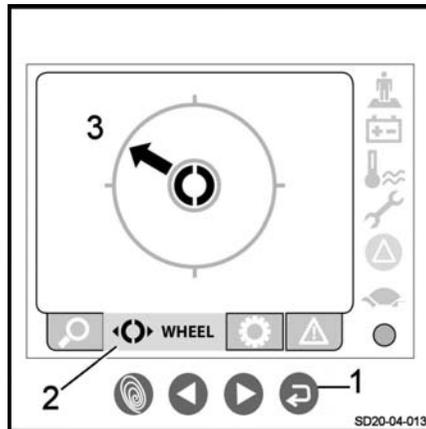


Operation of the display unit

Parking brake

The parking brake indicator light (2) indicates the status of the parking brake.

- **Indicator light permanently illuminated:** The parking brake is engaged, the controls are not available
- **Indicator light flashing:** The parking brake is engaged, the controls are available
- **Indicator light off:** The parking brake is disengaged, the truck is moving

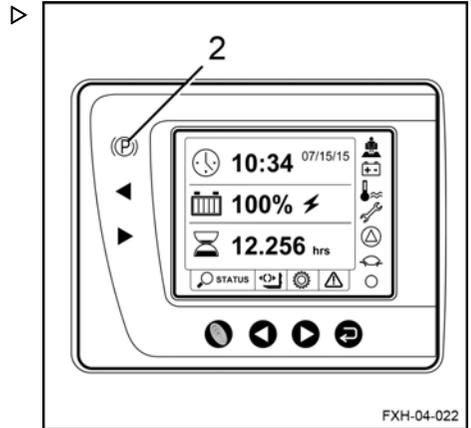

Drive direction indicator


NOTE

This feature is only present on the truck version with the single-pedal option.

An indicator light indicates the direction of travel.

- **Forward travel (1)**
- **Reverse travel (2)**

When the operator selects a direction of travel, the indicator for the chosen direction lights up.

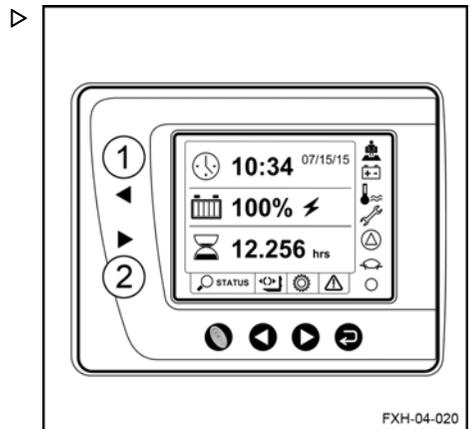

Operator presence


For the truck to operate, the operator must be detected on the seat and then on the pedal.

When the truck is switched on, the indicator light indicating the operator's presence on the seat (1) lights up and flashes.

Using the display-operating unit


- Sit on the seat.

The light indicating the **operator's presence on the seat** (1) is replaced by the light indicating the **operator's presence on the pedal** (2), which flashes.

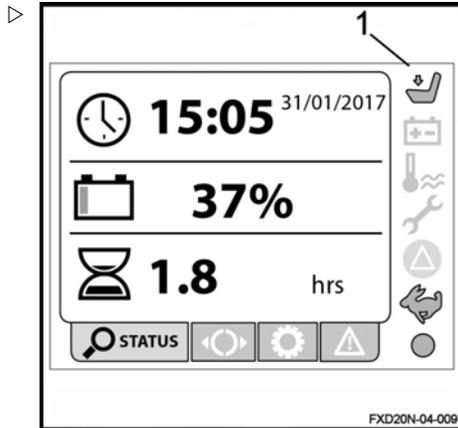

- Press the operator presence pedal with your left foot.

The light indicating the **operator's presence on the pedal** (2) remains continuously illuminated for two seconds and then goes out.

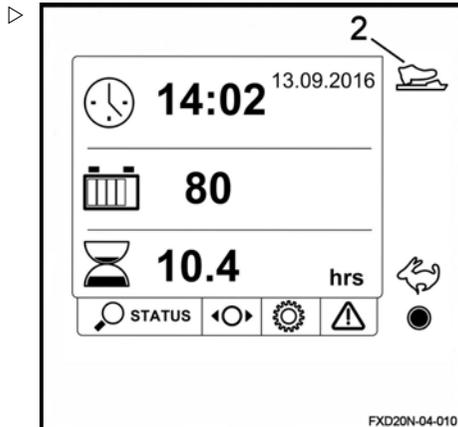

Managing battery charging

The operating unit shows the battery charge level.

The operator can refer to the battery icon (1) or (2).


The number of bars shown indicates the battery charge level.

- From 0 to 20%: 1 bar
- From 21 to 40%: 2 bars
- From 41 to 60 %: 3 bars
- From 61 to 80 %: 4 bars
- From 81 to 100 %: 5 bars

The **battery** light (3) comes on in the event of a deep discharge of the battery or in the event of a fault.

Two distinct warnings may be displayed if the battery charge is insufficient:

- 1) Less than 25% of charge remaining: the (3) and (4) icons flash and an audible beep sounds. A warning message appears at the icon (4) and remains on until the battery is recharged
- 2) Less than 20% of charge remaining: three regular beeps sound, the icon (3) flashes and the icon (4) remains on with a new warning message

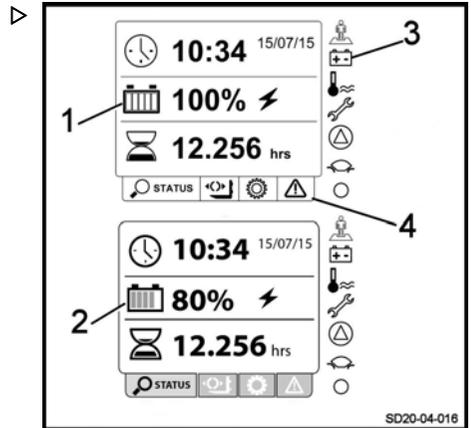

Temperature, settings and warning lights


The **temperature** light (1) comes on in the event of overheating of the traction motor or the controller.

A warning is shown on the display.

The **settings** light (2) comes on to indicate the date of the next maintenance.

A warning is shown on the display.

The **warning** light (3) comes on in the event of a fault in a truck component.

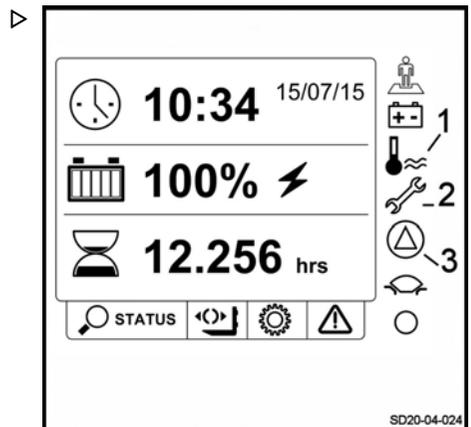

Using the display-operating unit

Drive program


The **drive program** light (1) is permanently illuminated when a travel mode is selected.

There are three different drive modes:

- Tortoise mode (2)
- Hare mode (3)
- Blue Q mode (4)

The icon of the drive mode selected appears on the display.


- Select the desired drive mode using the navigation keys

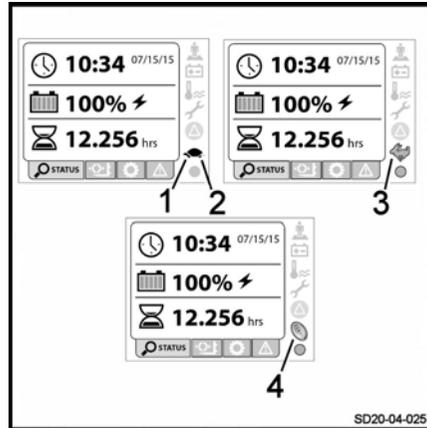

Activity indicator

The **activity indicator** light (1) flashes continuously while the truck is in operation.

When the indicator is off, the display unit is locked or frozen. A warning is shown on the display.

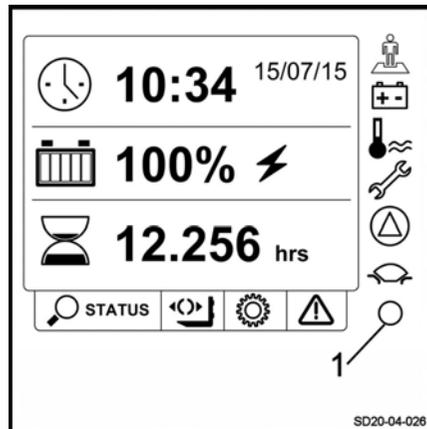


Settings menu

It is possible to access different settings through the Settings menu.

- Select the **Settings** menu (1)

This menu allows access to a drop-down menu (2) consisting of:

- Language
 - Unit
 - Date format
 - Date
 - Time
 - Adjustment of the Load Management warning sounds
 - Adjustment of the contrast
 - Adjustment of the brightness
- Select the desired option

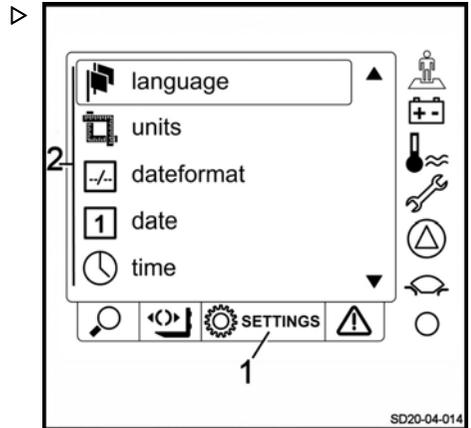


Error codes menu

It is possible to access error messages that are disrupting the operation of the truck.

- Select the **Error messages** menu (1)

The operator can access the error codes. If several codes are affecting the truck, the operator can scroll through several successive displays.

The number of error messages is indicated at the bottom of the display (2).

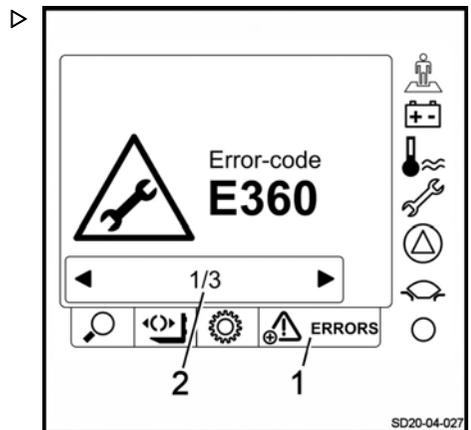


Using the display-operating unit

Start-up screen

In addition to the various menus and lights mentioned above, additional data is available:

- The **truck status** menu (1) displays the truck menu
- The **hourglass** icon (2) indicates the operating time of the truck
- The **clock** icon (3) indicates the time and date

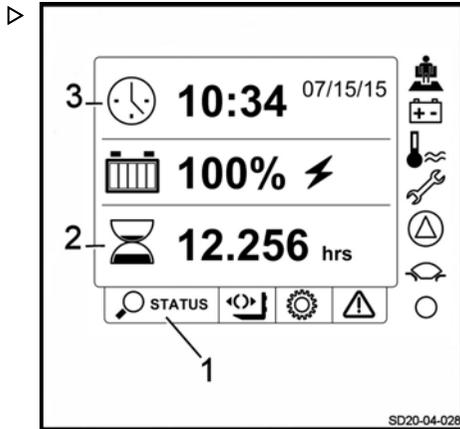

Driving safety guidelines

Behaviour when driving

Operators must obey the same rules within the plant as on the road. They must drive at speeds appropriate for the driving conditions.

Therefore, they must drive slowly:

- When cornering
- Through narrow passageways
- Through swing doors
- In low-visibility areas
- When the roadway is uneven

They must also:

- Always maintain a safe braking distance from vehicles or people in front of them
- Always maintain control of the truck
- Avoid stopping suddenly
- Avoid making fast U-turns
- Avoid overtaking in potentially hazardous or low visibility areas

Driving the truck while sitting on the dashboard is prohibited. The operator must be resting against the seat.

This truck is designed to be used as a pallet truck. Therefore:

- The truck must not be used as a stepladder
- The truck is not designed to transport people
- The operator must always remain inside the driver's compartment of the truck
- Stay in the safety area (working area defined by the manufacturer)
- Ensure the stability of the truck Do not exceed its maximum capacity

Use of a telephone or radio on the truck is permitted. However, do not use these devices when driving as they may distract you.

Take a test drive on an open surface.



NOTE

Safety shoes must be worn.


Driving

Driving

Defining directions

On a ride-on pallet truck, the conventional controls for the drive direction are:

- Forward travel (2): Opposite direction to the load arms/forklift operator direction
- Reverse travel (1): Direction of the load arms

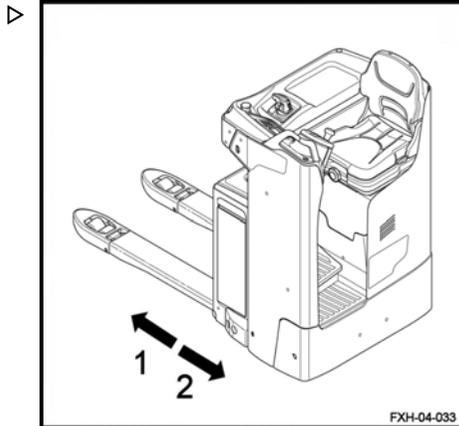

Operation of operator presence detection on the version without pedals

⚠ DANGER

Risk of serious injury

Always keep your body inside the driver's compartment while the truck is moving.

The truck is equipped with two operator presence detectors:


- The chair (1)
- The operator presence button on the adjustable floor (2)

These two components are truck safety devices.

To activate the operator presence detection, proceed as follows:

- Sit on the seat (1).
- Press the operator presence button (2).
Keep the pedal depressed before and whilst the truck is moving.

The truck controls are then available.

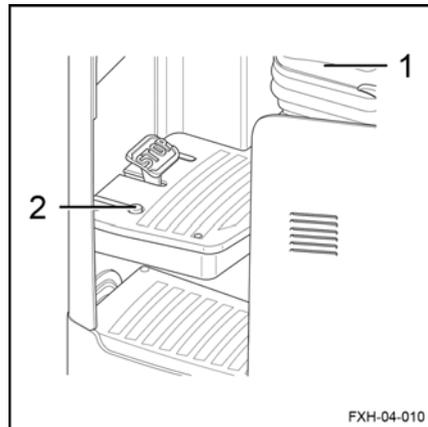

In reverse travel (load-arms direction), it is possible to leave the seat in the event of poor visibility. The truck then travels at 2 km/h. The forklift operator presence pedal must be kept depressed.

Before rising from the chair, it is essential to slow down the truck to a very low pace and to check the working environment.

WARNING

Risk of injury

Do not rise from the chair when the truck is travelling at full speed.

NOTE

Do not rise from the chair to slow down the truck.

If the forklift operator sits down again, the truck continues to travel at a limited speed. The drive switch must be released. When the forklift operator presses the drive switch, the truck returns to its normal speed.

CAUTION

Releasing the operator presence button

When the operator presence button is released when moving:

- The parking brake is activated
- All controls are available

CAUTION

Disabling of controls

When the operator leaves the seat, after a time delay:

- The parking brake is activated
- The controls are no longer available

Driving

Starting the truck

⚠ DANGER**Risk of sparks**

It is prohibited to use the truck with the battery hood open.

- Check that the battery hood is closed.
- Check that the battery is locked.

⚠ DANGER**Risk of serious injury**

Always keep your body inside the driver's compartment while the truck is moving.

**NOTE**

Check that no controls are activated before switching on the truck.


To start the truck, proceed as follows:

- Check that the battery is connected and locked and that the hood is closed correctly
- Step onto the truck.
- Sit on the seat and adjust it.
- Adjust the floor.
- Pull the emergency off switch (2)
- Turn the key. For models equipped with an electronic key, enter the 5-digit PIN to start the truck (3).

The display (4) switches on.

- Press the operator presence button or pedal (5) or (6) (depending on the version).
- Select the direction of travel (for the single-pedal version).
- Press the parking brake button to engage the parking brake (1).

The truck is now ready for use.

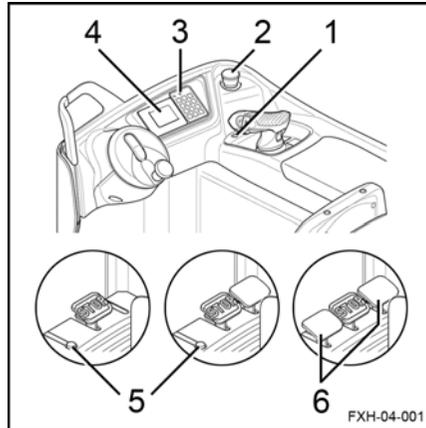

i NOTE

Always adjust your speed to suit the route, any dangers and the load. Use the truck on ground that has the correct surface and hardness.

Driving with the version without pedals**⚠ DANGER****Risk of serious injury**

Always keep your body inside the driver's compartment while the truck is moving.

⚠ WARNING

Be aware of the position of the drive wheel.

Slowly start the truck.

Check the position of the drive wheel on the display.

i NOTE

Always operate the joystick slowly, as the truck reacts immediately. Abrupt starts, braking or reversal of drive direction must be avoided at all costs.

i NOTE

The truck accelerates in proportion to the pressure exerted on the joystick.

Driving

The operator selects the direction of travel using the joystick. The joystick has two positions:


- Forward travel (1)
 - Reverse travel (2)
- Put the truck into service

Forward travel

- Push the joystick to the left (1) to travel forwards (in the opposite direction to the load arms)

Reverse travel

- Push the joystick to the right (2) to travel backwards (in the direction of the load arms)

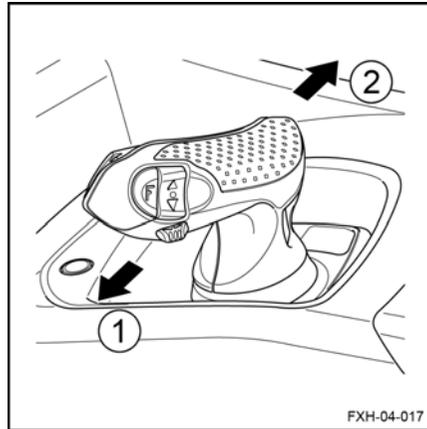

⚠ WARNING

Restricted visibility

During reverse travel, visibility may be restricted. Be very careful. Make sure that the path behind is clear before travelling in reverse.

Reversing the direction of travel

- Push the joystick to the left (1) or to the right (2).
- Push the joystick in the opposite direction.


The truck brakes progressively and then moves off in the opposite direction until the desired speed has been reached.

If the forklift operator has left their seat, the direction of travel cannot be reversed.

Steering

The steering wheel (1) allows precise, effortless guidance of the truck thanks to the electric power steering.

It is located on the left of the dashboard.

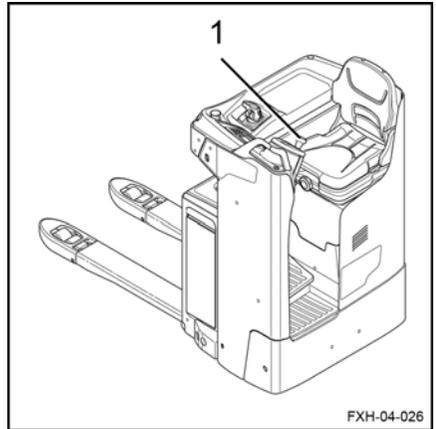

Turning direction

For forward travel (opposite to load arm direction):

- Turn the steering wheel clockwise to steer the truck to the right.
- Turn the steering wheel anti-clockwise to steer the truck to the left.

For reverse travel (in load arm direction):

- Turn the steering wheel clockwise to steer the truck to the left.
- Turn the steering wheel anti-clockwise to steer the truck to the right.



WARNING

Risk of incorrect operation

- Never use a truck with a faulty steering wheel.
- Always slow down before negotiating a tight corner. Approaching a tight corner too fast can cause the truck to overturn.

Driving


Horn

The horn is positioned on the rear side of the control module.

It is used:

- On routes where there is poor visibility
- At junctions
- In the event of immediate danger
- Press the button (1) on the joystick

The horn sounds.

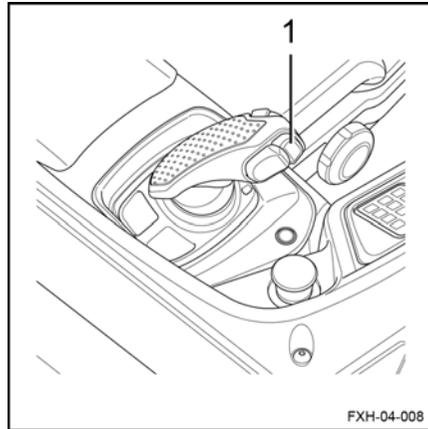

Braking on the version without pedals ▷

⚠ WARNING

The quality of the floor surface affects the braking distance of the truck.

This should be taken into consideration when driving.

i NOTE

Braking is progressive and increases as the brake pedal is depressed.

Braking using the brake pedal

- Push the joystick to move the truck forwards.
- Press the brake pedal (1).

The truck brakes progressively until the truck comes to a complete stop.

The driving controls are available.

Braking by releasing the joystick

⚠ DANGER

Do not rely on lift-off braking to stop the truck in an emergency.

Always use the brake pedal in an emergency and press the emergency off switch if necessary.

- Push the joystick to move the truck forwards.
- Release the joystick.

The truck brakes progressively until the truck comes to a complete stop.

The driving controls are available.

Braking by reversing the drive direction

- Push the joystick to move the truck forwards.
- Push the joystick in the opposite direction.

The truck brakes progressively and then moves off in the opposite direction until the desired speed has been reached.

The driving controls are available.



Driving

Progressive braking

The progressive brake is activated automatically if one of the following conditions is met:

- The operator presses the brake pedal (1)
- The operator releases the operator presence button or pedal
- The joystick is released
- The operator presses the emergency off switch
- The power supply is cut off

WARNING

Risk of the operator being thrown from the truck

Activating the emergency off switch causes the truck to stop suddenly.

It should only be used in the event of an emergency and not for braking the truck under normal circumstances.



NOTE

Also ensure that the stabiliser wheels operate correctly. This influences braking effectiveness.

Parking brake

Using the parking brake

Different conditions can cause the truck to stop and apply or lock the parking brake.

When the truck is in motion, it decelerates until it comes to a stop and then the brake is applied or locked (2).

The brake is applied (indicator flashing) (2) if one of the following conditions is met:

- The operator releases the traction control
- The operator presses the brake pedal
- The operator releases the operator presence pedal
- In forward travel, the forklift operator leaves the seat for more than 1 second while keeping the presence pedal pressed down

The brake is locked (indicator permanently on) (2) if one of the following conditions is met:


- The forklift operator presses the parking brake button (1)
- The forklift operator leaves the seat and releases the presence pedal and the traction controller at the same time

When the truck is stopped and the brake is applied (indicator flashing) (2), the brake switches automatically to locked status (indicator permanently on) (2) if one of the following conditions is met:

- The operator leaves the seat
- The presence pedal is released
- After a period of time has elapsed (3 s by default)

NOTE


After a power failure or an emergency stop (emergency stop button), the truck still restarts with a brake in the locked status (indicator permanently on) (2).

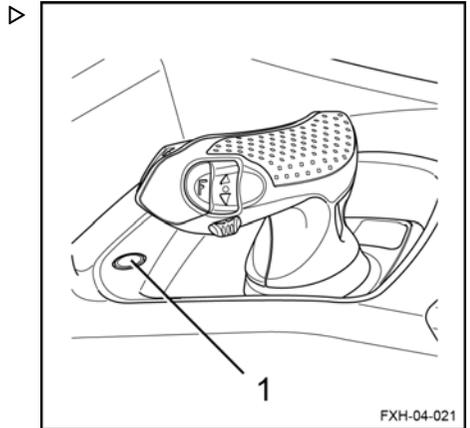

Driving

Parking brake status

The parking brake indicator light (2) indicates the status of the parking brake.

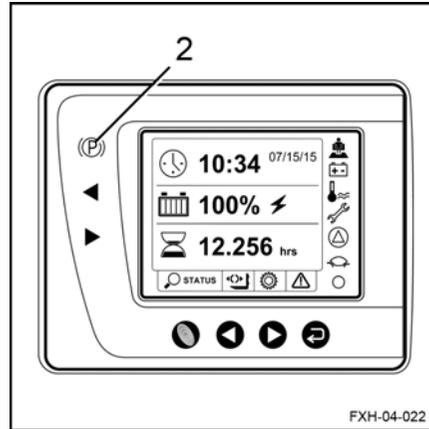

Parking brake status indicator (2)	Permanently on	Flashing	Off
Parking brake status	Engaged	Applied	Released
Truck status	Stationary	Stationary	Moving
Status of the traction controllers	Unavailable	Available	Available

Parking brake release



NOTE

A power failure or an emergency stop causes immediate application of the parking brake (even if the truck is moving).

- Put the truck into service

The parking brake is in locked status (indicator permanently on) (2):

If the truck is a dual-pedal version

- Press the parking brake button (1).
- Press one of the accelerator pedals to start the truck moving.

If the truck is a single pedal version

- Press the operator presence pedal.
- Select the direction of travel.
- Press the parking brake button (1).

- Press the accelerator pedal to start the truck moving.

If the truck is a version without a pedal

- Press the operator presence pedal.
- Press the parking brake button (1).
- Use the joystick to start the truck moving.

Drive program

The indicator light (1) is on during operation of the truck. The shape of the indicator light indicates the selected program.

The truck is equipped with three different drive programs:

- Hare mode (3)
- BlueQ mode (4)
- Tortoise mode (2)

NOTE

When the operator restarts the truck, the last mode selected is automatically activated.

NOTE

The drive program is instantly changed. If the operator changes mode while driving the truck, he must remain vigilant.

Hare mode


When Hare mode is selected on the screen, the truck operates at its maximum performance.

Blue Q mode

Selecting Blue Q mode allows you to slightly reduce the performance of the truck:

- The travel speed of the truck is reduced (70% of maximum speed)
- The speed of lifting and lowering the forks is reduced (90% of maximum speed)

This mode allows you to save battery.

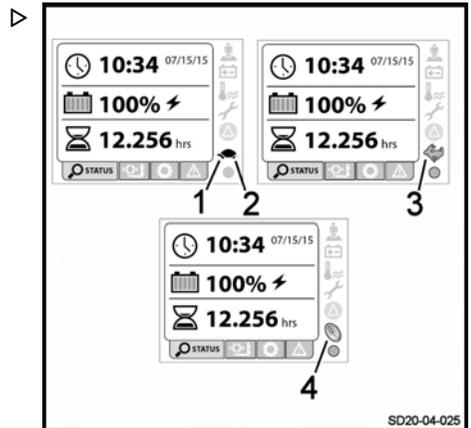

Driving

Tortoise mode

Selecting Tortoise mode allows you to reduce the performance of the truck:

- The travel speed of the truck is reduced to 6 km/h
- The speed of lifting and lowering the forks is considerably reduced

The different speeds can be adjusted. Contact the After-Sales Service Centre to change these.

Using the truck on a slope

NOTE

Misuse of the truck on a slope is strictly prohibited. It places particular stress on the traction motor, brakes and battery.

CAUTION

Risk of tipping

Slopes must be approached with great caution:

- Avoid slopes with a gradient greater than that specified in the datasheet for the truck.
- Make sure that the ground is clean, has a non-slip surface and that the route is clear.
- Always drive at a very low speed and brake gradually.


Travelling up slopes

Laden

Always travel up slopes in reverse. The load faces uphill.

Unladen

It is recommended that you go up a slope forwards.

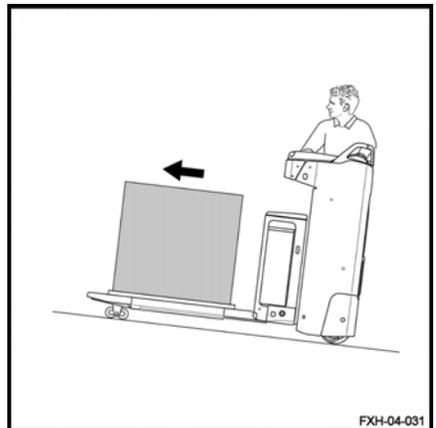

Driving

Travelling down slopes

Laden

Always travel down slopes forwards. The load faces uphill.

Unladen

It is recommended that you go down a slope forwards.

⚠ DANGER

Danger of death and/or risk of serious damage to equipment


Never park the truck on a slope. Never make a U-turn or take shortcuts on a slope.

On a slope, the operator must drive more slowly.

⚠ WARNING

Risk of serious injury and/or serious damage to equipment

Driving on slopes steeper than 10% is prohibited due to braking capacity and stability. The load being transported could tip over.

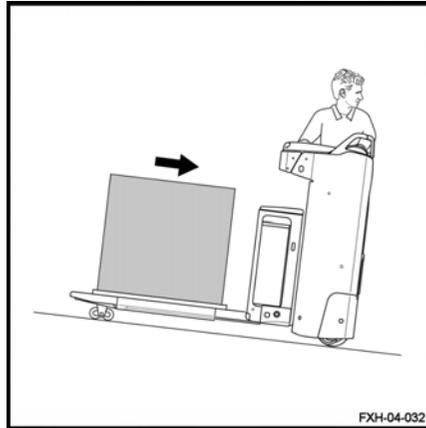

Starting on a slope

Proceed as follows:

- Move the drive direction controls in the desired direction.
- Release the drive direction controls or the operator detection pedal to apply the parking brake.

Driving: Single-pedal option

Specific features of the single-pedal option

The operation of a truck equipped with an accelerator pedal is identical to that of a truck without an accelerator pedal. The differences in operation relate to the following aspects:

- The operator presence detection devices
- Driving
- Reversing the direction of travel
- Braking

These aspects are described in the sections below.

Operation of operator presence detection with the single-pedal option

⚠ DANGER

Risk of serious injury

Always keep your body inside the driver's compartment while the truck is moving.

The truck is equipped with two operator presence detectors:

- The chair (1)
- The operator presence button on the floor (2)


These two components are truck safety devices.

To activate the operator presence detection, proceed as follows:

- Sit on the seat (1).
- Press the operator presence button (2).
Keep the pedal depressed before and whilst the truck is moving.

The truck controls are available.

In reverse travel (load-arms direction), it is possible to leave the seat in the event of poor visibility. The truck then travels at 2 km/h. The forklift operator presence pedal must be kept depressed.

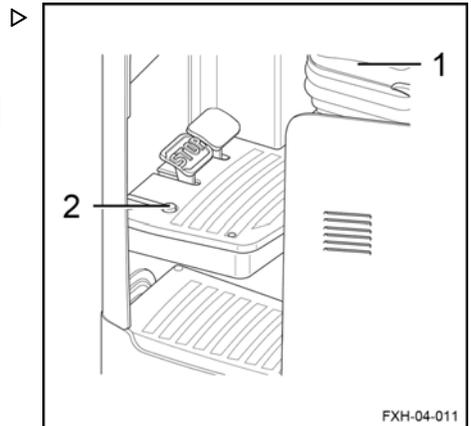

Driving: Single-pedal option

Before rising from the chair, it is essential to slow down the truck to a very low pace and to check the working environment.

WARNING

Risk of injury

Do not rise from the chair when the truck is travelling at full speed.



NOTE

Do not rise from the chair to slow down the truck.

If the forklift operator sits down again, the truck continues to travel at a limited speed. The drive switch must be released. When the forklift operator presses the drive switch, the truck returns to its normal speed.

CAUTION

Releasing the operator presence button

When the operator presence button is released when moving:

- The parking brake is activated
 - All controls are available
-

CAUTION

Disabling of controls

When the operator leaves the seat, after a time delay:

- The parking brake is activated
 - The controls are no longer available
-

Driving with the single-pedal option

DANGER

Risk of serious injury

Always keep your body inside the driver's compartment while the truck is moving.

⚠ WARNING

- Be aware of the position of the drive wheel.
- Slowly start the truck.
- Check the position of the drive wheel on the display.

i NOTE

Always depress the pedal slowly, as the truck reacts immediately. Abrupt starts or braking, or sudden reversal of the drive direction, must be avoided at all costs.

i NOTE

The truck accelerates in proportion to the pressure exerted on the accelerator pedal.

The operator selects the direction of travel using the drive switch located on the joystick:

- Forward travel (1)
 - Reverse travel (2)
- Put the truck into service

Forward travel

- Push the drive switch down (1) to travel forwards (in the opposite direction to the load arms).
- Press the accelerator pedal (4).


Reverse travel

- Push the drive switch up (2) to travel backwards (in the direction of the load arms).
- Press the accelerator pedal (4).

⚠ WARNING

Restricted visibility

During reverse travel, visibility may be restricted. Be very careful. Make sure that the path behind is clear before travelling in reverse.

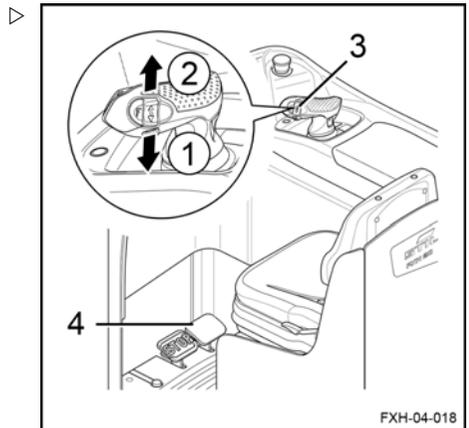**Reversing the direction of travel**

- Keep the accelerator pedal (4) depressed.
- Push the drive switch down (1) or up (2).
- Push the drive switch (3) in the opposite direction.


Driving: Single-pedal option

The truck brakes progressively and then moves off in the opposite direction until the desired speed has been reached.

If the forklift operator has left their seat, the direction of travel cannot be reversed.

Drive direction indicator

On the display, the drive direction indicator light (1) or (2) lights up to indicate the direction of travel.

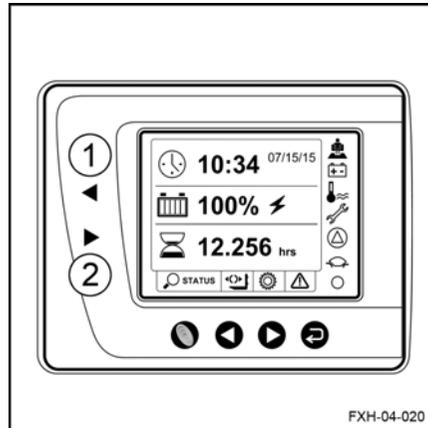

Braking with the single-pedal option



⚠ WARNING

The quality of the floor surface affects the braking distance of the truck.

This should be taken into consideration when driving.



NOTE


Braking is progressive and increases as the brake pedal is depressed.

Braking using the brake pedal

- Push the drive switch and press the accelerator pedal (2) to move the truck forwards.
- Press the brake pedal (1).

The truck brakes progressively until the truck comes to a complete stop.

The driving controls are available.

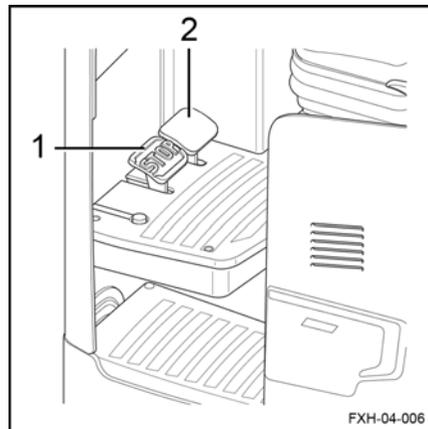

⚠ DANGER

Do not rely on lift-off braking to stop the truck in an emergency.

Always use the brake pedal in an emergency and press the emergency off switch if necessary.

Braking by releasing the accelerator pedal

- Push the drive switch and press the accelerator pedal (2) to move the truck forwards.
- Release the accelerator pedal (2).

The truck brakes progressively until the truck comes to a complete stop.

The driving controls are available.

Braking by reversing the drive direction

- Push the drive switch and press the accelerator pedal (2) to move the truck forwards.
- Push the drive switch in the opposite direction.
- Keep the accelerator pedal (2) depressed.

The truck brakes progressively and then moves off in the opposite direction until the desired speed has been reached.

The driving controls are available.

Progressive braking

The progressive brake is activated automatically if one of the following conditions is met:

- The operator presses the brake pedal (1)
- The operator releases the operator presence button
- The accelerator pedal is released
- The operator presses the emergency off switch
- The power supply is cut off

⚠ WARNING

Risk of the operator being thrown from the truck

Activating the emergency off switch causes the truck to stop suddenly.

It should only be used in the event of an emergency and not for braking the truck under normal circumstances.

Driving: Single-pedal option



NOTE

Also ensure that the stabiliser wheels operate correctly. This influences braking effectiveness.

Driving: Dual-pedal option

Specific features of the dual-pedal option

The operation of a truck equipped with an accelerator pedal is identical to that of a truck without an accelerator pedal. The differences in operation relate to the following aspects:

- The operator presence detection devices
- Driving
- Reversing the direction of travel
- Braking

These aspects are described in the sections below.

Operation of operator presence detection with the dual-pedal option

⚠ DANGER

Risk of serious injury

Always keep your body inside the driver's compartment while the truck is moving.

The truck is equipped with two types of operator presence detection:

- The seat (1)
- The accelerator pedals (2) or (3) are used as operator presence pedals


These two components are truck safety devices.

To activate the operator presence detection, proceed as follows:

- Sit on the seat (1).
- Press and hold the accelerator pedal (2) or (3) before and whilst the truck is moving.

All of the truck controls are then available.

In reverse travel (load-arms direction), it is possible to leave the seat in the event of poor visibility. The truck then travels at 2 km/h. The forklift operator presence pedal must be kept depressed.

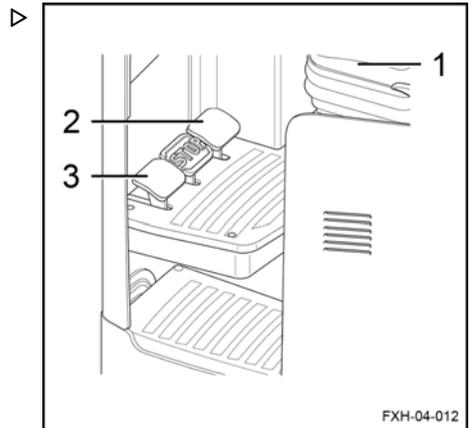

Driving: Dual-pedal option

Before rising from the chair, it is essential to slow down the truck to a very low pace and to check the working environment.

WARNING

Risk of injury

Do not rise from the chair when the truck is travelling at full speed.



NOTE

Do not rise from the chair to slow down the truck.

If the forklift operator sits down again, the truck continues to travel at a limited speed. The drive switch must be released. When the forklift operator presses the drive switch, the truck returns to its normal speed.

CAUTION

Releasing the operator presence pedal

When the operator presence pedal is released when moving:

- The parking brake is activated
 - All controls are available
-

CAUTION

Disabling of controls

When the operator leaves the seat, after a time delay:

- The parking brake is activated
 - The controls are no longer available
-

Driving with the dual-pedal option

DANGER

Risk of serious injury

Always keep your body inside the driver's compartment while the truck is moving.

⚠ WARNING

Be aware of the position of the drive wheel.
 Slowly start the truck.
 Check the position of the drive wheel on the display.

i NOTE

Always depress the pedal slowly, as the truck reacts immediately. Abrupt starts or braking, or sudden reversal of the drive direction, must be avoided at all costs.

i NOTE

The truck accelerates in proportion to the pressure exerted on the accelerator pedal.

The operator selects the direction of travel using the accelerator pedals:

- Forward travel (1)
- Reverse travel (2)

Forward travel

- Press the accelerator pedal (1) to travel forwards (in the opposite direction to the load arms).

Reverse travel

- Press the accelerator pedal (2) to travel backwards (in the direction of the load arms).



FXH-04-019

⚠ WARNING

Restricted visibility

During reverse travel, visibility may be restricted. Be very careful. Make sure that the path behind is clear before travelling in reverse.

Reversing the direction of travel

- Press one of the accelerator pedals (1) or (2).
- Release the pedal.
- Press the other accelerator pedal.

Driving: Dual-pedal option

The truck brakes progressively and then moves off in the opposite direction until the required speed has been reached.

If the forklift operator has left their seat, the direction of travel cannot be reversed.

Braking with the dual-pedal option ▷

⚠ WARNING

The quality of the floor surface affects the braking distance of the truck.

This should be taken into consideration when driving.



NOTE

Braking is progressive and increases as the brake pedal is depressed.

Braking using the brake pedal

- Press the accelerator pedal (2) or (3) to move the truck forwards.
- Release the accelerator pedal.
- Press the brake pedal (1).

The truck brakes progressively until the truck comes to a complete stop.

The driving controls are available.

⚠ DANGER

Do not rely on lift-off braking to stop the truck in an emergency.

Always use the brake pedal in an emergency and press the emergency off switch if necessary.

Braking by releasing the forwards pedal

- Press the accelerator pedal (2) or (3) to move the truck forwards.
- Release the accelerator pedal.

The truck brakes progressively until the truck comes to a complete stop.

The driving controls are available.

Braking by reversing the drive direction



- Press one of the accelerator pedals (2) or (3).
- Release the pedal.
- Press the other accelerator pedal.

The truck brakes progressively and then moves off in the opposite direction until the desired speed has been reached.

Progressive braking

The progressive brake is activated automatically if one of the following conditions is met:

- The operator presses the brake pedal
- The accelerator pedal is released
- The operator presses the emergency off switch
- The power supply is cut off

WARNING

Risk of the operator being thrown from the truck

Activating the emergency off switch causes the truck to stop suddenly.

It should only be used in the event of an emergency and not for braking the truck under normal circumstances.

NOTE

Also ensure that the stabiliser wheels operate correctly. This adjustment influences braking effectiveness.

Operating the FleetManager™ option

Operating the FleetManager™ option

Description of the FleetManager option

The FleetManager option allows you to control access to the truck. The option is a fleet management system.

You can access the system:

- Either by using a keypad
- Or by using a reading device for a transponder or an RFID card

The fleet manager sets the access details via the web interface. This affects the transponder cards or PIN codes for the corresponding trucks. It is possible to change the amount of time for which the access authorisation is valid.

Software is also available.

Additional options:

- Shock sensor
- Tools for wireless data management:
 - ▶ GSM⁽²⁾GPRS⁽¹⁾ module with antenna

The options available on the truck are:

- Access control
- Access control and shock sensor
- Access control and GPRS module
- Access control, shock sensor and GPRS module

⁽¹⁾ GPRS: General Packet Radio Service

⁽²⁾ GSM: Global System for Mobile Communication

Shock sensor

This sensor allows you to record the shocks received by the truck.

If the truck receives a shock, it is possible to configure a speed reduction.

The fleet manager is the only person who is able to change certain parameters.



NOTE

Replace the sensor if it is faulty.

GSMGPRS module

The module consists of a GSM modem and an antenna.

The module allows you to:

- Access truck information remotely
- Use geolocation

The data is stored on a server.

Data is transmitted by Bluetooth (default) or by GSM module (optional).

Commissioning a truck equipped with the FleetManager™ option

Commissioning a truck equipped with a keypad or an electronic key ▷

- Turn the switch key to start the truck.
- Enter the PIN code on the keypad. The PIN code consists of five to eight digits.


By default, no PIN code is given as a factory setting.

If the PIN code is correct, the LED (1) is not lit. The LED (2) flashes slowly at two-second intervals (green colour).

No acoustic signal sounds.

- Press the Enter key (3) to confirm.

The truck is now ready for use.

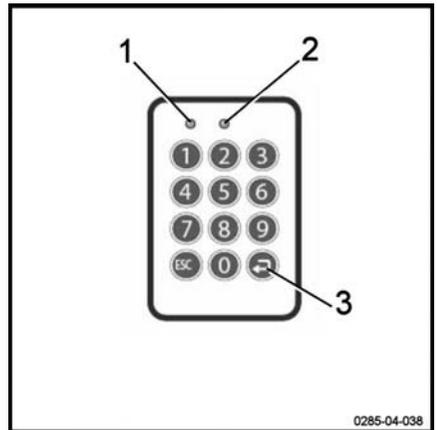

NOTE

In the configuration, the fleet manager can specify that the operator must enter a preliminary code when logging in. The operator can then assess the state of the truck.


Commissioning a truck equipped with an RFID reading device ▷

- Turn the switch key to start the truck.
- Place the RFID transponder card or the RFID transponder (4) in front of the reading device (3).

If the card is correct, the LED (1) is not lit. The LED (2) flashes slowly at two-second intervals (green colour).

Two acoustic signals sound.

The truck is now ready for use.

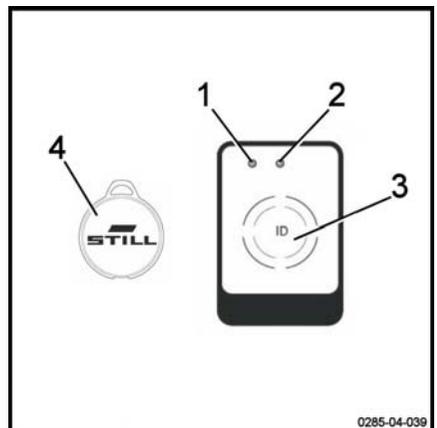

Operating the FleetManager™ option

FleetManager™ option: Colour code for the LEDs

The LEDs can have different statuses and different colours. Below is the list of the most common messages and their meanings.

Malfunction		Signal transmitter	Cause	Solution
LED status				
LED 1	LED 2			
Lit continuously Red colour	Off	A long acoustic signal sounds	Reading device variant: no valid access authorisation	Generate a valid access authorisation using the interface
			Keypad variant: no valid access authorisation for the PIN code entered	
			Keypad variant: PIN code entered incorrect or not confirmed using the Enter key	Re-enter the PIN code
Lit continuously Red colour	Flashes once Green colour	A long acoustic signal sounds	The operator has been granted access authorisation. But the period of validity has expired.	Use the interface to enter a new period of validity
			The date of the truck is incorrect	
Flashes quickly Yellow colour	Lit continuously Green colour		Memory is 80% full	Clear the memory
Flashes quickly Red colour	Flashes quickly Red colour	A long acoustic signal sounds upon activation	There are several possible causes: - Reading device or keypad not accessible - GPRS module not accessible - Built-in rechargeable battery flat - Memory full	Contact the After-Sales Service Centre

Malfunction		Signal transmitter	Cause	Solution
LED status				
LED 1	LED 2			
Flashes quickly Red colour	Lit continuously Green colour		A shock has occurred	Reset the shock
Flashes quickly Blue colour	Off		The truck is connected via a Bluetooth link. The operating data is being read. The reading process can take up to five minutes.	The truck is switched on but is not moving. Wait for all of the relevant data to be read. As soon as the LEDs change to a different status, resume work.

Operating the FleetManager™ option

Disconnecting a truck equipped with the FleetManager™ option



NOTE

Operators must not log off intentionally while driving.

⚠ WARNING

Access to the truck must be disabled.
Unauthorised users are not allowed to use the truck.

Disconnecting a truck equipped with a keypad or electronic key ▷

- Park the truck in a safe place.
- Press the button (3) to log off. Keep the button pressed in.


No LEDs light up. A long acoustic signal sounds.

The LED (1) lights up for a second (red colour). The LED (2) is not lit. A long acoustic signal sounds.

The LED (1) is no longer lit. The LED (2) flashes slowly at two-second intervals (green colour). No acoustic signal sounds.

The truck is disabled.

- Turn the switch key to the off position to switch the truck off completely.

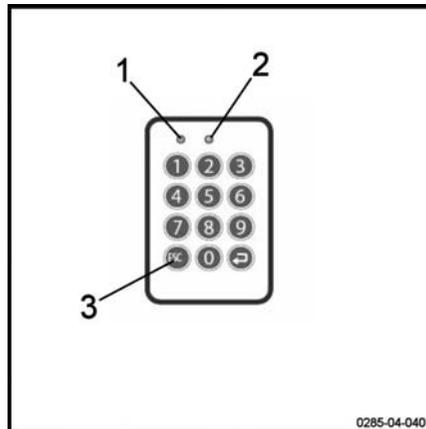

Disconnecting a truck equipped with an RFID reading device ▷


- Park the truck in a safe place.
- Briefly place the RFID card or the RFID transponder (4) in front of the reading device (3).

The LED (1) lights up for a second (red colour). The LED (2) is not lit. A long acoustic signal sounds.

The LED (1) is no longer lit. The LED (2) flashes slowly at two-second intervals (green colour). No acoustic signal sounds.

The truck is disabled.

- Turn the switch key to the off position to switch the truck off completely.

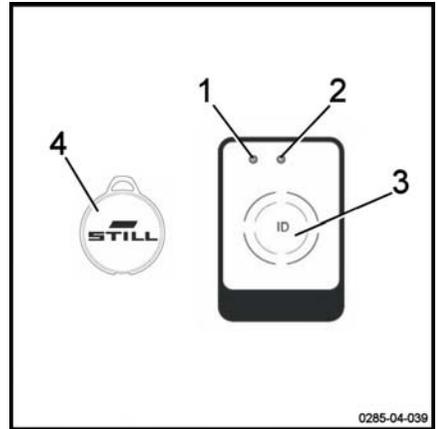

Transporting loads

Transporting loads


Load handling safety rules

⚠ WARNING

Carefully observe the following instructions before picking up loads. Never touch or stand on moving parts of the truck (e.g. lifting device, pushing devices, work installations or devices for picking up loads).

⚠ WARNING

Take care not to trap hands or feet when operating the truck.

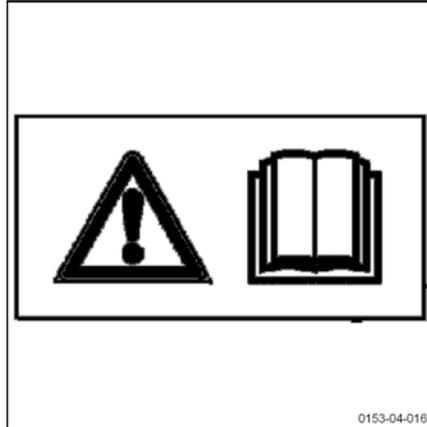


Grabbing a loading unit

Watch out for the following elements:

- the load must be well-balanced and centred correctly between the fork arms
- the fork arms must be sufficiently slid underneath the load to guarantee stability.

The load must not protrude too far over the fork arms, nor should the fork arms protrude too far out from the load.


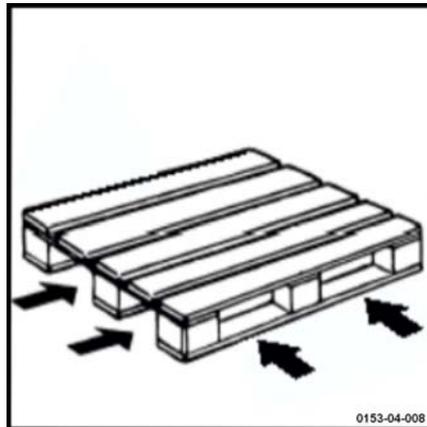


Transporting pallets or other containers

As a general rule, loading units must be transported one by one (e.g. pallets). Transporting several loading units at a time is only authorised:

- when the safety preconditions are fulfilled.
- by order of the monitoring agent.

The forklift operator must ensure that the loading unit is properly packaged. He must only move loading units that have been carefully prepared and that meet the safety requirements.

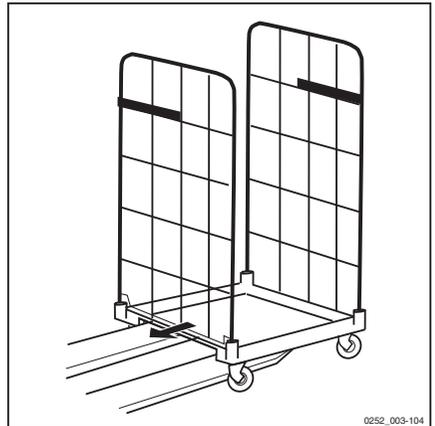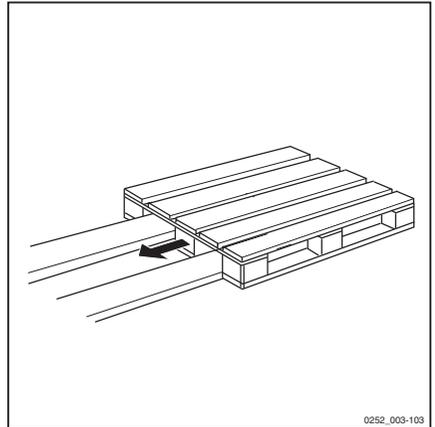

Transporting loads

Lift control elements

⚠ WARNING

Risk of injury

The safety instructions must be strictly adhered to.

Do not touch or stand on moving parts (e.g. lifting device, pushing devices, work installations, load lifting devices).

The lift control button has two positions:

- Lifting the load arms (1)
 - Lowering the load arms (2)
- Put the truck into service.

Lifting the load arms


- Press the button at position (1).

When the button is released, the load arms stabilise at the required height.

Lowering the load arms

- Press the button at position (2).

When the control is released, the load arms stabilise at the required height.

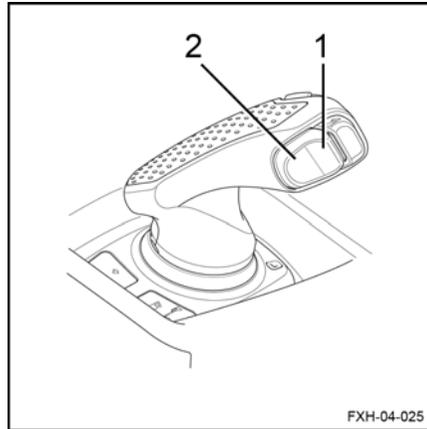

Handling a single load

Before picking up a load

Ensure that the load weight does not exceed the capacity of the truck.

- Refer to the nominal capacity specified on the truck's capacity label
- You must also make sure that the load is stable, well-balanced, attached firmly and centred between the fork arms in order to avoid dropping any part of the load
- Check that the width of the load is compatible with the width of the fork arms
- Check that the load is not damaged

CAUTION

Risk of injury

Safety shoes must be worn.

Transporting people is strictly prohibited.

DANGER

Risk of tipping

It is essential to slow down when approaching a corner or on wet ground.

CAUTION

Arrangement of loads

Do not touch nearby loads or loads positioned at the side or in front of the load being handled.

Arrange the loads with a small space between them to prevent them hooking onto one another.

Picking up a load from the ground


- Use the initial lift to raise a load of up to 2000 kg several centimetres from the ground.

Transporting loads

Transporting a load

Observe the following recommendations:

- Drive forwards for optimum visibility
- Travel up or down slopes with the load uphill Do not travel across the slope or make a U-turn
- Reverse travel is used for setting down the load Adjust your speed, as the position of the forklift operator is now less comfortable
- Do not drive with an unstable load
- If visibility is poor, let someone guide you
- Raise the forks slightly in order to pass obstacles
- Be careful of low passageways, low doorways, scaffolding, pipes etc.
- Check that the width of the load is not greater than the width of the aisle

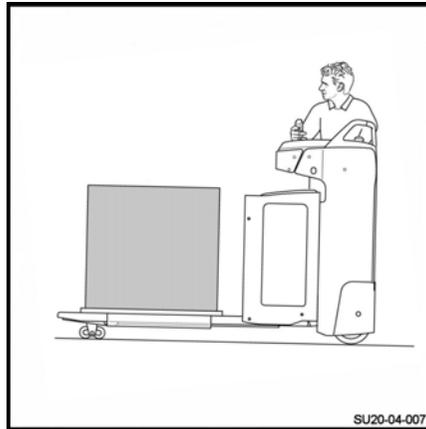

Setting a load down on the ground

Proceed as follows:

- Drive the truck to the required location.
- Carefully move the load into the unloading zone.
- Lower the load until the fork arms are freed.
- Withdraw the machine in a straight line.
- Raise the fork arms again several centimetres.

CAUTION

Risk of falling

Do not touch nearby loads or loads positioned behind the truck.

CAUTION

Risk of accident

Before you set down the load, ensure that no one is around the truck or the load.

Cold store use

Cold store usage (optional)

⚠ CAUTION

Standard trucks risk being subject to significant damage if used in extreme conditions.

Only trucks with the Cold Store option may be used inside cold storage. Specific oil designed for cold stores must be used.

These trucks are identified by their Cold Store label.

Area of Use

Trucks with the Cold Store option may be used in two different areas:

- **operating range 1:** the truck can operate at a temperature of $-5\text{ }^{\circ}\text{C}$ and, for short periods, at a temperature of $-10\text{ }^{\circ}\text{C}$. It must be parked outside of the cold store.
- **operating range 2 (Entry / Exit applications):** the truck must be used alternately inside and outside of the cold store. It can withstand temperatures between $-30\text{ }^{\circ}\text{C}$ and $+45\text{ }^{\circ}\text{C}$. Specific rules should be followed so as not to damage the truck and to avoid the occurrence of streaming (see the following paragraph). The truck is parked outside of the cold store.

Precautions for Use

The difference in temperature between the cold store and the room temperature zone may result in the formation of condensation water.

This water can freeze when the truck goes back into the cold store and jam the moving parts of the truck.

Streaming occurs if the truck remains outside of the cold store for more than ten minutes. Therefore, it is essential to leave the truck outside of the cold store for 30 minutes so that the condensation disappears.



Cold store use

DANGER

If the condensation freezes in the cold store, it is prohibited to operate the jammed parts.

This could cause permanent damage to the truck.

Parking

The truck must be parked outside of the cold store.

Parking inside the cold store could cause serious damage to the electrical and mechanical equipment (seals, hoses, rubber and synthetic parts).

CAUTION

Do not leave discharged or unused batteries in the cold store.

They could be permanently damaged.

Handling the battery

Battery type

Trucks can be fitted with different types of battery. Comply with the information indicated on your battery's type plate, as well as with its features.

WARNING

The weight and size of the battery influence the stability of the truck.

The new battery must weigh the same as the old one. Do not remove extra weight or change its position.

CAUTION

Be careful not to damage any wiring when replacing the battery.

Order picking

Maintenance personnel

The battery must be replaced by specially trained personnel. Personnel must follow the manufacturer's instructions for the battery, the charger and the truck.

It is also necessary to follow the battery maintenance instructions.

Fire protection measures



WARNING

Do not smoke or create a flame when handling batteries. There must be no combustible material or tools that produce sparks within a minimum radius of 2 m around the truck and the battery charger.

The work area must be well ventilated. Fire extinguishers must be provided and located near the work area.

Handling the battery

Parking the truck securely


When the battery is being worked on, the truck must be parked safely. The truck can only be restarted when the covers and connectors have been put back in the operating position.

Opening and closing the battery hood

Opening the battery hood

To open the battery hood:

- Immobilise the truck.
- Lower the load arms.
- Switch off the ignition (key or electronic key).
- Press the emergency off switch.
- Lift the hood (1) using the handle designed for this purpose.

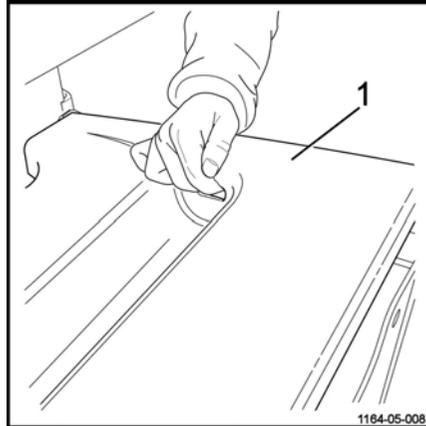

Closing the battery hood

To close the battery hood:

⚠ WARNING

Risk of trapping fingers

When closing the battery hood, correctly position your fingers to avoid any risk of them being trapped.

- Close the hood (1).
- Ensure that the battery hood is closed securely.

⚠ CAUTION

Risk of sparks

Never drive with the hood open or incorrectly closed.

Charging the battery using an external charger

⚠ CAUTION

Deep discharging may damage the battery.

- Charge the battery immediately
-
- Park the truck safely
 - Before charging, check the condition of the battery cable and the charger cable. Replace them if necessary
 - Open the hood and leave it open
 - Remove the battery handle connector (1) from the truck plug (2)
 - Connect the battery connector to the wall-mounted connector

⚠ WARNING

Electrical risk

Only unplug the battery connector from the battery charger when both the battery charger and the truck are switched off.

i NOTE

Follow the instructions provided by the manufacturer of the battery and the battery charger (equalising charge).

⚠ WARNING

Risk of damage, short circuit or explosion.


Do not place any metal objects or tools on the battery.

Smoking is prohibited.

⚠ WARNING

The electrolyte (diluted sulphuric acid) is toxic and very caustic.

Follow the safety regulations when handling battery acid.

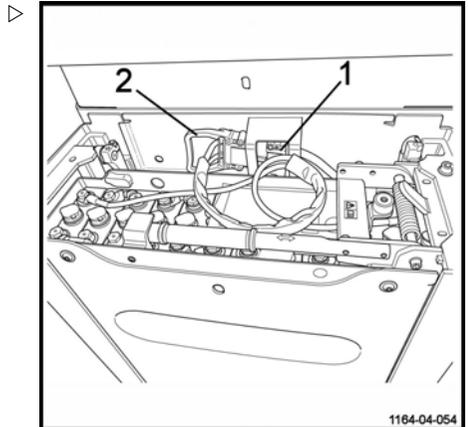

Handling the battery

WARNING

Explosive gases are generated during battery charging.

- Make sure that the area is well-ventilated
 - Make sure that the battery hood remains open for the entire time the battery is charging
-

Changing the side access battery

⚠ DANGER

Risk of trapping fingers

It is advisable to wear gloves when changing the battery.

⚠ WARNING

Risk of injury


Safety shoes must be worn when changing the battery.

Before handling, ensure that there is nobody around the truck.

To remove the battery, we recommend that you use a fixed roller frame or a truck with extraction rollers (fitted with rollers) for easier handling of the battery.


To change the battery, proceed as follows:

- Immobilise the truck
- Lower the load arms.
- Switch off the ignition and remove the key.
- Press in the emergency off switch.
- Open the battery hood.
- Unclip the hood from the fixed screw (1). Place it onto the load arms.
- Disconnect the battery connector located under the dashboard.

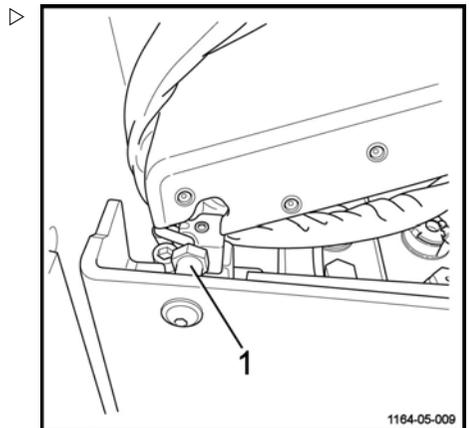


Handling the battery


- Place the connector on the battery cells.
- Position the truck with extraction rollers or the roller frame (4) in the upright position next to the battery compartment on level ground.

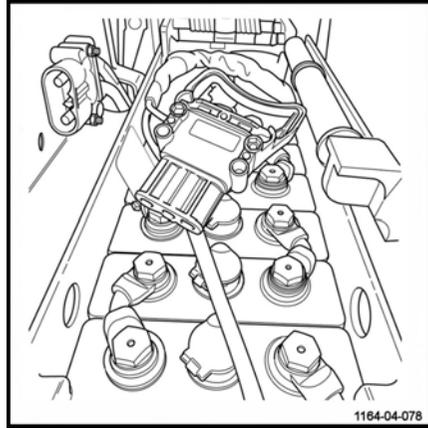


- Operate and pull the locking handle (2) in the direction indicated by the arrow.

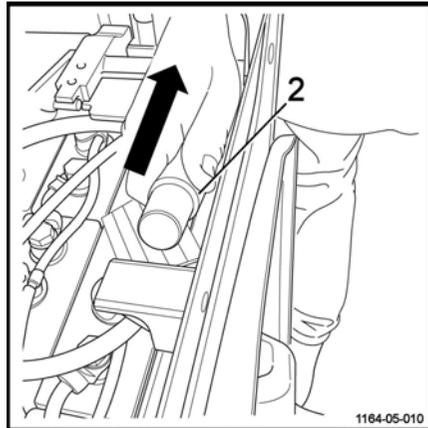

- Lift the locking bar (3) until the battery is freed.

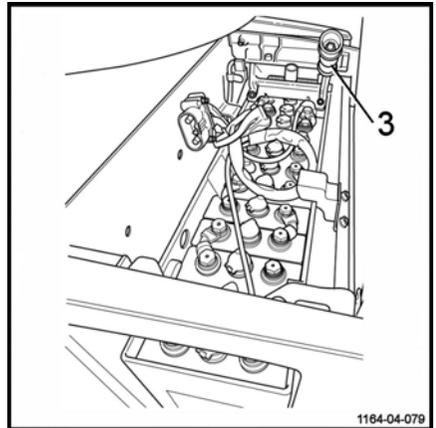

- Pull the battery onto the truck with extraction rollers or the roller frame.
- Replace the battery. Remove the discharged battery and position a charged battery on the roller frame.
- Position the truck with extraction rollers or the roller frame (4) in the upright position next to the battery compartment.

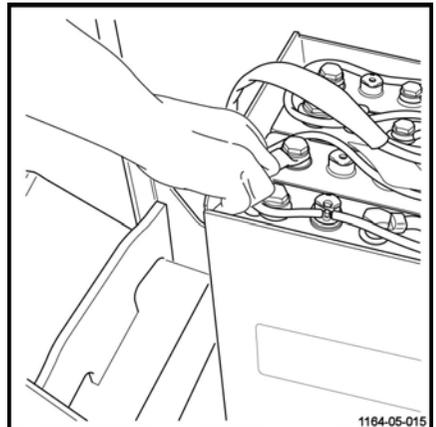

Handling the battery

- Carefully push the battery into the compartment. ▷

⚠ DANGER


Risk of trapping fingers

Push the battery from the rear side (A) of the battery. Take care not to trap your fingers by pushing from the top or the side of the battery.


⚠ DANGER

Risk of injury

The battery is correctly positioned but is not yet locked.

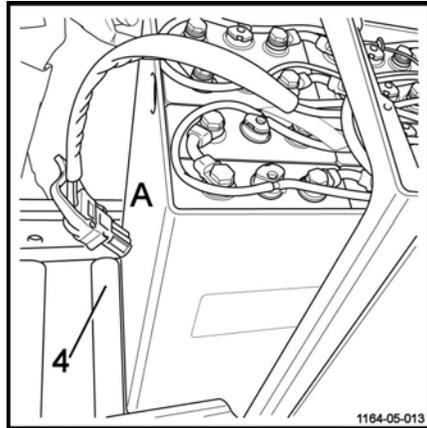

- Push it down to the end of the compartment. ▷

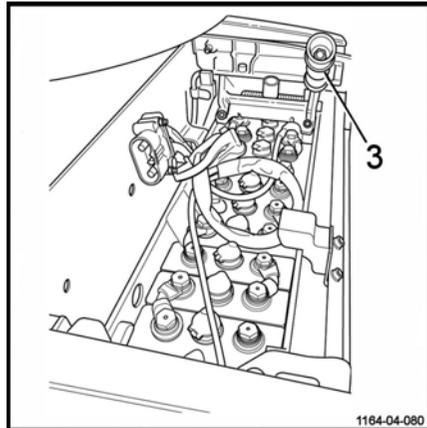


- Lower and lock the handle (2) of the locking bar (3) in the direction indicated by the arrow. The locking bar must be horizontal and must be right up against the stop (5).

⚠ CAUTION

Risk of locking the battery incorrectly

The locking bar should not in any circumstances be positioned under or on top of the stop. It must be positioned against the stop.

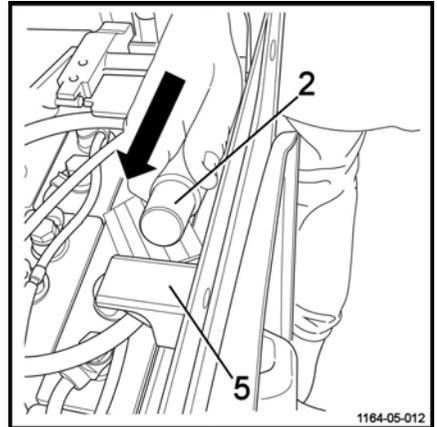


- Reconnect the battery connector.
- Refit the battery hood.
- Return the truck to service.

⚠ WARNING

Risk of injury

Before restarting the truck, ensure that the battery is correctly installed. Check that the battery is locked and that the battery hood is closed.

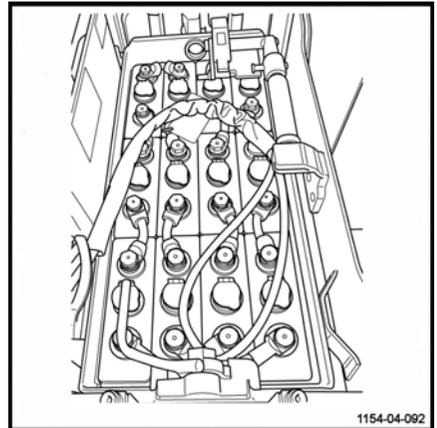

Handling the truck in an emergency

Handling the truck in an emergency

Truck towing procedure

It is not possible to tow the truck with no electrical function. The electromagnetic brake remains in the closed position.

Truck towing is authorised with a rigid connection (tow bar) if the truck to be towed can no longer be braked. Check that the towing vehicle is sufficiently powerful to pull and brake the truck being towed.

Moving with no battery



NOTE

In the event of an electrical fault or no battery, it is possible to unlock the brake manually.


⚠ CAUTION

This procedure must be carried out by authorised personnel.

- Unload the fork arms, then disconnect the battery. ▷
- Remove the engine cover.
- Two M5 X 35 screws (1) are required.
- Screw the screws (1) to the brake (2) in the holes (3). The brake is then unlocked.

⚠ CAUTION

The truck must only be towed at low speeds.

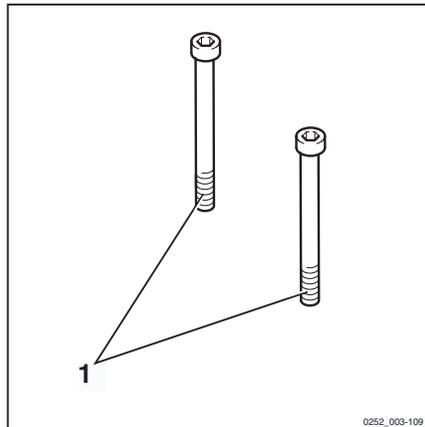


0252_003-109

Handling the truck in an emergency

- After towing, chock the truck to prevent it from moving.
- To re-establish brake operation, unscrew and remove the two screws (1).
- Refit the covers.

⚠ WARNING

It is essential that the covers are correctly refitted before the machine is used.

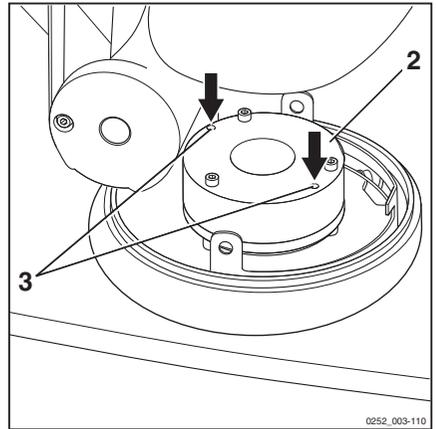

Handling the truck in specific situations

Handling the truck in specific situations

Slinging the truck



⚠ DANGER

Danger of truck falling

Only use slings and a hoist of sufficient quality.

Check the weight of the machine (including battery) in order to choose a suitable device.

Refer to the technical features.

Observe the following instructions:

- Switch off the truck and disconnect the battery connector.
- Remove any items that could fall.
- Protect all parts that come into contact with the lifting device.
- Attach the lifting device (1).

i NOTE


Do not sling the truck by the steering wheel or the control module.

- Carefully lift the truck.

⚠ DANGER

Risk of falling

Make sure no one is under or near the truck when slinging the truck.

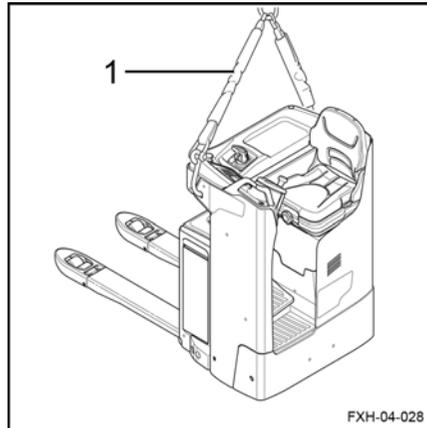

FXH-04-028

Lifting the truck

⚠ DANGER

Danger of truck tipping over

Truck lifting must be performed carefully.

For certain types of work, it is necessary to lift the truck:

- Use a jack with adequate lifting capacity.

Front section of the truck:

- Place the jack under the chassis (1).


For work on the lifting device:

- Position the jack under the battery frame (2).

Maintenance of the load wheels:

- To service the load wheels, the jack must be positioned under the load arms in the locations indicated (3).

As a safety precaution, always insert a wooden wedge.

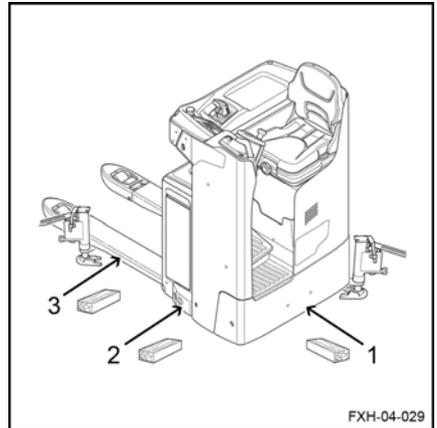

⚠ WARNING

Risk of truck falling

Immobilise and chock the truck after lifting it.

Transporting the truck

⚠ CAUTION

Always switch off the ignition and disconnect the battery.

Never tie down or sling the truck by the control unit or other points not designed for this.

⚠ CAUTION

Risk of damage to the truck.

Use a hoist and woven **NON METALLIC** slings with an adequate lifting capacity. Refer to the load weight shown on the truck's capacity plate.

The lifting operations must be performed by qualified personnel.

Trucks are generally transported by road or by rail.

The truck must be suitably protected from the effects of the weather during transport and storage.

To load or unload the truck, use an inclined plane or a mobile ramp.

If the truck is out of service or if the battery has been removed, sling the truck. See **Chapter 4 Slinging the truck**.

Handling the truck in specific situations

DANGER

Danger of death.

Transporting the truck in the lift

The truck must only be taken in lifts with an adequate loading capacity that are designed for this purpose, and for which authorisation has been received from the operator. Inside the lift, the truck must be immobilised so that no part is in contact with the wall of the lift cage.

Driving on loading bridges

Before crossing a loading bridge, the operator must make sure it is properly attached and secured and its load capacity is sufficient. Cross the loading bridge slowly and carefully. The driver must be sure that the vehicle to be entered is secured sufficiently against movement

Do not stand within the hoist's operating radius or below the lifted truck.

A minimum safety distance of 100 mm from the walls of the lift must always be observed.

Anyone transported with the truck must only enter the lift after the truck has been correctly immobilised and they must exit the lift first.

and that it can support the load of the forklift truck.

The lorry driver and lift truck operator must coordinate the departure time of the lorry.

5

Maintenance

General maintenance information

General maintenance information

General

The following instructions contain all the information required for maintenance of your truck.

Carry out the various maintenance work in compliance with the maintenance plan. This will ensure that your truck is reliable and in good working order and that the warranty remains valid.

Maintenance plan

One of the display functions indicates the truck's hours of use. Refer to and consult the truck's maintenance plan.

The maintenance plan is followed by advice to facilitate work.


Maintenance intervals must be reduced if the truck is used under harsh conditions (extreme heat or cold, large quantities of dust).

Grade and quantity of lubricants and other consumables

Only lubricants and other consumables specified in these operating instructions are authorised for use in maintenance work.

Lubricants and other consumables required for truck maintenance are listed in the maintenance specifications table.

- Never mix different grades of grease or oil. If it is absolutely necessary to change brands, make sure to flush thoroughly beforehand.
- Before changing any filters or working on the hydraulic system, thoroughly clean the surface and the areas around the part.
- All containers used to pour oil must be clean.

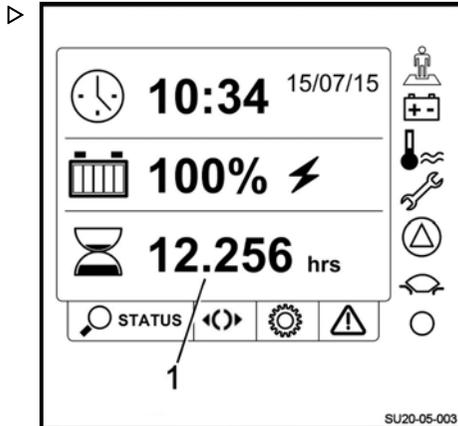

Servicing and maintenance personnel training and qualification

Truck maintenance must only be carried out by qualified and authorised personnel.

The annual inspection for prevention of accidents at work must be carried out by a person qualified to do so. The person carrying out this inspection must provide their expertise and opinion without being influenced by economic factors or company internal issues. Safety is the only critical deciding factor.

The person responsible for carrying out the inspection must have sufficient knowledge and experience to be able to assess the condition of the truck and the efficiency of the protective installations in accordance with the technical regulations and principles established for checking industrial trucks.

Battery maintenance staff

Batteries must only be recharged, maintained and changed by specially trained personnel. Personnel must follow the manufacturer's instructions of the battery, the battery charger and the truck.

It is essential to follow the battery maintenance instructions and the battery charger operating instructions.

Maintenance operations that do not require special training

Simple maintenance operations such as checking the hydraulic fluid level or checking the battery electrolyte level can be carried out by persons with no special training.

A specific qualification is not necessary.

Refer to the maintenance section of this manual for further information.

Ordering spare parts and consumables

Spare parts are provided by our spare parts service department. You will find the information required to place an order in the spare parts and fitting catalogue.

Only use spare parts recommended by the manufacturer.

Unauthorised spare parts may increase the risk of accidents due to faults relating to quality or incorrect choices. Anyone who uses non-compliant spare parts must assume full responsibility in the event of an accident.

Safety guidelines for maintenance

Safety guidelines for maintenance

Servicing and maintenance measures

To avoid accidents during servicing and maintenance operations, take all necessary safety measures. For example:

- Ensure that there is no risk of the truck moving or starting up unexpectedly. For this reason, remove the battery connector.

Working on the electrical equipment

Operations on the truck's electrical system must only be carried out when there is no voltage supply.

Operating checks, testing and adjustment work on parts supplied with voltage must only be carried out by personnel:

- who have received detailed instructions
- who have been authorised to perform this work
- who have taken the necessary precautionary measures.

Rings, metal bracelets etc., must be removed before carrying out any operations on electric components.

Remove the electric equipment (which comprises electric components such as the traction controller) before carrying out any welding operations. This precaution prevents this electric equipment from being damaged.

Operations on the electric system require the consent of the manufacturer.

Safety devices

After any repair or maintenance work, it is necessary:

- to refit all safety devices
- to check these for correct operation.

Recommended lubricants

⚠ CAUTION

Damage to equipment if non-recommended lubricants are used.

Only use recommended lubricants. Only the lubricants listed below are approved by the manufacturer. Do not mix lubricants. If in doubt, please contact the After-Sales Service Centre.

Hydraulic oil

Recommended oil for standard use:

ISO-L-HM 46 as per ISO 6743-4 or ISO VG46-HLP as per DIN 51524-2

Recommended oil for heavy-duty use:

ISO-L-HM 68 as per ISO 6743-4 or ISO VG68-HLP as per DIN 51524-2

Recommended oil for the cold store version:

ISO-L-HM 32 as per ISO 6743-4 or ISO VG32-HLP as per DIN 51524-2

Transmission oil

Recommended oil:

SAE 85W 90 API GL4

Aerosol can for chains

Standard chain spray

Grease for pinion gear and steering ring

⚠ CAUTION

Follow the maintenance and safety guidelines.

Multi-purpose grease

Lithium soap grease with EP agents and MoS 2 **KPF 2N - 20** complying with the standard DIN 51825.



ENVIRONMENT NOTE

Used oil must be stored safely until it is disposed of in accordance with environmental regulations. No one should have access to the used oil. Do not dispose of used oil in drains or allow it to penetrate soil.

Technical data for inspection and maintenance

Assembly	Consumables/lubricants	Capacities/adjustment values	
		FXH 20	FXH 25
Hydraulic system	Hydraulic oil	0.6 l (working capacity)	1.1 l (working capacity)
Transmission gear	Transmission gear oil	0.98 l	0.98 l
Traction motor (3 kW)	1F1 fuse	Power: 300 A, quantity: 1	Power: 300 A, quantity: 1
Steering unit ES30-24 (0.185 kW S1)	3F1 fuse	Power: 40 A, quantity: 1	Power: 40 A, quantity: 1
Pump motor	1F1 fuse	(1.2 kW) Power: 300 A, quantity: 1	(1.5 kW) Power: 300 A, quantity: 1
Control fuse	1F3 fuse	Control: 7.5 A, quantity: 1	Control: 7.5 A, quantity: 1
Control fuse	1F4 fuse	Control: 5 A, quantity: 1	Control: 5 A, quantity: 1


Technical data for inspection and maintenance

Battery	Distilled water	As required	As required
Joints	Lithium soap grease	As required	As required

Accessing the technical compartment

To carry out maintenance on various truck components, it is necessary to access the technical compartment.

- Immobilise the truck.
- Lower the load arms.
- Switch off the truck (key or electronic key).
- Press the emergency off switch.
- Disconnect the battery connector.
- Move the seat all the way forwards.
- Remove the mounting screw (1) located at the bottom of the door. ▷

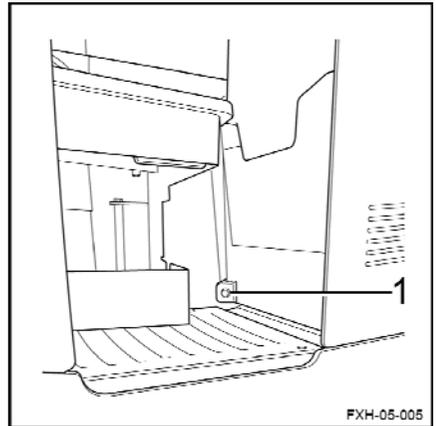

Accessing the technical compartment

- Open the technical compartment door (2). ▷

The technical compartment must be closed after the operation is finished.

- Close the door (2).


⚠ CAUTION

Risk of trapping fingers

Take care not to trap your fingers between the door and the chassis.

Be careful not to trap your fingers in the external hinges (3).

- Refit the mounting screw.
- Reconnect the battery connector.
- Return the truck to service.

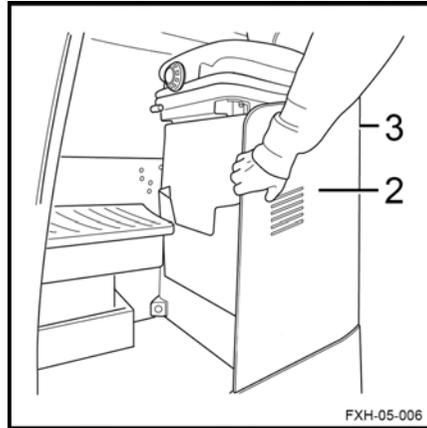

1000-hour maintenance plan

Depending on the application, environmental conditions and driving style, the following procedures should be carried out every 1000, 2000, 3000, 4000, 6000, 7000, 8000 and 9000 hours
Preparation
Clean the truck
Check the error codes using the diagnostic tool
Chassis and equipment
Check the condition of the forks
Check the electromagnetic brake and ensure that it is working correctly
Check and lubricate the hinges
Check the pump motor brushes for wear
Ensure that the floor adjusts and locks correctly
Ensure that the seat adjusts and locks correctly
Check the transmission gear for noise and leaks
Lubricate the gears
Wheels
Check the condition and tightness of the wheels
Check the stabilisers
Electrical equipment
Clean the electric steering system and lifting motors
Check the condition of the cables and the battery sockets and ensure that they are positioned correctly
Check the electrical insulation between the chassis and the electric components
Check the electrical insulation between the chassis and the electronic components
Check the fuses
Check the battery acid level and the electrolyte level
Hydraulics
Check the hydraulic oil level

5000-hour maintenance plan

Depending on the application, environmental conditions and driving style, the following procedures should be carried out every 5000 and 10,000 hours
Information
Carry out all 1000-hour maintenance work
Hydraulics
Drain the hydraulic oil

10,000-hour service plan

10,000-hour service plan

Depending on the application, environmental conditions and driving style, the following procedures should be carried out every 10,000 hours

Information

Carry out all 1000-hour maintenance work

Carry out all 5000-hour maintenance work

Motor

Drain the transmission gear oil

Chassis, bodywork and fittings

Cleaning the truck

Cleaning instructions

- Park the truck.
- Press the emergency off switch.

CAUTION

Electrical hazards

The battery must always be disconnected during cleaning procedures.

Washing the outside of the truck

WARNING

Risk of damage to the truck.

- Do not use flammable liquids to clean the truck.
 - The safety rules set out above must be followed to prevent spark formation. They could lead to a short circuit.
 - All components that are sensitive to moisture (particularly electric components) must be protected when the truck is cleaned.
 - Follow the manufacturer's instructions when using the cleaning product.
-
- Clean the truck with a non-flammable cleaning product mixed with water, a sponge and cloths.
 - Specifically clean the oil filler holes and surrounding area as well as the lubricating nipples (before lubrication).

NOTE

A frequently cleaned truck must be lubricated more regularly.

Cleaning the electrical installations

WARNING

Electrical hazards

Do not expose electrical equipment (especially motors) to direct jets.

NOTE

- *Only use dry cleaning products*
 - *Do not remove the cowlings*
- Clean the electrical installations with a non-metal brush and dry with lightly compressed air.

After washing

- Carefully dry the truck (e.g. with compressed air).

WARNING

Use of compressed air

It is advisable to wear protection goggles and a mask.

- Restart the truck in accordance with the instructions.

NOTE

If, despite taking precautions, traces of moisture remain in the motor, dry it using compressed air. After having eliminated any traces of moisture, the truck may be reactivated. Do not do so before then to prevent any corrosion.

Chassis, bodywork and fittings

General information on battery maintenance

DANGER

Risk of injury

Before carrying out any operations on the electric installation, turn the truck power supply off. Disconnect the battery connector.

Precautions to be taken during battery maintenance

The plugs on the battery cells must always be dry and clean.

Neutralise any spilt battery acid immediately.

The battery terminals and lugs must be clean, lightly covered with grease for terminals and securely tightened.

Charging the battery

During the charging process, the surface of the battery cells must be clear to ensure sufficient ventilation.

Do not place metal objects on the battery.

The battery cover must remain open during charging. See the chapter entitled **Battery charging using an external charger**.

Battery type

Lead or gel batteries are used. It is advisable to choose a compatible charger.

Before charging, ensure that the charger is suitable for the type of battery.

CAUTION

Gel batteries are subject to specific charging, maintenance and treatment instructions. A non-compatible charger may result in a battery failure.

Observe the manufacturer's recommendations.

NOTE

- *The discharge indicators used to check the battery must also be suitable for the type of battery*
- *Contact the relevant After-Sales Service Centre*

Charging the battery

- Park the truck in an area without condensation or pollution and with sufficient ventilation.
- Stop the truck.
- Press the emergency off switch.
- Open the battery hood.
- Follow the instructions.

CAUTION

Do not expose the charger to water, rain, oils, grease or any similar substances.

The charger becomes hot during the operation.

CAUTION

Risk of injury

Do not obstruct the ventilation. Allow the charger to cool down for 10 minutes after charging is complete before touching it. Do not use the charger out of the truck.


Checking the condition of the load arms ▷

- Check that the load arms (1) show no signs of deformation, splits, heavy wear or cracks.

⚠ CAUTION

Truck damage

If the carriage is damaged, have it changed by the After-Sales Service Centre.

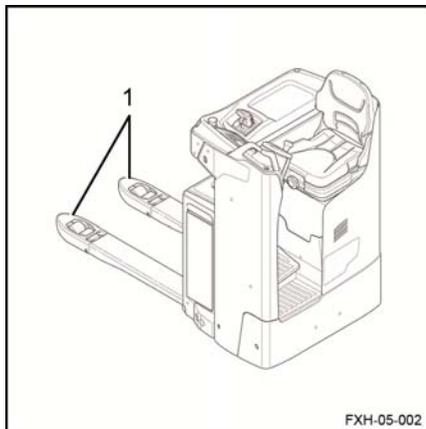

Steering and wheels


Steering and wheels**Checking the condition of the wheels**

- Raise the truck. The wheels must not touch the ground.
- Check that the wheels rotate freely. Then remove any objects that may prevent them from turning or that may obstruct them.
- Check the level of wear on the tyre treads.

⚠ CAUTION

Equipment damage

In order to avoid any risk of damaging the bearings and tyres of the wheels, it is essential to remove any wires or plastic strips that may wind around the wheel hubs and bearings.

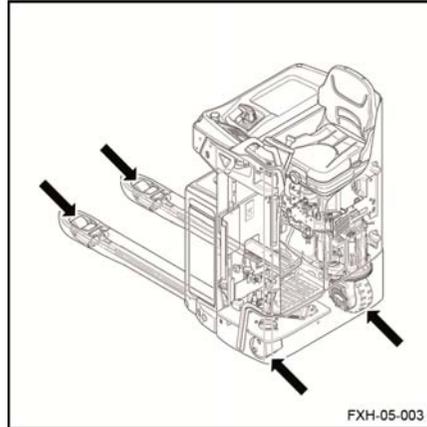

Electrical equipment

Cleaning and blowing out the electrical components

⚠ CAUTION

Electrical hazards

Always disconnect the battery connector before working on an electrical component.


- Press in the emergency off switch.
- Disconnect the battery connector.
- Move the seat all the way forwards.
- Open the technical compartment door.
- Blow the electrical components with compressed air.

⚠ WARNING

Use of compressed air

It is advisable to wear protection goggles and a mask.

- Check the condition of the cable harness connector pins.
- Close the technical compartment door.
- Return the truck to service.

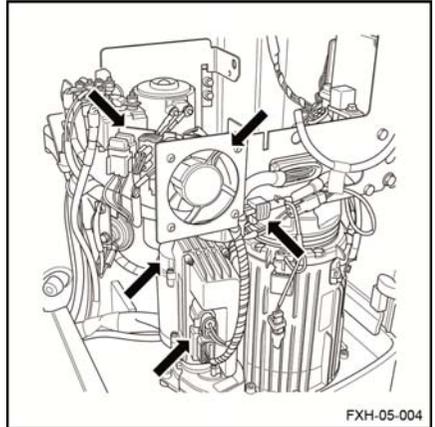

Checking the battery acid level and electrolyte density

i NOTE

Remove the battery from its compartment to check the water level.



Electrical equipment

WARNING

The electrolyte (diluted sulphuric acid) is poisonous and corrosive.

- Always wear suitable protective equipment (industrial protection goggles, safety gloves) when working on a battery.
 - Never wear a watch or jewellery when handling battery acid.
 - Do not allow any acid to get onto the clothing or skin or into the eyes. If this does happen, rinse immediately with plenty of clean water.
 - Immediately rinse away any spilled battery acid with plenty of water.
 - In case of injury, seek medical advice immediately.
 - Always follow the safety information provided by the battery manufacturer.
 - Comply with the regulations in force.
-
- Check the battery acid level and electrolyte density according to the battery manufacturer's recommendations.
 - The cell covers of the battery must be kept dry and clean.
 - Any spillage of battery acid must be neutralised immediately.



ENVIRONMENT NOTE

Dispose of any used battery acid in accordance with the regulations.


Checking the condition of cables, terminals and the battery connector

- Check that the cable insulation is undamaged
- Check that there are no signs of heat build-up in the connections
- Check that the "+" and "-" output terminals are not sulphated (presence of white salt)
- Check the condition of the battery connector contacts and the presence of the keying pin

⚠ CAUTION

Risk of damaging the equipment.

The points mentioned above can cause serious incidents. In the event of an incident, contact our After-Sales Service Centre as quickly as possible.

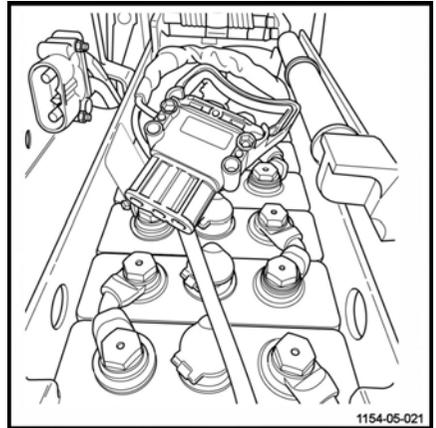


Hydraulic systems

Hydraulic systems

Checking the hydraulic system for leaks

- Switch off the truck and disconnect the battery connector.
- Move the seat all the way forwards.
- Open the technical compartment door.
- Inspect the hydraulic system: pipes, hoses and connections between the pump unit and the cylinders.
- Check the cylinders for leaks.
- Check that the hoses are attached correctly and show no signs of friction wear.
- Check the external pipes and hoses on the technical compartment.
- Close the technical compartment door.
- Return the truck to service.

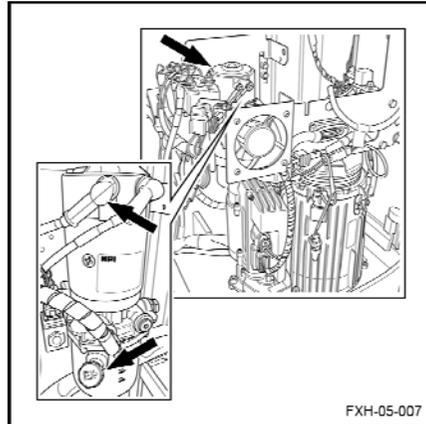

⚠ CAUTION

Risk of damaging the truck


In the event of leakage, please contact the After-Sales Service Centre.

Checking the hydraulic oil level

To check the hydraulic oil level, proceed as follows:

- Immobilise the truck.
- Lower the load arms.
- Switch off the ignition and remove the key.
- Press the emergency off switch.
- Disconnect the battery connector.
- Move the seat all the way forwards.
- Open the technical compartment door.

To ensure correct operation of the truck functions, the oil level must be between the minimum mark (3) and maximum mark (2) on the tank.

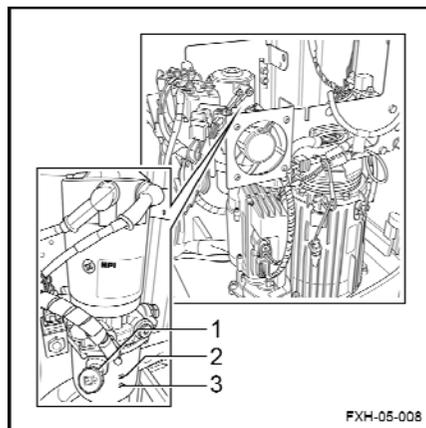

- Remove the plug (1). If necessary, top up via the opening.
- Refit the plug (1) afterwards.

⚠ CAUTION

Risk of damage to hydraulic components

Only use hydraulic oil that complies with the manufacturer's specifications (see table of recommended lubricants).

-
- Close the technical compartment door.
 - Reconnect the battery connector.
 - Return the truck to service.

Storage and decommissioning

Storage and decommissioning

Storage of truck

Precautions should be taken if the truck must not be used for a reasonably long period. The operations depend on the length of time it is unused.

Long-term truck storage

The following work must be carried out on the truck to prevent corrosion if it needs to be stored for a long period of time. If the truck is to be stored for more than two months, it must be positioned in a clean and dry area. The area must be well-ventilated with no risk of freezing.

The following operations must be performed:

- Clean the truck thoroughly.
- Check the hydraulic oil level and refill if necessary.
- Lower the forks onto a suitable support (e.g. a pallet) until the chains are slack.
- Coat any unpainted metal parts with a thin layer of oil or grease.
- Grease all hinges and joints.
- Check battery condition and electrolyte density. Maintain the battery in accordance with the manufacturer's requirements. (Follow the instructions).
- Spray contacts with an aerosol product designed for contacts.
- Raise and chock the truck: the wheels must not touch the ground in order to prevent irreversible deformation of the tyres.
- Cover the truck with a cotton cover to protect it from dust.

⚠ CAUTION

We recommend that you do not use a plastic sheet as this encourages condensation to form.

Consult the service department for further measures to take if the truck must be stored for a longer period of time.

Recommissioning after storage

If the truck has been stored for more than six months, it must be checked carefully before being recommissioned. This check is similar to the workplace accident prevention inspection. It is therefore necessary to check all points and systems that are important for truck safety.

Carry out the following operations:

- Clean the truck thoroughly.
- Grease all hinges and joints.
- Check the condition and density of electrolyte, and, if necessary, recharge the battery.
- Check that there are no traces of condensation water in the hydraulic oil. Drain if necessary.
- Carry out the same maintenance work as for the first time it was commissioned.
- Commission the truck.
- In particular, check the following during start-up:
 - traction, control and steering.
 - brakes (service brake and parking brake).
 - lifting device.

Permanent Putting Out of Commission (Destruction)

When scrapping the truck, it is necessary to:

- Remove the various parts of the truck (covers, battery, chains, motors etc.)
- Sort out the components depending on their type: pipes, rubber components, lubricants, aluminium, iron etc.
- Before scrapping the truck, notify the competent authorities of your country in writing.
- After receiving the authorisation from the competent authorities, remove any components according to national standards.



NOTE


The client is solely responsible for any irregularities he has committed during or after the scrapping of the truck's components and the removal of components.

6

Technical specifications

FXH 20 datasheet

FXH 20 datasheet

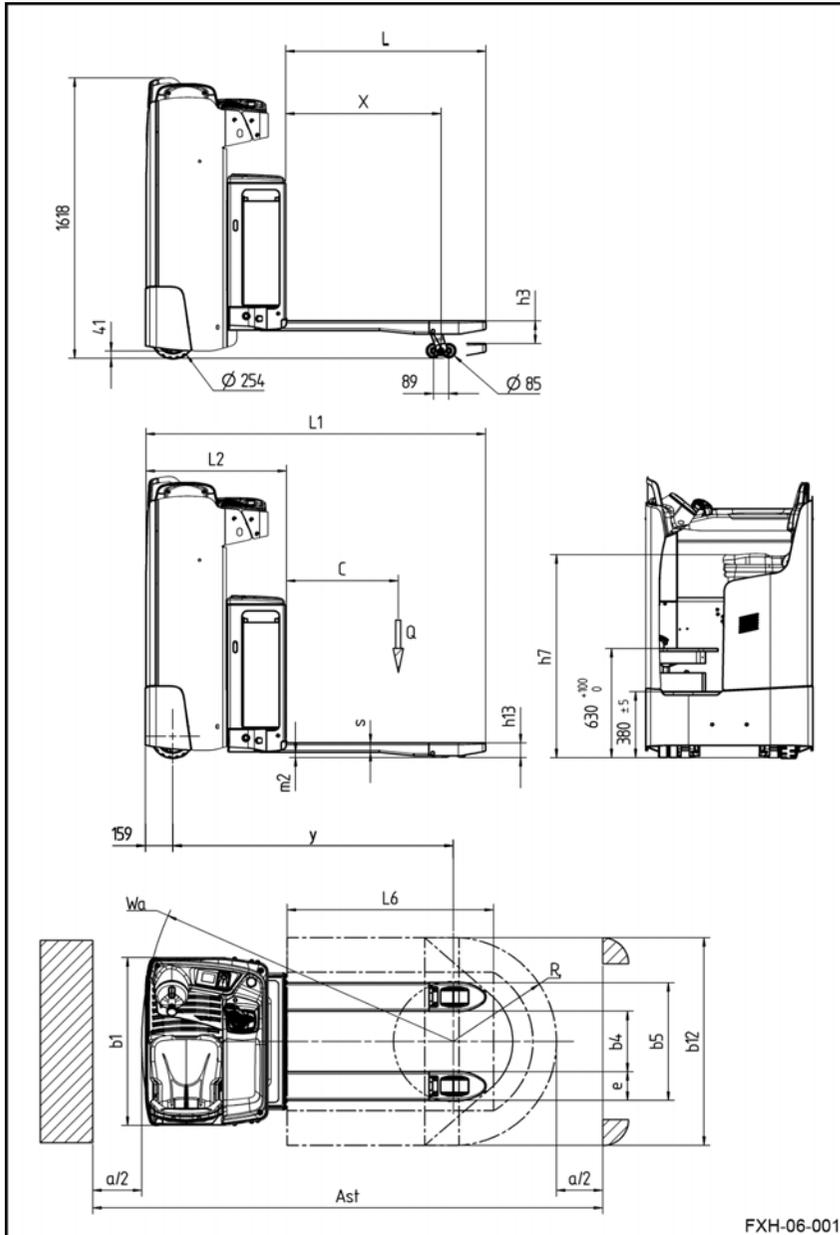

FXH-06-001

DESCRIPTION				
1.1	Manufacturer		STILL	
1.2	Model type		FXH 20	FXH 25
1.3	Method of propulsion: battery, diesel, petrol, LPG, mains power		Battery	Battery
1.4	Driving mode: manual, pedestrian, standing, seated, order picking		Seated	Seated
1.5	Nominal capacity	Q (kg)	2000	2500
1.6	Centre of gravity	C (mm)	600	800
1.8	Distance from load wheel axle to load support face (± 5 mm) ⁽⁵⁾	X	965	1415
1.9	Wheelbase (± 5 mm) ⁽⁵⁾	Y	1622	2072

WEIGHT			FXH 20	FXH 25
2.1	Kerb weight ($\pm 10\%$) ⁽⁴⁾	kg	997	1076
2.2	Load per laden axle, drive side/load side ($\pm 10\%$) ⁽³⁾	kg	1188/1828	1589/2006
2.3	Load per unladen axle, drive side/load side ($\pm 10\%$) ⁽³⁾	kg	751/246	830/246

WHEELS			FXH 20	FXH 25
3.1	Tyre: polyurethane, rubber, drive side/load side		R+P/P	
3.2	Drive wheel dimensions (width on the ground)	$\varnothing \times l$ (mm)	$\varnothing 254 \times l 102$	
3.3	Wheel dimensions, load side	$\varnothing \times l$ (mm)	$\varnothing 85 \times l 105$ (2 x $\varnothing 85 \times l 80$)	
3.4	Additional wheels (dimensions)	$\varnothing \times l$ (mm)	2 x $\varnothing 140 \times l 50$	
3.5	Number of wheels drive side/load side (X = drive wheel)		1X + 1/2 (1X + 1/4)	
3.6	Drive side track width (± 5 mm)	mm	699	
3.7	Load side track width (± 5 mm)	mm	395	

DIMENSIONS			FXH 20	FXH 25
4.4	Lift (± 5 mm)	h3 (mm)	125	
4.8	Seat height relative to SIP/height of support (± 5 mm)	h7 (mm)	1166	
4.15	Height at fork ends and on load support face (± 5 mm) ⁽⁵⁾	h13 (mm)	88	

FXH 20 datasheet

4.19	Total length (0/+5 mm) ⁽⁶⁾	L1 (mm)	1970	2420
4.20	Length to the load support face (±5 mm) ⁽⁶⁾	L2 (mm)	820	
4.21	Total width (±5 mm)	b1 (mm)	970	
4.22	Load arm dimensions	s/e/l (mm)	55/165/1150	55/165/1600
4.25	Minimum/maximum outer load arm spread (±5 mm)	b5 (mm)	520/540/560/680	
4.32	Ground clearance at centre of wheel- base (±2 mm)	m2 (mm)	30	
4.33	Load dimension b12 x L6	(mm)	800 x 1200	2 x 1200 x 800
4.34	Aisle width with pre-determined load ⁽²⁾ ⁽⁸⁾	Ast (m m)	2487	3097
4.34 .1	Aisle width with 1000 x 1200 pallet crosswise ⁽²⁾ ⁽⁸⁾	Ast (m m)	2625	-
4.34 .2	Aisle width with 800 x 1200 pallet crosswise ⁽²⁾ ⁽⁸⁾	Ast (m m)	2374	3097
4.35	Turning radius (minimum) (±20 mm), LI raised/lowered ⁽¹⁾	Wa (mm)	1760/1825	2205/2270

PERFORMANCE DATA			FXH 20	FXH 25
5.1	Travel speed, laden/unladen (±5%)	km/h	10/12	10/12
5.2	Lift speed, laden/unladen (±10%)	m/s	0.039/0.048	0.024/0.033
5.3	Lowering speed, laden/unladen (±10%)	m/s	0.077/0.078	0.074/0.053
5.8	Maximum gradient, laden/unladen	%	17/20	15/20
5.9	Acceleration time (10 m)	s	5.6/4.3	5.7/4.3
5.10	Service brake		electromagnetic	electromagnetic

DRIVE SYSTEM			FXH 20	FXH 25
6.1	Traction motor, 60 minutes	kW	3.0	
6.2	Lift motor at 15% operation	kW	1.2	1.5
6.3	Battery type in accordance with DIN 46 531/35/36 A, B, C; not type DIN 43 535 B		3 PzS side access	
6.4	Battery voltage and capacity (discharge in 5 hours)	V/Ah	Gel/lead battery	24/375
			4PZS battery- Side access Li-ion 205 Ah	23/205
			4PZS battery- Side access Li-ion 410 Ah	23/410

6.5	Battery weight ($\pm 10\%$)	(kg)	Gel/lead battery	290
	Battery weight with tray ($\pm 10\%$)		4PZS battery-Side access Li-ion 205 Ah	312
	Battery weight with tray ($\pm 10\%$)		4PZS battery-Side access Li-ion 410 Ah	351
6.6	Energy consumption according to standardised VDI cycle	kWh/h		0.60
6.7	Turnover output according to VDI cycle	T/h		148
6.8	Energy consumption at turnover output	kWh/h		1.62

MISCELLANEOUS			FXH 20	FXH 25
8.1	Speed control (AC controller)		LAC	
10.7	Noise level at forklift operator's ears (± 2.5)	dB (A)	68	
	Vibration transmitted to the operator (EN 13059)	m/s ²	0.5	

- 1) Load arms lifted/lowered
 - 2) Calculation with W_a load arms lowered
 - 3) Weight according to line 2.1
 - 4) With battery line 6.5
 - 5) In lowered position
 - 6) Add 75 mm for 4 PzS
 - 7) $A_{st} = W_a + L_6 - X + a$
 - 8) $A_{st} = W_a + R + a$
- Safety distance $a = 200$ mm

A

Accessing the technical compartment.	111
Address of manufacturer.	1
Adjusting the floor.	42
Adjusting the seat.	41
Aerosol can for chains.	109

B

Batteries.	32
Battery	
Closing the battery hood.	92
Opening the battery hood.	92
Type.	91
Battery acid.	14
Before picking up a load.	87
Behaviour when driving.	51
Braking.	32
Braking on the version without pedals.	34
Braking with the dual-pedal option.	36, 76
Braking with the single-pedal option.	35

C

CE labelling.	3
Changing the side access battery.	95
Charging the battery.	116
Charging the battery using an external charger.	93
Checking the battery acid level and electrolyte density.	119
Checking the brakes.	34
Single-pedal option.	70
Without pedals.	59
Checking the cables, terminals and the battery connector.	121
Checking the condition of the load arms.	117
Checking the condition of the wheels.	118
Checking the emergency off switch.	34
Checking the horn.	37
Checks prior to start-up.	33
Cleaning the truck.	115
Climatic conditions.	8
cold store.	89
Cold store usage.	89
Consumables.	13
Battery acid safety instructions.	14
Disposal.	15

Oil Safety Information.	13
Safety information for handling hydraulic fluid.	14
Contact details.	1
Copyright and property rights.	3

D

Defining directions.	52
Description of use.	8
Destruction.	125
Display of the drive wheel position.	44
Display operating unit.	27
Display unit	
Activity indicator.	48
Drive program.	48
Error codes menu.	49
Operator presence.	45
Settings.	47
Start-up screen.	50
Temperature.	47
Warnings.	47
Disposing of components and batteries.	9
Drive program	
Blue Q mode.	63
Hare mode.	63
Tortoise mode.	64
Driver rights, duties and rules of behaviour.	18
Drivers.	18
Driver's compartment.	24, 32
Drive system.	32
Driving	
Dual-pedal option.	74
Single-pedal option.	68
Without pedals.	55
Driving on loading bridges.	104
Driving safety guidelines.	51

E

EC declaration of conformity.	4
Electrical equipment	
Cleaning and blowing out the components.	119
Electronic key (option).	25

F

Features.	32
-------------------	----

FleetManager™	
Colour code for the LEDs.	80
Commissioning a truck equipped with a keypad or an electronic key.	79
Commissioning a truck equipped with an RFID reading device.	79
Description.	78
Disconnecting a truck equipped with a keypad or electronic key.	82
Disconnecting a truck equipped with an RFID reading device.	83
Disconnecting the truck.	82
Start-up.	79
FXH 20 datasheet.	128
G	
General.	2, 106
General information on battery maintenance.	116
General view of the technical compartment.	23
Grade and quantity of lubricants and other consumables.	106
Grease for pinion gear and steering ring.	109
H	
Handling a single load.	87
Horn.	58
Hydraulic fluid.	14
Hydraulic oil.	109
Hydraulic system	
Checking the hydraulic oil level.	122
Checking the hydraulic system for leaks.	122
I	
Identification label.	5
Indicator light	
Drive direction indicator.	45
Parking brake.	45
L	
Labels.	28
Lift control elements.	86
Lifting the truck.	103
Load handling safety rules.	84
M	
Maintenance plan.	106
1000 hours.	113
5000 hours.	113
Managing battery charging.	47
Multi-purpose grease.	109
N	
Noise emission values.	16
O	
Oils.	13
Operating company.	18
Operator presence detection	
Dual-pedal option.	73
Without pedals.	52
Ordering spare parts and consumables.	107
Order picking.	91
Overview.	22
P	
Parking brake.	61
Permanent Putting Out of Commission.	125
Permissible use.	8
Picking up a load from the ground.	87
Precautions to be taken during battery maintenance.	116
Prohibition of use by unauthorised persons.	19
R	
Recommended lubricants.	109
Residual dangers, residual risks.	17
S	
Safety devices.	108
Safety Inspection.	20
Seat heater	
Optional.	42
Selection buttons.	44
Serial number.	29
Service plan	
10,000 hours.	114
Servicing and maintenance measures.	108
Setting a load down on the ground.	88
Settings menu.	49
Slinging the truck.	102
Spare parts list.	7

Specialist	18	Transporting the truck in the lift.	104
Specific features of the dual-pedal option.	73	Travelling down slopes.	66
Specific features of the single-pedal option.	67	Travelling up slopes.	65
Stability.	17	Truck operating instructions.	38
Starting on a slope.	66	Turning direction.	57
Starting the truck.	54	U	
Steering.	32, 57	Unauthorised use.	9
Stepping on/off the truck.	40	Using the truck on a slope.	65
Symbols used.	9	V	
T		Vibrations	
Technical data for inspection and maintenance.	109	Vibration characteristics for vibrations to which the body is exposed.	16
Technical description.	32	W	
Transmission oil.	109	Working on the electrical equipment.	108
Transporting a load.	88		
Transporting the truck.	103		

STILL GmbH

11548011751 EN - 02/2021 - 07