

Original instructions

Electric trucks

RX60 25-35 RX60 25-35/Li-lon





6301 6302 6304 6305 6307 6308 6309

56378011501 EN - 12/2019 - 04

first in intralogistics

Address of manufacturer and contact details

STILL GmbH Berzeliusstraße 10 22113 Hamburg, Germany Tel. +49 (0) 40 7339-0 Fax: +49 (0) 40 7339-1622 Email: info@still.de Website: http://www.still.de

Rules for the operating company of industrial trucks

In addition to these operating instructions, a code of practice containing additional information for the operating companies of industrial trucks is also available.

This guide provides information for handling industrial trucks:

- Information on how to select suitable industrial trucks for a particular area of application
- Prerequisites for the safe operation of industrial trucks
- · Information on the use of industrial trucks
- Information on transport, initial commissioning and storage of industrial trucks

Internet address and QR code

The information can be accessed at any time by pasting the address **https://m.still.de/vdma** in a web browser or by scanning the QR code.







⊳

1 Foreword

Your truck	2
Description of the truck	2
General	5
CE labelling	5
EC declaration of conformity in accordance with Machinery Directive	6
Accessories	7
Labelling points	8
Nameplate	11
Production number	12
StVZO (Road Traffic Licensing Regulations) information	12
Nameplate of a lithium-ion battery	13
Using the truck	14
Commissioning	14
Proper usage	14
Proper use during towing.	14
	15
Place of use.	15
Parking in temperatures below -10°C	16
Using working platforms	17
Information about the documentation	18
Scope of the documentation	18
Supplementary documentation	19
Issue date and topicality of the operating instructions	20
Copyright and trademark rights	20
Explanation of information symbols used	20
List of abbreviations.	21
Definition of directions	23
Schematic views	23
Environmental considerations	25
Packaging	25
Disposal of components and batteries	25

2 Safety

Definition of responsible persons.	28
Operating company	28
Specialist	28
Drivers	29



Basic principles for safe operation	31
Insurance cover on company premises.	31
Special notes for using lithium-ion batteries	31
Product-specific dangers of the 24.1-kWh & 60-kWh lithium-ion battery	34
Modifications and retrofitting	35
Changes to the overhead guard and roof loads	37
Warning regarding non-original parts	37
Damage, defects and misuse of safety systems	38
Tyres	38
Medical equipment	40
Exercise caution when handling gas springs and accumulators	40
Length of the fork arms	41
Residual risk	42
Residual dangers, residual risks	42
Special risks associated with using the truck and attachments.	43
Overview of hazards and countermeasures	46
Danger to employees	48
Safety tests	50
Carrying out regular inspections on the truck	50
Insulation testing	50
Safety regulations for handling consumables	52
Permissible consumables	52
Oils	52
Hydraulic fluid	53
Battery acid	54
Disposal of consumables.	55
Emissions	56

3 Overviews

Overview	60
Driver's compartment.	62
Shelf and cup holder	63
Operating devices and display elements	64
Display/control unit "STILL Easy Control"	64
Lithium-ion battery display	65
Emergency off switch	66
Multi-lever operation	67
Double mini-lever	68
Triple mini-lever	68



Quadruple mini-lever	70
Fingertip	71
Joystick 4Plus	72
Mini-console	73

4 Operation

Checks and tasks before daily use	76
Visual inspections and function checking	76
Climbing into and out of the truck	79
Adjusting the driver's seat	80
Seat belt	86
Adjusting the armrest	89
Adjusting the steering column	90
Adjusting the swivelling display-operating unit	90
Unlock the emergency off switch	92
Operating the signal horn	93
Checking the emergency off function	94
Driver's cab	95
Checking the brake oil level	95
Checking the brake system for correct function	98
Warming up the hydraulic oil at cold ambient temperatures	94
Checking the steering system for correct function.	101
Checking the automatic mast vertical positioning (variant) for correct function	101
Switching on	103
Switching on using the key switch.	103
Switching on via push button (variant).	104
Display-operating unit	106
	106
Access authorisation with PIN code (variant)	
Access authorisation for the fleet manager (variant)	107
Pre-Shift Check	111
Description of the Pre-Shift Check (variant)	111
Process	112
All questions	113
Defining the question sequence	115
Displaying the history	117
Defining the shift start	119
Resetting the truck restrictions	122
Lighting	125
Meaning of the symbols.	125
Driving lights	126



Working spotlights	126
Working spotlight for reverse travel (variant)	128
Turn indicators	128
Hazard warning system	129
Rotating beacon	130
STILL SafetyLight (variant)	131
Warning zone light (variant)	132
Efficiency and drive modes	133
Blue-Q (variant)	133
Switching Blue-Q on and off	133
STILL Classic and sprint mode	135
	137
Driving	137
Safety regulations when drivingRoadways	137
Selecting drive programmes 1 to 3	142
Selecting drive programme A or B.	142
Configuring drive programmes A and B	142
Selecting the drive direction	145
Actuating the drive direction switch, multiple-lever version	145
Actuating the drive direction switch, mini-lever version	140
Actuating the drive direction switch, Fingertip version.	140
Actuating the vertical rocker button for the "drive direction", Joystick 4Plus version	140
Actuating the ventical rocker batton for the unventication, objection, and version	148
Starting drive mode	148
Starting drive mode, dual pedal version (variant)	150
Operating the service brake	150
Actuating the electric parking brake	152
Malfunctions in the electric parking brake	157
Steering	162
Reducing speed when turning (Curve Speed Control)	163
Speed reduction when the fork carriage is raised (variant)	164
Speed reduction when the cab door is open	164
Speed restriction (variant)	165
Parking.	167
Parking the truck securely and switching it off.	167
Wheel chock (variant)	169
Lifting	170
Lifting system variants	170
Lift mast versions	170
Operating devices for the lifting system	171
Controlling the lifting system using multi-lever operation	173



Controlling the lifting system using a double mini-lever	175
Controlling the lifting system using a triple mini-lever	177
Controlling the lifting system using a quadruple mini-lever	179
Controlling the lifting system using the Fingertip	179
Controlling the lifting system using the Joystick 4Plus	182
Dynamics of the hydraulic movements	184
Selecting load programs 1 to 3	185
Fork wear protection (variant)	185
Changing the fork arms	187
Fork extension (variant)	189
Operation with reversible fork arms (variant)	191
Malfunctions during lifting mode	192
Hydraulic blocking function	193
Handling loads	195
Safety regulations when handing loads.	195
Before picking up a load	196
Picking up loads	197
Danger area.	198
Transporting pallets	199
Transporting suspended loads	200
Lift mast vertical position (variant)	201
Calibrating the automatic mast vertical positioning	201
Picking up a load	205
Transporting loads	208
Shake function (variant).	209
Setting down a load	213
Driving on ascending and descending gradients.	215
Driving on lifts	216
Driving on loading bridges	217
Tilt angle-dependent functions.	218
Mast tilt angle display	218
Tilt end stop damping	218
Load-dependent functions	219
Overload detection (variant)	219
Dynamic Load Control 1	219
Dynamic Load Control 2	219
Load measurement (variant)	223
Calibrating the load measurement.	224
Precision load measurement (variant).	226
Tare function (variant)	229
Total load (variant)	231



Depressurising the hydraulic system	234
Need to depressurise the hydraulic system	234
Wizard for depressurising the hydraulic system	235
Depressurising the hydraulic system using multi-lever operation	234
Depressurising the hydraulic system using multi-lever operation and the 5th and 6th function	234
Depressurising the hydraulic system using a double mini-lever	239
Depressurising the hydraulic system using the double mini-lever and the 5th function .	234
Depressurising the hydraulic system using a triple mini-lever.	241
Depressurising the hydraulic system using the triple mini-lever and the 5th function	234
Depressurising the hydraulic system using a quadruple mini-lever.	243
Depressurising the hydraulic system using the quadruple mini-lever and the 5th function	234
Depressurising the hydraulic system using the Fingertip	245
Depressurising the hydraulic system using the Fingertip and the 5th function	234
Depressurising the hydraulic system using the Joystick 4Plus	247
Depressurising the hydraulic system using the Joystick 4Plus and the 5th function	234
Special feature for clamping attachments	249
Exiting the wizard	250
Attachments	251
Fitting attachments	251
General instructions for controlling attachments	254
Controlling attachments using multi-lever operation	256
Controlling attachments using multi-lever operation and the 5th and 6th function	258
Controlling attachments using a double mini-lever	260
Controlling attachments using the double mini-lever and the 5th function	262
Controlling attachments using a triple mini-lever	264
Controlling attachments using the triple mini-lever and the 5th function	266
Controlling attachments using a quadruple mini-lever	268
Controlling attachments using the quadruple mini-lever and the 5th function	270
Controlling attachments using the Fingertip	271
Controlling attachments using the Fingertip and the 5th function	273
Controlling attachments using the Joystick 4Plus	275
Controlling attachments using the Joystick 4Plus and the 5th function	277
Clamp locking mechanism (variant)	278
Picking up a load using attachments	279
Auxiliary equipment	280
FleetManager (variant)	280
Shock recognition (variant)	280
Driver restraint systems (variants)	280
Actuating the windscreen wipers and windscreen washers (variant)	280
Filling the washer system	282



Operating the rear window heating Ceiling sensor (variant)	283 283
Optical lift height measuring system (variant)	289
Cab Opening and closing the cab door. Opening and closing the side window. Turning the interior lighting on or off (variant). Radio (variant). Heating system (variant) Air conditioning (variant). Clipboard (variant).	293 293 294 294 295 295 295 295
Sun visor and sun blind	300
Trailer operation. Towed load Coupling pin in the counterweight. Tow coupling RO*244 Towing trailers	301 301 302 304 308
Cold store application	309
Display messages . Messages . Messages about operation . Messages about the truck .	312 312 312 318
Procedure in emergencies. Emergency shutdown Procedure if truck tips over Emergency hammer Emergency lowering Emergency actuation of the electric parking brake Towing	321 322 323 323 323 325 327
Connecting and disconnecting the battery male connector Connecting the battery male connector Disconnect the battery male connector	330 330 331
Handling the lead-acid battery Safety regulations for handling the battery Maintaining the battery Checking the battery condition, acid level and acid density Checking the battery charge status Charging the lead-acid battery	332 332 335 337 338 339
Equalising charging to preserve the battery capacity	342



Handling the lithium-ion battery	344
Safety regulations for handling the lithium-ion battery.	344
Lithium-ion batteries "GGS Li-ion 80 V" 24.1 kWh and 60 kWh	347
Regulations for storing lithium-ion batteries	348
Checking the battery charge status	350
Charging the lithium-ion battery.	352
Replacing and transporting the battery	356
General information on replacing the battery	356
Wire cross-section of the battery cable on the "High Performance" variant	356
Changing to a different battery type	357
Converting to lithium-ion batteries	358
Opening/closing the battery door	359
Special notes for installing the lithium-ion battery	362
Replacing the battery using a truck	362
Replacing the battery using a change frame (variant)	367
Transporting the lead-acid battery by crane	372
Transporting the lithium-ion battery by crane	373
Cleaning the truck	374
Cleaning the truck	374
Cleaning the electrical system	376
Cleaning load chains	376
Cleaning the windows	377
After cleaning	378
Transporting the truck	379
Transport	379
Crane loading	382
Decommissioning	383
Decommissioning and storing the truck.	383
Use after storage or decommissioning	385

5 Maintenance

Safety regulations for maintenance	388
General information	388
Working on the hydraulic equipment	388
Working on the electrical equipment	388
Safety devices	389
Set values	389
Lifting and jacking up	389
Working at the front of the truck	390



General maintenance information	391
Personnel qualifications.	391
Information for carrying out maintenance	391
Maintenance - 1000 hours/annually	394
Maintenance - 3000 hours/every two years.	398
Ordering spare parts and wearing parts	398
Quality and quantity of the required operating materials	398
Lubrication plan	400
Maintenance data table	401
Preserving operational readiness	404
Lubricating the joints and controls	404
Checking the battery interlock and the battery door interlock	405
Maintaining the seat belt	406
Checking the driver's seat	407
Servicing the heating system or air conditioning	408
Servicing wheels and tyres	410
Servicing the steering axle	411
Checking the battery	412
Replacing the fuses	412
Checking the hydraulic system for leak tightness	412
Check the hydraulic oil level	414
Lubricating the lift mast and roller track	416
Preserving operational readiness for cold store application	416
1000-hour maintenance/yearly maintenance.	417
Other tasks	417
Checking the lift cylinders and connections for leaks	417
Checking the fork arms	418
Checking the reversible fork arms	418
Checking the double pedal	419
Checking the battery changeover frame	419

6 Technical data

Ergonomic dimensions	422
Dimensions	423
VDI datasheet RX60-25, RX60-25/600 and RX60-25L/600	425
VDI datasheet RX60-30, RX60-30/600 and RX60-30L/600	429
VDI datasheet RX60-35L	433
Information about the lead-acid battery	437
Information about the lithium-ion battery	439





Foreword

Description of the truck

General

The STILL RX60 25-35 is an electrically driven counterbalanced truck with a rear swing axle and has a load capacity of up to 3.5 tonnes. Alternatively, a load capacity of up to 3.0 tonnes with a load centre of gravity of 600 mm is available. In this case, the truck can reach driving speeds of up to 21 km/h.

It is suitable for interior use and for outdoor use.

The driver's compartment has an ergonomic design with the steering column and driver's seat offset to one side.

The "STILL Easy Control" display-operating unit manages all functions that are not called up by the operating devices for drive functions and hydraulic functions. The driving condition information and all messages are issued via a large colour display. The display/operating unit uses the current battery charge state and the selected drive programme to calculate the remaining available time until the battery has to be recharged and displays this information. It also supports all FleetManager 4.x functions.

Assistance functions

The STILL RX60 25-35 can be equipped with assistance functions that make it easier to work with loads.

- Overload detection
- Dynamic Load Control 1 or Dynamic Load Control 2
- · Intermediate lift cut-out
- · End lift cut-out
- · Lift height restriction
- · Lift height display
- · Lift mast tilt angle display
- Automatic mast vertical positioning
- · Fork wear protection
- Load measurement and precision load measurement
- · Optical lift height measuring system



Brake system

The brake system of the truck is comprised of three different brakes:

- · Service brake
- Regenerative brake
- · Electric parking brake

The service brake is based on a wear-free, oilimmersed multi-disc brake. This multi-disc brake is used as the service brake for heavy braking or emergency braking with the brake pedal. In the normal working mode, the regenerative brake of the electric traction motors takes effect. The regenerative brake converts the acceleration energy of the truck into electrical energy. This causes the truck to decelerate as soon as the accelerator pedal is released. If the foot is completely removed from the accelerator pedal, the truck brakes until it comes to a standstill. A parking brake ensures that the truck remains securely in place when parked.

Hydraulic system

The steering system, the lift cylinders and the tilt cylinders in the lift mast are supplied with power via a hydraulic pump operated by an electric motor.

The proportional valve technology provides particularly sensitive movements and safe handling of the load. The hydraulic functions can be parameterised individually by the authorised service centre.

Up to three hydraulic circuits can be used to activate attachments (variant). Depending on the equipment, a hydraulic accumulator is also available in the lifting circuit for the purpose of damping pressure peaks in the hydraulic system.

Drive

Both front wheels of the STILL RX60 25-35 are driven by maintenance-free three-phase drives in the front axle with 80-volt technology.

Lead-acid batteries and lithium-ion batteries that can be replaced from the side are available as a power supply source. In both cases,



Your truck

1

Your truck

the trucks can be supplied as a cold store variant.

The driver can help to influence the energy consumption and performance of the truck using the "Blue-Q" efficiency mode, which allows the required setting for each current application to be called up via the display-operating unit.

The "High Performance" variant performs at a higher level and has a modified drive axle and stronger pump motor.

Steering

The kickback-free, hydraulic rear-wheel steering with "Curve Speed Control" (CSC) ensures driving stability when cornering, allowing the truck to achieve a small turning circle and negotiate narrow aisle widths.

Operation

The multi-lever, the Fingertip mini-lever and the Joystick 4Plus are available as operating devices for the hydraulic functions. These operating devices enable precise operation and smooth control of the lifting speed thanks to directly controlled valves and proportional valve technology.

The acceleration behaviour and braking behaviour can be selected individually using different drive programmes.

For drive mode, the truck features either single-pedal or dual-pedal operation. The truck is accelerated and braked (regenerative braking) via the accelerator pedal or via dual-pedal operation: One pedal is for the "forward" drive direction and one pedal is for the "backward" drive direction. Acceleration and braking behaviour can be individually selected from three different drive programmes.

The "STILL Easy Control" display-operating unit simplifies daily use of the truck by providing personally configurable favourites. The display-operating unit also monitors the truck functions, including each individual cell in the lithium-ion battery.



General

The truck described in these operating instructions corresponds to the applicable standards and safety regulations.

If the truck is to be operated on public roads, it must conform to the existing national regulations for the country in which it is being used. The driving permit must be obtained from the appropriate office.

The truck has been fitted with state-of-the-art technology. Following these operating instructions will allow the truck to be handled safely. By complying with the specifications in these operating instructions, the functionality and the approved features of the truck will be retained.

Get to know the technology, understand it and use it safely - these operating instructions provide the necessary information and help to avoid accidents and to keep the truck ready for operation beyond the warranty period.

Therefore:


- Before commissioning the truck, read the operating instructions and follow the instructions.
- Always follow all of the safety information contained in the operating instructions and on the truck.

CE labelling

The manufacturer uses CE labelling to indicate that the truck complies with the standards and regulations valid at the time of marketing. This is confirmed by the issued EC declaration of conformity. The CE labelling is attached to the nameplate.

An independent structural change or addition to the truck can compromise safety, thus invalidating the EC declaration of conformity.

The EC declaration of conformity must be carefully stored and made available to the responsible authorities.

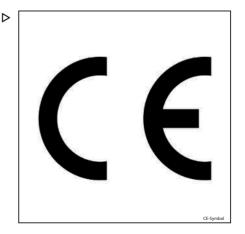



Your truck

EC declaration of conformity in accordance with Machinery Directive

	Declaration		
STILL GmbH Berzeliusstraße 10 D-22113 Hamburg Germany			
We declare that the			
Industrial truck Model	according to these operating instructions according to these operating instructions		
conforms to the latest version of the Machinery Directive 2006/42/EC.			
Personnel authorised to compile the technical documents:			
See EC compliance declaration			
STILL GmbH			




Accessories

- Two keys for the key switch (not for trucks with the "Switch on via push button" variant)
- Two keys for the cab (variant)
- Two keys for the storage box containing the charging cable for the on-board charger (variant)
- A hexagon socket wrench for emergency lowering (in the compartment)
- · A battery change frame




Labelling points

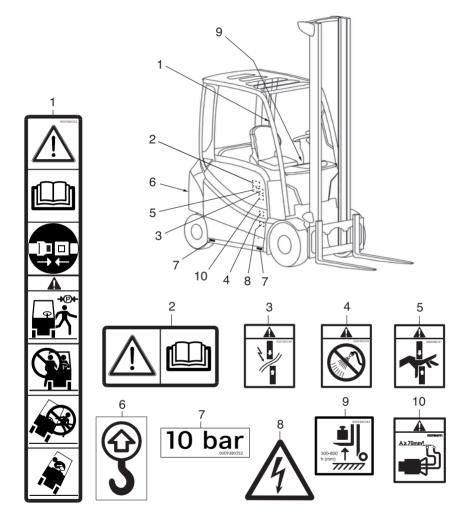



- Decal information: Caution / Read the operating instructions / Fasten seat belt / Apply parking brake when leaving the truck / Passengers are not allowed / Do not jump off if the truck is tipping over / Lean in the opposite direction to which the truck is tipping
- 2 Decal information: Caution / Read the operating instructions
- 3 Warning sign: Risk of short circuit due to shearing
- 4 Warning sign: Cleaning electrical system parts with water is forbidden
- 5 Warning sign: Danger due to shearing
- 6 Decal information: Lifting gear fixing point
- 7 Decal information: Tyre filling pressure
 8 Warning sign: Dangerous electrical voltage
- 8 Warning sign: Dangerous electrical voltage 9 Decal information: Load measurement
- 10 Warning sign: Cable cross-section



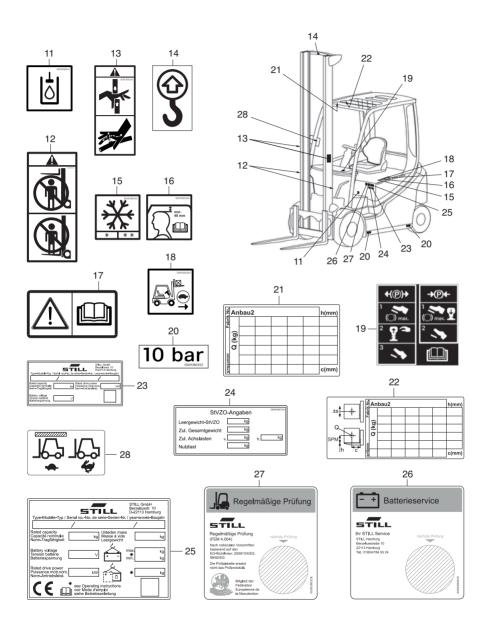




- 11 Decal information: Hvdraulic oil tank
- 12 Warning sign: Do not stand underneath the fork / Do not stand on the fork
- 13 Warning sign: Danger due to shearing / Danger due to high fluid pressure
- 14 Decal information: Lifting gear fixing point
- 15 Decal information: Cold store application (variant)
- 16 Decal information: Check head clearance
- 17 Decal information: Caution / Read the operating instructions
- 18 Decal information: Speed reduction
- Decal information: Emergency operation of 19 the parking brake

Nameplate

The truck can be identified from the information on the nameplate.

- 1 Type
- 2 Production number
- 3 Year of manufacture
- 4 Tare weight in kilograms
- 5 Maximum permitted battery weight in kilograms (only for electric trucks)
- 6 Minimum permitted battery weight in kilograms (only for electric trucks)
- 7 Ballast weight in kilograms (only for electric trucks)
- 8 Data matrix code
- 9 For more detailed information, refer to the technical data in the operating instructions
- 10 CE labelling
- Nominal drive power in kilowatts 11
- Battery voltage V 12
- 13 Rated capacity in kilograms

- 20 Decal information: Tyre filling pressure
- 21 Decal information: Load capacity: Attachment
- 22 Decal information: Load capacity: Basic table
- 23 Nameplate without CE labelling
- 24 Decal information: StVZO (German Road Traffic Licensing Regulations) information
- 25 Nameplate with CE labelling
- 26 Decal information: Battery service 27
- Decal information: Regular testing
- 28 Decal information: Ceiling sensor

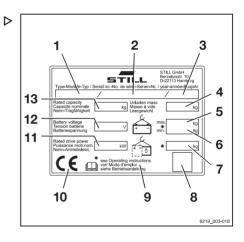




Production number

The production number is used to identify the truck. It can be found on the nameplate and must be referred to in all technical questions.


The production number contains the following coded information:

 
- (1) Production location
- (2) Model
- (3) Year of manufacture
- (4) Sequential number



This label includes information on the weight and load distribution of the truck in kg.

- 1 Tare weight
- 2 Total permissible weight
- 3 Permitted front axle load
- 4 Permitted rear axle load
- 5 Payload

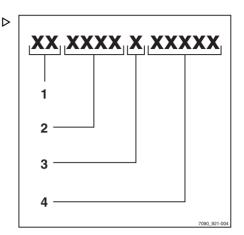


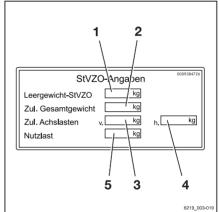



Nameplate of a lithium-ion battery

- 1 Manufacturer
- 2 Technology
- 3 Transportation notes
- 4 General operating notes
- 5 Data matrix code for the authorised service centre
- 6 CE labelling
- 7 Safety information
- 8 Data/technical data
- 9 Address of manufacturer

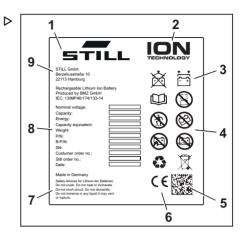



Using the truck

Using the truck

Commissioning

Commissioning is the initial intended use of the truck.

The necessary steps for the commissioning vary depending on the model and equipment of the truck. These steps require preparatory work and adjustment work that cannot be performed by the operating company. See also the chapter entitled "Definition of responsible persons".

 To commission the truck, contact the authorised service centre.

Proper usage

The truck described in these operating instructions is suitable for lifting, transporting and stacking loads.

The truck may only be used for its proper purpose as set out and described in these operating instructions.

If the truck is to be used for purposes other than those specified in the operating instructions, the approval of the manufacturer and, if applicable, the relevant regulatory authorities must be obtained beforehand to prevent hazards.

The maximum load to be lifted is specified on the capacity rating plate (load diagram) and must not be exceeded; see also the chapter entitled "Before picking up a load".

Proper use during towing

This truck is suitable for the occasional towing of trailers and is equipped with a towing device for this purpose. This occasional towing may not exceed 2% of the daily operating time. If the truck is to be used for towing on a more regular basis, the manufacturer should be consulted.

The regulations regarding trailer operation must be observed; see chapter "Trailer operation".



Impermissible use

The operating company or driver, and not the manufacturer, is liable for any hazards caused by improper use.



Please observe the definition of the following responsible persons: "operating company" and "driver".

Use for purposes other than those described in these operating instructions is prohibited.



There is a risk of fatal injury from falling off the truck while it is moving!

 It is prohibited to carry passengers on the truck.

The truck may not be operated in areas where there is a risk of fire, explosion or corrosion, or in areas that are particularly dusty.

Stacking or unstacking is not permissible on inclined surfaces or ramps.

Place of use

The truck can be used both outside and in buildings. Operation on public roads is only permitted if the "StVZO" (German Road Traffic Licensing Regulations) equipment variant is installed.

If the truck is to be operated on public roads, the truck must conform to the national regulations for the country in which it is being used.

The ground must have an adequate load capacity (concrete, asphalt) and a rough surface. Roadways, working areas and aisle widths must conform to the specifications in these operating instructions; see the chapter entitled "Roadways".

Driving on upward and downward gradients is permitted provided the specified data and specifications are observed, see the "Routes "chapter.



Using the truck

The truck is suitable for indoor and outdoor use in countries ranging from the Tropics to Nordic regions (temperature range: -20°C to +40°C).

If the truck is to be used in a cold store, it must be configured accordingly and, if necessary, approved for such an environment; see the chapter entitled "Cold store application".

A CAUTION

Batteries can freeze!

If the truck is parked in an ambient temperature of below -10°C for an extended period, the batteries will cool down. The electrolyte may freeze and damage the batteries. The truck is then not ready for operation.

 At ambient temperatures of below -10°C, only park the truck for short periods of time.

The operating company must ensure suitable fire protection for the relevant application in the truck's surroundings. Depending on the application, additional fire protection must be provided on the truck. If in doubt, contact the relevant authorities.

Please observe the definition of the following responsible person: "operating company".

Parking in temperatures below -10°C

A CAUTION

Batteries can freeze!

If the truck is parked in an ambient temperature below -10°C for an extended period, the batteries will cool down. The electrolyte may freeze and damage the batteries. The truck is then not ready for operation.

 When the ambient temperature is below -10°C, only park the truck for short periods of time.



Using working platforms

A WARNING

The use of working platforms is regulated by national law. The use of working platforms is only permitted by virtue of the jurisdiction in the country of use.

- Observe national legislation.
- Before using working platforms, consult the national regulatory authorities.



Information about the documentation

Scope of the documentation

- · Original operating instructions of the truck
- Original operating instructions of the display-operating unit
- Operating instructions of the installed variants that are not mentioned in the aforementioned original operating instructions
- "UPA" operating instructions or insert (depending on the truck equipment)
- · DVD with the spare parts list of the truck

These operating instructions describe all measures necessary for the safe operation and proper maintenance of the truck in all possible variants available at the time of printing. Special versions to meet customer requirements (UPA) are documented in separate operating instructions. If you have any questions, contact your authorised service centre.

Enter the production number and year of manufacture from the nameplate in the space provided:

Production number	
Year of manufacture	

Please quote the production number in all technical enquiries.

Each truck comes with a set of operating instructions. These instructions must be stored carefully and must be available to the driver and operating company at all times. The storage location is specified in the section entitled "Overview of the driver's compartment".

If the operating instructions are lost, the operating company must obtain a replacement from the manufacturer immediately.

The operating instructions are included in the spare parts list and can be reordered as a spare part.

The personnel responsible for operating and maintaining the equipment must be familiar with these operating instructions.

The operating company must ensure that all users have received, read and understood these operating instructions.



Safely store the complete documentation and pass on to the subsequent operating company when transferring or selling the truck.

Please note the definition of the following responsible persons: "operating company" and "driver".

Thank you for reading and complying with these operating instructions. If you have any questions or suggestions for improvements, or if you have found any errors, please contact the authorised service centre.

Supplementary documentation

This industrial truck can be fitted with unplanned equipment (**UPA**) that deviates from the standard equipment and/or the variants.

The UPA may be, for example:

- · Special sensors
- Special attachments
- · Towing devices
- · Customised attachments

In this case, the industrial truck has additional documentation. This may be in the form of an insert or separate operating instructions.

The original operating instructions for this industrial truck are valid for the operation of standard equipment and variants without restriction. The operational and safety information in the original operating instructions continues to be valid in its entirety unless it is countermanded in this additional documentation.

The requirements for the qualification of personnel as well as the time for maintenance may vary. This is defined in the additional documentation.

 If you have any questions, please contact your authorised service centre.



Information about the documentation

Issue date and topicality of the operating instructions

The issue date and the version of these operating instructions can be found on the title page.

STILL is constantly engaged in the further development of trucks. These operating instructions are subject to change, and any claims based on the information and/or illustrations contained in them cannot be asserted.

Please contact your authorised service centre for technical support relating to your truck.

Copyright and trademark rights

These instructions must not be reproduced, translated or made accessible to third parties —including as excerpts—except with the express written approval of the manufacturer.

Explanation of information symbols used

A DANGER

Indicates procedures that must be strictly adhered to in order to prevent the risk of fatalities.

WARNING

Indicates procedures that must be strictly adhered to in order to prevent the risk of injuries.

A CAUTION

Indicates procedures that must be strictly adhered to in order to prevent material damage and/or destruction.



For technical requirements that require special attention.





To prevent environmental damage.

List of abbreviations

This list of abbreviations applies to all types of operating instructions. Not all of the abbreviations that are listed here will necessarily appear in these operating instructions.

Abbrevi- ation	Meaning	Explanation
ArbSchG	Arbeitsschutzgesetz	German implementation of EU occupation- al health and safety directives
Betr- SichV	Betriebssicherheitsverordnung	German implementation of the EU working equipment directive
BG	Berufsgenossenschaft	German insurance company for the company and employees
BGG	Berufsgenossenschaftlicher Grundsatz	German principles and test specifications for occupational health and safety
BGR	Berufsgenossenschaftliche Regel	German rules and recommendations for occupational health and safety
DGUV	Berufsgenossenschaftliche Vorschrift	German accident prevention regulations
CE	Communauté Européenne	Confirms conformity with product-specific European directives (CE labelling)
CEE	Commission on the Rules for the Approval of the Electrical Equipment	International commission on the rules for the approval of electrical equipment
DC	Direct Current	Direct current
DFÜ	Datenfernübertragung	Remote data transfer
DIN	Deutsches Institut für Normung	German standardisation organisation
EG	European Community	
EN	European standard	
FEM	Fédération Européene de la Manutention	European Federation of Materials Han- dling and Storage Equipment
F _{max}	maximum Force	Maximum power
GAA	Gewerbeaufsichtsamt	German authority for monitoring/issuing regulations for worker protection, environ- mental protection, and consumer protec- tion
GPRS	General Packet Radio Service	Transfer of data packets in wireless net- works
ID no.	Identification number	
ISO	International Organization for Standardi- zation	International standardisation organisation



Information about the documentation

Abbrevi- ation	Meaning	Explanation
К _{рА}	Uncertainty of measurement of sound pressure levels	
LAN	Local Area Network	Local area network
LED	Light Emitting Diode	Light emitting diode
Lp	Sound pressure level at the workplace	
L _{pAZ}	Average continuous sound pressure level in the driver's compartment	
LSP	Load centre of gravity	Distance of the centre of gravity of the load from the front face of the fork backs
MAK	Maximum workplace concentration	Maximum permissible air concentrations of a substance at the workplace
Max.	Maximum	Highest value of an amount
Min.	Minimum	Lowest value of an amount
PIN	Personal Identification Number	Personal identification number
PPE	Personal protective equipment	
SE	Super-Elastic	Superelastic tyres (solid rubber tyres)
SIT	Snap-In Tyre	Tyres for simplified assembly, without loose rim parts
StVZO	Straßenverkehrs-Zulassungs-Ordnung	German regulations for approval of vehi- cles on public roads
TRGS	Technische Regel für Gefahrstoffe	Ordinance on hazardous materials appli- cable in the Federal Republic of Germany
VDE	Verband der Elektrotechnik Elektronik In- formationstechnik e. V.	German technical/scientific association
VDI	Verein Deutscher Ingenieure	German technical/scientific association
VDMA	Verband Deutscher Maschinen- und Anla- genbau e. V.	German Mechanical Engineering Industry Association
WLAN	Wireless LAN	Wireless local area network




1

Information about the documentation

Definition of directions

The directions "forwards" (1), "backwards" (3), "right" (2) and "left" (4) refer to the installation position of the parts as seen from the driver's compartment; the load is to the front.

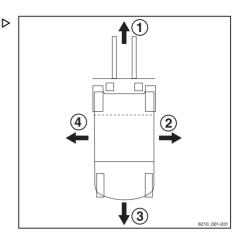


Schematic views

View of functions and operating procedures

At many points in this documentation, the (mostly sequential) operation of certain functions or operating procedures is explained. Schematic diagrams of a counterbalance truck are used to illustrate these procedures.

These schematic views are not representative of the structural state of the documented truck. The views are used solely for the purpose of clarifying procedures.

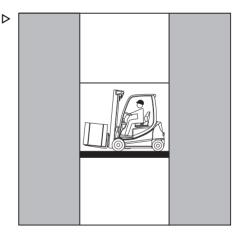




Information about the documentation

View of the display-operating unit

i NOTE

Views of operating statuses and values in the display of the display and operating unit are examples and partly dependent on the truck equipment. As a result, the displays shown of the actual operating statuses and values may vary.

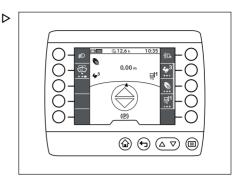



Environmental considerations

Packaging

During delivery of the truck, certain parts are packaged to provide protection during transport. This packaging must be removed completely prior to initial start-up.



The packaging material must be disposed of properly after delivery of the truck.

Disposal of components and batteries

The truck is composed of different materials. If components or batteries need to be replaced and disposed of, they must be:

- · disposed of,
- treated or
- · recycled in accordance with regional and national regulations.



The documentation provided by the battery manufacturer must be observed when disposing of batteries.



ENVIRONMENT NOTE

We recommend working with a waste management company for disposal purposes.



Environmental considerations



2

Safety

Definition of responsible persons

Operating company

The operating company is the natural or legal person or group who operates the truck or on whose authority the truck is used.

The operating company must ensure that the truck is only used for its proper purpose and in compliance with the safety regulations set out in these operating instructions.

The operating company must ensure that all users read and understand the safety information.

The operating company is responsible for the scheduling and correct performance of regular safety checks.

We recommend that the national performance specifications are adhered to.

Specialist

A qualified person is defined as a service engineer or a person who fulfils the following requirements:

- A completed vocational qualification that demonstrably proves their professional expertise. This proof should consist of a vocational qualification or a similar document.
- Professional experience indicating that the qualified person has gained practical experience of industrial trucks over a proven period during their career During this time, this person has become familiar with a wide range of symptoms that require checks to be carried out, such as based on the results of a hazard assessment or a daily inspection
- Recent professional involvement in the field of the industrial truck test in question and an appropriate further qualification are essential. The qualified person must have experience of carrying out the test in question or of carrying out similar tests. Moreover, this person must be aware of the latest technological developments regarding the industrial truck to be tested and the risk being assessed



Drivers

This truck may only be driven by suitable persons who are at least 18 years of age, have been trained in driving, have demonstrated their skills in driving and handling loads to the operating company or an authorised representative, and have been specifically instructed to drive the truck. Specific knowledge of the truck to be operated is also required.

The training requirements under §3 of the Health and Safety at Work Act and §9 of the plant safety regulations are deemed to have been satisfied if the driver has been trained in accordance with BGG (General Employers' Liability Insurance Association Act) 925. Observe the national regulations for your country.

Driver rights, duties and rules of behaviour

The driver must be trained in his rights and duties.

The driver must be granted the required rights.

The driver must wear protective equipment (protection suit, safety footwear, safety helmet, industrial goggles and gloves) that is appropriate for the conditions, the job and the load to be lifted. Solid footwear should be worn to ensure safe driving and braking.

The driver must be familiar with the operating instructions and have access to them at all times.

The driver must:

- have read and understood the operating manual
- have familiarised himself with safe operation of the truck
- be physically and mentally able to drive the truck safely

A DANGER

The use of drugs, alcohol or medications that affect reactions impair the ability to drive the truck!

Individuals under the influence of the aforementioned substances are not permitted to perform work of any kind on or with the truck.



Definition of responsible persons

Prohibition of use by unauthorised persons

The driver is responsible for the truck during working hours. He must not allow unauthorised persons to operate the truck.

When leaving the truck, the driver must secure it against unauthorised use, e.g. by pulling out the key.



Basic principles for safe operation

Insurance cover on company premises

In many cases, company premises are restricted public traffic areas.

The business liability insurance should be reviewed to ensure that, in the event of any damage caused in restricted public traffic areas, there is insurance cover for the truck in respect of third parties.

Special notes for using lithium-ion batteries

The following special features apply for the operating company and drivers when this truck is equipped with a lithium-ion battery (variant) in place of a conventional lead-acid battery.



A DANGER

Risk of explosion!

Heating to over 80°C, mechanical stress and incorrect use may lead to the battery exploding.

- Never heat the battery to over 80°C or expose it to naked flames.
- Do not subject the battery to excessive mechanical loads.
- Do not climb on the battery.
- Avoid impacts.
- Do not open the battery.
- Never short-circuit the battery connectors.
- Do not connect the battery with the polarity reversed.



Basic principles for safe operation

Permissible lithium-ion batteries

 Use only lithium-ion batteries that have been approved by STILL for use with this truck.

Declaring the use of lithium-ion batteries

We recommend that the operating company informs the local fire brigade of the planned use of trucks fitted with lithium-ion batteries.

The health and safety representative and the workforce must also be informed that trucks with lithium-ion batteries are being used.

Hazard assessment

In accordance with §3 of the German Ordinance on Industrial Safety and Health (Betr-SichV), the operating company is obliged to perform a separate hazard assessment in order to assess the risks posed to the company by lithium-ion batteries.

 Observe the national regulations for the country in which the truck is being used.

Driver qualification

In addition to the prerequisites set out in the chapter entitled "Definition of responsible persons", in the section entitled "Driver", please observe the following:

- The driver must be instructed in how to operate the lithium-ion battery.
- This truck must only be driven by drivers who have received instruction on the operation and the dangers of the lithium-ion batteries.

Procedure in the event of a fire

Damaged lithium-ion batteries pose an increased fire hazard. In the event of a fire, large quantities of water are the best option to cool the battery.

 Evacuate the location of the fire as quickly as possible.



- Ventilate the location of the fire well, as the resulting combustion gases are corrosive if inhaled.
- Inform the fire brigade that lithium-ion batteries are affected by the fire.
- Observe the information provided by the battery manufacturer regarding the procedure in the event of a fire.

Water can be used to cool down an incipient fire.

Transport

In certain circumstances, transporting the lithium-ion battery outside the premises may require a special transport container.

 Contact the authorised service centre for more information.



Basic principles for safe operation

Product-specific dangers of the 24.1-kWh & 60-kWh lithium-ion battery



Risk of burns due to hot surfaces!

The battery has an integrated brake resistor that can heat up to over 100°C during operation.

It can take several hours for the brake resistor to cool down to a temperature at which it poses no risk.

Do not touch the hot area (1).

WARNING

Risk of injury!

If the safety valve (2) trips, there is a risk of injury!


 Exit the area around the battery immediately, retreating to a minimum distance of 5 m.

The brake resistor (1) is installed differently depending on the battery group. The build-up of heat in the area around the brake resistor is harmless. The safety valve (2) opens when the battery is subjected to over pressure or catches fire.

All lithium-ion batteries are essentially associated with the risk of a fire starting, of the battery exploding and of the battery causing chemical burns.

If the batteries are used properly, no hazardous substances escape from the closed tray. No contact with toxic substances is possible. There is a risk of contact only in the event of incorrect use (mechanical, thermal, electrical) that leads to activation of the safety valve (2) or to the housing cracking. As a result, the electrolyte fluid may leak out, the electrode material may react with moisture/water or battery discharge/a fire/or an explosion can occur, depending on the surrounding circumstances.

Touching live components can cause an electric shock, which can have thermal or

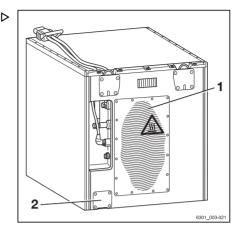



paralysing effects. The latter can cause ventricular fibrillation, cardiac arrest or respiratory paralysis, leading to death.

If a battery combusts, the resulting smoke or vapours can cause irritation of the eyes, skin and respiratory system.

Modifications and retrofitting

If the truck will be used for work that is not listed in the directives or in these instructions, convert or retrofit the truck for this purpose as required. Any structural modification can impair the handling and stability of the truck, and can result in accidents.

Any modifications that adversely affect the stability, the load capacity or the circumferential view of the truck require written approval from the manufacturer.

The following components may only be modified with prior written approval from the manufacturer:

- Brakes
- Steering
- · Operating devices
- Safety systems
- Equipment variants
- · Attachments

The truck may only be converted with written approval from the manufacturer. If necessary, obtain approval from the relevant authorities.

 Only the authorised service centre is permitted to perform welding work on the truck.

We warn against installing and using restraint systems that have not been approved by the manufacturer.

 Contact the authorised service centre before converting or retrofitting the truck.

Only the authorised service centre is permitted to perform welding work on the truck.



Basic principles for safe operation



A DANGER

Risk of explosion from additional bores in the battery hood!

Explosive gases can escape and can lead to potentially fatal injuries if they explode. Sealing bores with plugs is not sufficient to prevent gas from escaping.

Do not drill any holes in the battery hood.

A DANGER

Risk of accident from additional holes in the battery hood!

The rigidity of the battery hood is impaired and the battery hood can break. The driver's seat may collapse into the battery hood, which could cause the driver to perform uncontrolled steering and driving manoeuvres.

- Do not drill any holes in the battery hood.

A DANGER

Risk of fatal injury from falling load!

There is a risk to the driver's life if the truck is not equipped with an overhead guard, as the driver may be struck by a load falling from a lift height of 1800 mm or greater.

Operation of the truck without an overhead guard is prohibited at a lift height greater than 1800 mm.

 At lift heights of 1800 mm and above, only use the truck in conjunction with an overhead guard.

The operating company is only permitted to make modifications to the truck independently if the manufacturer goes into liquidation and the company is not taken over by another legal person.

The operating company must also fulfil the following prerequisites:

- Design documents, test documents and assembly instructions associated with the modification must be permanently archived and remain accessible at all times.
- The capacity rating plate, the decal information, the hazard warnings and the operating instructions must be checked to ensure that they are consistent with the modifications and must be amended if required.
- Modifications must be designed, checked and implemented by a design office that



specialises in industrial trucks. The design office must comply with the standards and directives valid at the time that modifications are made.

Decal information with the following data must be permanently affixed to the truck so that it is clearly visible:

- · Type of modification
- · Date of modification
- Name and address of the company that carried out the modification

Changes to the overhead guard and roof loads

A DANGER

In the event of the overhead guard failing due to a failing load or the truck tipping over, there are potentially fatal consequences for the driver. There is a risk to life!

Welding and drilling on the overhead guard changes the material characteristics and the structural design of the overhead guard. Excessive forces caused by falling loads or the truck tipping over may result in buckling of the modified overhead guard and no protection for the driver.

- Do not perform welding on the overhead guard.
- Do not perform drilling on the overhead guard.

A CAUTION

Heavy roof loads damage the overhead guard!

To ensure the stability of the overhead guard at all times, a roof load may only be mounted on the overhead guard if the structural design has been tested and the manufacturer has given approval.

 Seek advice from the authorised service centre for the mounting of roof loads.

Warning regarding non-original parts

Original parts, attachments and accessories are specially designed for this truck. We specifically draw your attention to the fact that parts, attachments and accessories supplied by other companies have not been tested and approved by STILL.



Basic principles for safe operation

A CAUTION

Installation and/or use of such products may therefore have a negative impact on the design features of the truck and thus impair active and/or passive driving safety.

We recommend that you obtain approval from the manufacturer and, if necessary, from the relevant regulatory authorities before installing such parts. The manufacturer accepts no liability for any damage caused by the use of non-original parts and accessories without approval.

Damage, defects and misuse of safety systems

Damage or other defects on the truck or attachment must be reported to the supervisor or responsible fleet manager immediately so that they can have the defect rectified.

Trucks and attachments that are not functional or safe to drive may not be used until they have been properly repaired.

Do not remove or deactivate safety systems and switches.

Fixed set values may only be changed with the approval of the manufacturer.

Work on the electrical system (e.g. connecting a radio, additional headlights etc.) is only permitted with the manufacturer's written approval. All electrical system interventions must be documented.

Even if they are removable, roof panels may not be removed, as they are designed to protect against small falling objects.

Tyres

A DANGER

Risk to stability!

Failure to observe the following information and instructions can lead to a loss of stability. The truck may tip over, risk of accident!



Safety

Basic principles for safe operation

The following factors can lead to a loss of stability and are therefore **prohibited**:

- Different tyres on the same axle, e.g. pneumatic tyres and superelastic tyres
- · Tyres not approved by the manufacturer
- · Excessive tyre wear
- · Tyres of inferior quality
- · Changing rim wheel parts
- Combining rim wheel parts from different manufacturers

The following rules must be observed to ensure stability:

- Only use tyres with equal and permitted levels of wear on the same axle
- Only use wheels and tyres of the same type on the same axle, e.g. only superelastic tyres
- Only use wheels and tyres approved by the manufacturer
- · Only use high-quality products

Wheels and tyres approved by the manufacturer can be found on the spare parts list. If other wheels or tyres are to be used, authorisation from the manufacturer must be obtained beforehand.

Contact the authorised service centre on this matter.

When changing wheels or tyres, always ensure that this does not cause the truck to tilt to one side (e.g. always replace right-hand and left-hand wheels at the same time). Changes must only be made following consultation with the manufacturer.

If the type of tyre used on an axle is changed, for example from superelastic tyres to pneumatic tyres, the load diagram must be changed accordingly.

Contact the authorised service centre on this matter.



Medical equipment

WARNING

Electromagnetic interference may occur on medical devices!

Only use equipment that is sufficiently protected against electromagnetic interference.

Medical equipment, such as pacemakers or hearing aids, may not work properly when the truck is in operation.

 Ask your doctor or the manufacturer of the medical equipment to confirm that the medical equipment is sufficiently protected against electromagnetic interference.

Exercise caution when handling gas springs and accumulators

WARNING

Gas springs are under high pressure. Improper removal results in an elevated risk of injury.

For ease of operation, various functions on the truck can be supported by gas springs. Gas springs are complex components that are subject to high internal pressures (up to 300 bar). They may under no circumstances be opened unless instructed to do so, and may be installed only when not under pressure. If required, the authorised service centre will depressurise the gas spring in accordance with the regulations before removal. Gas springs must be depressurised before recycling.

- Avoid damage, lateral forces, buckling, temperatures over 80°C and heavy contamination.
- Damaged or defective gas springs must be changed immediately.
- Contact the authorised service centre.

WARNING

Accumulators are under high pressure. Improper installation of an accumulator results in an elevated risk of injury.

Before starting work on the accumulator it must be depressurised.

- Contact the authorised service centre.



Length of the fork arms

A DANGER

Risk of accident due to the incorrect selection of fork arms!

- The fork arms must match the depth of the load.

If the fork arms are too short, the load may fall off the arms after it has been picked up. In addition, be aware that the load centre of gravity may shift as a result of dynamic forces, such as braking. A load that is otherwise resting safely on the fork arms may move forwards and fall.

If the fork arms are too long, they can catch on loading units behind the load that is to be picked up. These other loading units then fall over when the load is raised.

 For help with selecting the correct fork arms, contact the authorised service centre.



Residual dangers, residual risks

Despite careful working and compliance with standards and regulations, the occurrence of other risks when using the truck cannot be entirely excluded.

The truck and all other system components comply with current safety requirements. Nevertheless, even when the truck is used for its proper purpose and all instructions are followed, some residual risk cannot be excluded.

Even beyond the narrow danger areas of the truck itself, a residual risk cannot be excluded. Persons in this area around the truck must exercise a heightened degree of awareness, so that they can react immediately in the event of any malfunction, incident or breakdown etc.

A WARNING

All persons that are in the vicinity of the truck must be instructed regarding these risks that arise through use of the truck.

In addition, we draw attention to the safety regulations in these operating instructions.

Risks can include:

- Escape of consumables due to leakages, rupture of lines and containers etc.
- Risk of accident when driving over difficult ground such as gradients, smooth or irregular surfaces, or with poor visibility etc.
- Falling, tripping etc. when moving on the truck, especially in wet weather, with leaking consumables or on icy surfaces
- Fire and explosion risks due to batteries and electrical voltages
- Human error resulting from failure to observe the safety regulations,
- Unrepaired damage or defective and worn components,
- · Insufficient maintenance and testing
- · Use of incorrect consumables
- · Exceeding test intervals

The manufacturer is not held responsible for accidents involving the truck caused by the failure of the operating company to comply



with these regulations either intentionally or carelessly.

Stability

The stability of the truck has been tested to the latest technological standards and is guaranteed provided that the truck is used properly and according to its intended purpose. These standards only take into account the dynamic and static tipping forces that can arise during specified use in accordance with the operating rules and intended purpose. However, the danger of exceeding the moment of tilt due to improper use or incorrect operation and losing stability can never be excluded.

The loss of stability can be avoided or minimised by the following actions:

- Always secure the load against slipping, e.g. by lashing.
- Always transport unstable loads in suitable containers.
- Always drive slowly when cornering.
- Drive with the load lowered.
- Even with sideshifts, align the load as centrally as possible with the truck and transport in this position.
- Avoid turning and diagonally driving across slopes or gradients.
- Never have the load facing downhill when travelling on slopes or gradients.
- Pick up only loads of the approved width.
- Always take great care when transporting suspended loads.
- Do not drive over ramp edges or steps.

Special risks associated with using the truck and attachments

Approval from the manufacturer and attachment manufacturer must be obtained each time the truck is used in a manner that falls outside the scope of normal use, and in cases where the driver is not certain that he can use



the truck correctly and without the risk of accidents.





Overview of hazards and countermeasures

This table is intended to help evaluate the hazards in your facility and applies to all drive types. It does not claim to be complete.

 Observe the national regulations for the country in which the truck is being used.

Hazard	Measure	Check note √ Complete - Not applicable	Notes
Truck equipment does not comply with local regulations	Test	0	If in doubt, consult competent factory in- spectorate or employ- ers' liability insurance association
Lack of skills and qual- ification of driver	Driver training (sit-on and stand-on)	0	BGG 925 VDI 3313 driver permit
Usage by unauthorised persons	Access with key only for authorised persons	0	
Truck not in a safe condition	Recurrent testing and rectification of defects	0	German Ordinance on Industrial Safety and Health (BetrSichV)
Risk of falling when us- ing working platforms	Compliance with na- tional regulations (different national laws)	0	German Ordinance on Industrial Safety and Health (BetrSichV) and employer's liability in- surance associations
Impaired visibility due to load	Resource planning	0	German Ordinance on Industrial Safety and Health (BetrSichV)
Contamination of respiratory air	Assessment of diesel exhaust gases	0	Technical Regulations for Hazardous Sub- stances (TRGS) 554 and the German Ordi- nance on Industrial Safety and Health (BetrSichV)
	Assessment of LPG exhaust gases	0	German threshold limit values list (MAK-Liste) and the German Ordi- nance on Industrial Safety and Health (BetrSichV)
Impermissible usage (improper usage)	Issuing of operating in- structions	0	German Ordinance on Industrial Safety and Health (BetrSichV) and



Hazard	Measure	Check note √ Complete - Not applicable	Notes	
			German Health and la- bour protection law (ArbSchG)	
	Written notice of in- struction to driver	0	German Ordinance on Industrial Safety and Health (BetrSichV) and German Health and la- bour protection law (ArbSchG)	
	Note the German Ordi- nance on Industrial Safety and Health (BetrSichV), the oper- ating instructions and the German Engineer- ing Federation (VDMA) rules	0		
When fuelling				
a) Diesel	Note the German Ordi- nance on Industrial Safety and Health (BetrSichV), the oper- ating instructions and the German Engineer- ing Federation (VDMA) rules	0		
b) LPG	Note German Social Accident Insurance (DGUV) regulation D34, the operating in- structions and the Ger- man Engineering Fed- eration (VDMA) rules	0		
When charging the traction battery	Note the German Ordi- nance on Industrial Safety and Health (BetrSichV), the oper- ating instructions and the German Engineer- ing Federation (VDMA) rules	0	Association for Electri- cal, Electronic and In- formation Technolo- gies (VDE) regulation 0510: In particular - Ensure adequate ventilation - Insulation value with- in the permissible range	
When using battery chargers	Note the German Ordi- nance on Industrial Safety and Health	0	German Ordinance on Industrial Safety and Health (BetrSichV) and	



Hazard	Measure	Check note √ Complete - Not applicable	Notes
	(BetrSichV), employ- ers' liability insurance association regulation 104 and the operating instructions		employers' liability in- surance association regulation 104
When parking LPG trucks Note the German Ordi- nance on Industrial Safety and Health (BetrSichV), employ- ers' liability insurance association regulation 104 and the operating instructions		0	German Ordinance on Industrial Safety and Health (BetrSichV) and employers' liability in- surance association regulation 104
With driverless transpor	t systems		
Roadway quality inad- equate	Clean/clear driveways	0	German Ordinance on Industrial Safety and Health (BetrSichV)
Load carrier incorrect/ slipped	Reattach load to pallet	0	German Ordinance on Industrial Safety and Health (BetrSichV)
Drive behaviour unpre- dictable	Employee training	0	German Ordinance on Industrial Safety and Health (BetrSichV)
Driveways blocked	Mark driveways Keep driveways clear	0	German Ordinance on Industrial Safety and Health (BetrSichV)
Driveways intersect	Announce right-of-way rule	0	German Ordinance on Industrial Safety and Health (BetrSichV)
No person detection during depositing and retrieval	Employee training	0	German Ordinance on Industrial Safety and Health (BetrSichV)

Danger to employees

According to the German Ordinance on Industrial Safety and Health (BetrSichV) and labour protection law (ArbSchG), the operating company must determine and assess hazards during operation, and establish the labour protection measures required for employees (Betr-SichVO). The operating company must therefore draw up appropriate operating instructions (§ 6 ArbSchG) and make them available



to the driver. A responsible person must be appointed.

Please observe the definition of the following responsible persons: "operating company" and "driver".

The construction and equipment of the truck correspond to the Machinery Directive 2006/42/EC and are therefore marked with CE labelling. These elements are therefore not included in the hazard assessment. Attachments possess their own CE labelling and likewise are not included for that reason. The operating company must, however, select the type and equipment of the trucks so as to comply with the local provisions for deployment.

The result must be documented (§ 6 ArbSchG). In the case of truck applications involving similar hazard situations, the results may be summarised. This overview (see chapter "Overview of hazards and countermeasures") provides help on complying with this regulation. The overview specifies the main hazards that are the most frequent cause of accidents in the event of non-compliance. If other major operational hazards are involved, they must also be taken into consideration.

The conditions of use for trucks are broadly similar in many plants, so the hazards can be summarised in one overview. Observe the information provided by the relevant employers' liability insurance association on this subject.



Safety tests

Carrying out regular inspections on \triangleright the truck

The operating company must ensure that the truck is checked by a specialist at least once a year or after particular incidents.

As part of this inspection, the technical condition of the truck must be completely tested with regard to accident safety. In addition, the truck must be thoroughly checked for damage that may have been caused by improper use. A test log must be created. The results of the inspection must be retained at least until a further two inspections have been carried out.

The inspection date is indicated by an adhesive label on the truck.

- Arrange for the authorised service centre to perform regular testing on the truck.
- Observe the guidelines for tests carried out on the truck in accordance with FEM 4.004.

The operating company is responsible for ensuring that any defects are remedied without delay.

- Notify your authorised service centre.



In addition, observe the national regulations for the country of use.

Insulation testing

The insulation of the truck must have sufficient insulation resistance. For this reason, insulation testing in accordance with DIN EN 1175 and DIN 43539, VDE 0117 and VDE 0510 must be conducted at least once yearly as part of the FEM testing.

The insulation testing results must be at least the test values given in the following two tables.

- For insulation testing, contact the authorised service centre.





The exact procedure for this insulation testing is described in the workshop manual for this truck.

i NOTE

The truck's electrical system and drive batteries must be checked separately.

Test values for the drive battery

Component	Recommended test voltage	Measurements		Nominal volt- age U _{Batt}	Test values
	50 VDC	Dalla		24 volts	> 1200 Ω
Battery	100 VDC	Batt+ Batt-	Battery tray	48 volts	> 2400 Ω
	100 VDC			80 volts	> 4000 Ω

Test values for the entire truck

Nominal volt- age	Test voltage	Test values for new trucks	Minimum values over the duration of the service life
24 volts	50 VDC	Min. 50 kΩ	> 24 kΩ
48 volts	100 VDC	Min. 100 kΩ	> 48 kΩ
80 volts	100 VDC	Min. 200 kΩ	> 80 kΩ



Permissible consumables

WARNING

Consumables can be dangerous!

- Observe general information and safety information regarding the use of consumables.
- Refer to the chapter entitled "Safety regulations for handling consumables".
- Note the safety datasheets provided by the manufacturer of the consumables in question.
- Only use consumables that are approved for use with this truck. The permissible consumables can be found in the maintenance data table.

Oils



Oils are flammable!

- Follow the statutory regulations.
- Do not allow oils to come into contact with hot engine parts.
- No smoking, fires or naked flames!



A DANGER

Oils are toxic!

- Avoid contact and consumption.
- If vapour or fumes are inhaled, move to fresh air immediately.
- In the event of contact with the eyes, rinse thoroughly (for at least 10 minutes) with water and then consult an eye specialist.
- If swallowed, do not induce vomiting. Seek immediate medical attention.





A WARNING

Prolonged intensive contact with the skin can result in dryness and irritate the skin!

- Avoid contact and consumption.
- Wear protective gloves.
- After any contact, wash the skin with soap and water, and then apply a skin care product.
- Immediately change soaked clothing and shoes.

A WARNING

There is a risk of slipping on spilled oil, particularly when combined with water!

 Spilt oil should be removed immediately with oilbinding agents and disposed of according to the regulations.

🕸 ENVIRONMENT NOTE

Oil is a water-polluting substance!

- Always store oil in containers that comply with the applicable regulations.
- Avoid spilling oils.
- Spilt oil should be removed immediately with oil-binding agents and disposed of according to the regulations.
- Dispose of old oils according to the regulations.

Hydraulic fluid



These fluids are pressurised during operation of the truck and are hazardous to your health.

- Do not spill the fluids.
- Follow the statutory regulations.
- Do not allow the fluids to come into contact with hot engine parts.





A WARNING

These fluids are pressurised during operation of the truck and are hazardous to your health.

- Do not allow the fluids to come into contact with the skin.
- Avoid inhaling spray.
- Penetration of pressurised fluids into the skin is particularly dangerous if these fluids escape at high pressure due to leaks in the hydraulic system. In case of such injury, immediate medical assistance is required.
- To avoid injury, use appropriate personal protective equipment (e.g. protective gloves, industrial goggles, skin protection and skin care products).

🐉 ENVIRONMENT NOTE

Hydraulic fluid is a water-polluting substance.

- Always store hydraulic fluid in containers that comply with regulations
- Avoid spills
- Spilt hydraulic fluid should be removed immediately with oil-binding agents and disposed of according to the regulations
- Dispose of old hydraulic fluid according to the regulations

Battery acid



A WARNING

Battery acid contains dissolved sulphuric acid. This is toxic.

- Avoid touching or swallowing the battery acid at all costs.
- In case of injury, seek medical advice immediately.





Battery acid contains dissolved sulphuric acid. This is corrosive.

- When working with battery acid, use appropriate PSA (rubber gloves, apron, protection goggles).
- When working with battery acid, never wear a watch or jewellery.
- Do not allow any acid to get onto clothing or skin or into the eyes. If this does happen, rinse immediately with plenty of clean water.
- In case of injury, seek medical advice immediately.
- Immediately rinse away spilt battery acid with plenty of water.
- Follow the statutory regulations.

🕸 ENVIRONMENT NOTE

 Dispose of used battery acid in line with the applicable regulations.

Disposal of consumables

ENVIRONMENT NOTE

Materials that accumulate during repair, maintenance and cleaning must be collected properly and disposed of in accordance with the national regulations for the country in which the truck is being used. Work must only be carried out in areas designated for the purpose. Care must be taken to minimise any environmental pollution.

- Soak up any spilt fluids such as hydraulic oil, brake fluid or gearbox oil using an oilbinding agent.
- Neutralise any spilt battery acid immediately.
- Always observe national regulations concerning the disposal of used oil.



Emissions

Emissions

The values specified apply to a standard truck (compare the specifications in the "Technical data" chapter). Different tyres, lift masts, additional units etc. may produce different values.

Noise emissions

The values were determined based on measuring procedures from the standard EN 12053 "Safety of industrial trucks - Test methods for measuring noise emissions", based on EN 12001, EN ISO 3744 and the requirements of EN ISO 4871.

This machine emits the following sound pressure level:

Continuous sound pressure level in the driver's compartment

L _{pAZ}	Measurement uncer- tainty K _{pA}	
70 dB(A)	4 dB(A)	

The values were determined in the test cycle on an identical machine from the weighted values for operating statuses and idling.

Time proportions:

- Lifting 18%
- Idling 58%
- Driving 24%

However, the indicated noise levels at the truck cannot be used to determine the noise emissions at workplaces according to the most recent version of **Directive 2003/10/EC** (daily personal noise pollution). If necessary, these noise emissions must be determined by the operating company directly at the workplaces under the actual conditions there (additional noise sources, special application conditions, sound reflections).

Please observe the definition of the following responsible person: "operating company".



Vibrations

The vibrations of the machine have been determined on an identical machine in accordance with the standards DIN EN 13059 "Safety of industrial trucks - Test methods for measuring vibration" and DIN EN 12096 "Mechanical vibration - Declaration and verification of vibration emission values".

Frequency-weighted effective value of acceleration on the seat

MSG 65 driver's seat	Uncertainty of meas- urement
0.57 m/s ²	1

Tests have indicated that the amplitude of the hand and arm vibrations on the steering wheel or on the operating devices in the truck is less than 2.5 m/s^2 . There are therefore no measurement guidelines for these measurements.

The personal vibration load on the driver over a working day must be determined by the operating company at the actual place of use in accordance with **Directive 2002/44/EC**, in order to consider all additional influences, such as driving route, intensity of use etc.

Please observe the definition of the following responsible person: "operating company".

¹ At the time of publication, this technical data was not yet available. Ask your authorised service centre for the required data.



Battery



A DANGER

Risk of explosion due to flammable gases!

During charging, the lead-acid battery releases a mixture of oxygen and hydrogen (oxyhydrogen gas). This gas mixture is explosive and must not be ignited.

- Make sure that there is always sufficient ventilation in working areas that are entirely or partially enclosed.
- Keep away from open flames and flying sparks.
- Do not smoke.
- Observe the safety regulations for handling the battery.

Radiation

In accordance with the guidelines DIN EN 62471:2009-03 (VDE 0837-471:2009-03), the STILL Safety-Light and the warning zone light (variant) are assigned to risk group 2 (medium risk) due to their photobiological hazard potential.




3

Overviews

Overview

Overview

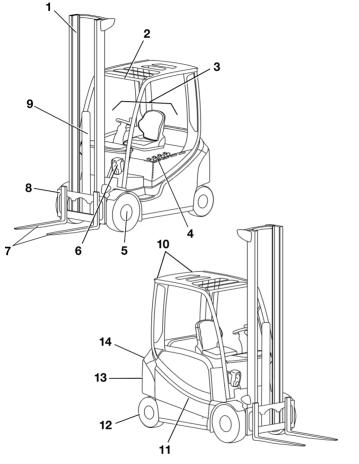

6301_003-020



Overview

- Lift mast 1
- 2 Overhead guard
- 3 4 Driver's compartment
- Battery (in the battery compartment)
- 5 Drive axle
- 6 Front lighting
- 7 Fork arms

- Fork carriage Lift cylinder 8
- 9
- Rear lighting 10
- Battery door 11
- 12 Steering axle 13
- Towing device 14
- Counterweight


i NOTE

The truck equipment may differ from the equipment shown.



Driver's compartment

Driver's compartment

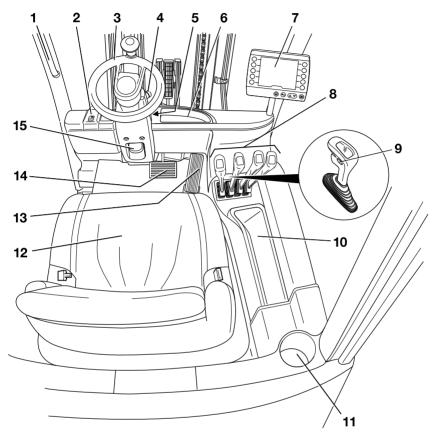

6301_003-003



Shelf and cup holder

Compartment for storing the operating in-

structions and the hexagon socket wrench

This compartment also contains the diag-

Cup holder for max. 1.5-litre bottles

Steering column adjustment lever

for emergency lowering

nostic connection.

Accelerator pedal

Driver's seat

Brake pedal

- 1 Handle
- 2 Parking brake
- 3 Steering wheel
- 4 Emergency off switch
- 5 Kev switch
- 6 Compartment
- 7 Display/control unit "STILL Easy Control"
- 8 Operating devices for hydraulic and driving functions
- 9
- Signal horn button

The truck equipment may differ from the equipment shown.

Shelf and cup holder

A WARNING

Objects may fall into the footwell and obstruct the pedals, which poses a risk of accident!

Objects that fall into the footwell during travel as a result of steering or braking may slip between the pedals (1) and prevent them from working correctly. It may then not be possible to brake the truck when necessary.

- Objects to be stored must be of the correct size so that they cannot fall from the shelf (2) or out of the cup holder (3).
- Bottles with a maximum size of 1.5 litres may be stored in the cup holder.
- Make sure that stored objects cannot fall from the shelves when the truck is started up, steered or braked.

The truck is equipped with a compartment (2) for storing the operating instructions and the hexagon socket wrench for emergency lowering. The cup holder (3) holds bottles up to 1.5 litres in size.

⊳ 2 3 6219 003-027



10

11

12


13

14

15

Operating devices and display elements

Display/control unit "STILL Easy Control"

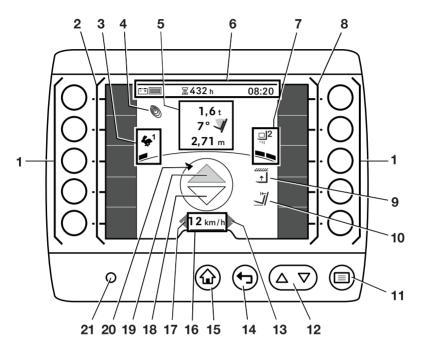


- 1 Softkeys
- 2 Left-hand favourites bar
- 3 Selected drive programme with driving dynamics display
- 4 Blue-Q symbol
- 5 Load information (variants): Load measurement Lift-mast tilt angle
- Lift height
- 6 Status bar*: battery charge, operating hours, time
- 7 Selected load programme with load dynamics display
- 8 Right-hand favourites bar

- Lift height restriction
- 10 Automatic mast vertical positioning
- 11 Menu button

9

 - 12 Scrolling buttons
- 13 "Right" turn indicator display
- 14 Back button
- 15 Main-display button
- 16 Driving speed or parking brake (®)
- 17 "Left" turn indicator display
- 18 "Reverse" drive direction indicator
- 19 "Forward" drive direction indicator
- 20 Display for direction of movement of the truck
- 21 Brightness sensor



 For additional display options, see the chapter entitled "Status bar" in the operating instructions for the "Display/operating unit".



NOTE

If the truck is equipped with the "Ceiling sensor" variant, a decal is located to the left of the "Main display button".

With the exception of cases of multi-lever operation, the display-operating unit is attached to the armrest. If the truck is equipped with multi-lever operation, the display-operating unit is swivel-mounted on the right A-pillar.


- For information on swivelling the display-operating unit, see the section entitled "Adjusting the swivelling display-operating unit" in the chapter entitled "Checks and tasks before daily use".

Do not put a label over the brightness sensor (21) or cover it with anything. This sensor allows the display to adapt to the current light conditions.

Lithium-ion battery display

The lithium-ion battery display is located on the side of the battery tray. In addition to the display-operating unit, the lithium-ion battery display also shows the charging status and information relating to the lithium-ion battery.

- Observe the chapter entitled "Display elements" in the STILL "Lithium-ion batteries" operating instructions.

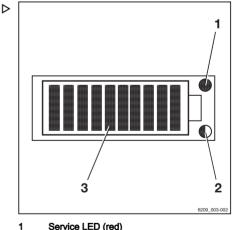

Service LED (red)

23 Temperature LED (yellow/red)


Charge state LEDs (red/green)



Emergency off switch


The emergency off switch (1) is situated on the right-hand side of the steering column. It disconnects the drives from the power supply.

Do not use this switch to park the truck safely.

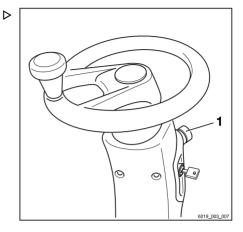



Multi-lever operation

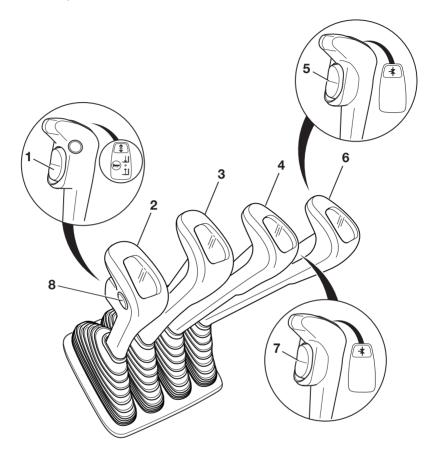


- Drive direction switch 1
- "Lift/lower" operating lever "Tilt" operating lever 2
- 3
- 4 Operating lever for attachments (variant)
- 5 Function key for the "5th function" (variant)
- 6 Operating lever for attachments (variant) 7
 - Function key for the "5th or 6th function"
- (variants) 8 Signal horn button

i NOTE

The drive direction switch (1) does not function in the dual-pedal version (variant).

STILL

Double mini-lever

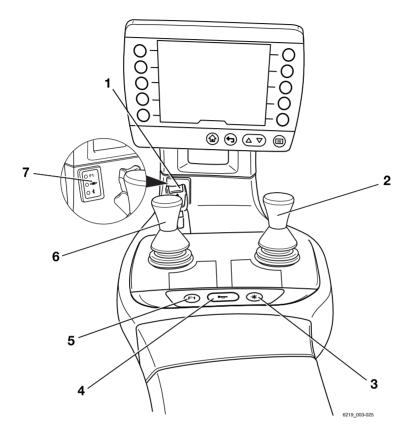

Drive direction switch 1 Cross lever "Attachments"


- 5 6 7
 - "F1" function key
 - "Lift mast" 360° lever Display field for the hydraulic functions

- 2 3 Function key for the "5th function" 4 Signal horn button

i NOTE

The authorised service centre can assign different functions to the "F1" function key.

Triple mini-lever

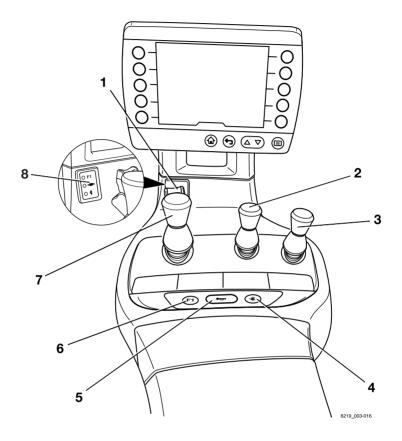

- Drive direction switch 1
- 2 3
- "Auxiliary hydraulics 1" operating lever "Auxiliary hydraulics 2" operating lever


The authorised service centre can assign different functions to the "F1" function key.

- 4 Function key for the "5th function"
- Signal horn button "F1" function key 5
- 6 7
 - "Lift mast" 360° lever
- 8 Display field for the hydraulic functions



i NOTE

Quadruple mini-lever

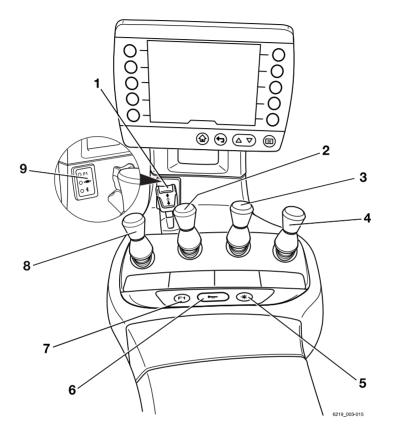

- 1
- 2 3 4
- Drive direction switch "Tilt" operating lever "Auxiliary hydraulics 1" operating lever "Auxiliary hydraulics 2" operating lever
- 5 Function key for the "5th function"

6 7

8 9

- Signal horn button "F1" function key
- "Lift/lower" operating lever Display field for the hydraulic functions


i NOTE

The authorised service centre can assign different functions to the "F1" function key.



56378011501 EN - 12/2019 - 04

Fingertip

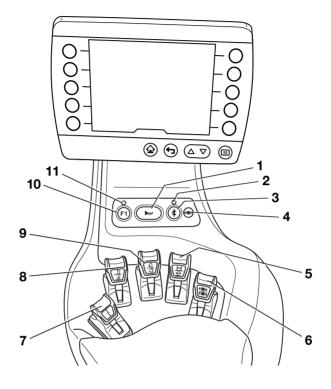


- Signal horn button 1
- LED for the "5th function"
- 2 3 Function key for the "5th function"
- LED for the "Clamp release"
- 4 5 6 Operating lever for "Auxiliary hydraulics 1"
 - Operating lever for "Auxiliary hydraulics 2"
- 7 Drive direction switch
- "Lift/lower" operating lever 8
- "Tilt" operating lever 9
- "F1" function key 10 LED for "F1" 11

i NOTE

The authorised service centre can assign different functions to the "F1" function key.



Joystick 4Plus

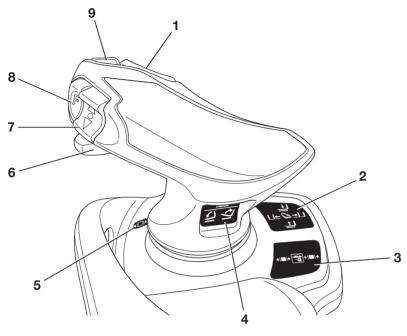

- Horizontal rocker button for the "3rd and 1 2
- 4th hydraulic function": tilting the lift mast Pictograms for the hydraulic functions: lift-ing, lowering and sideshift Pictograms for the 5th hydraulic function and
- 3 for the clamp locking mechanism (variant) 4
- Pictograms for the 3rd and 4th hydraulic function

- LED for the "clamp release" (variant)
- Slider for the "4th hydraulic function"
- Vertical rocker button for the "drive direction"
- 8 9

5 6 7

Shift key "F" Signal horn button


i NOTE

The authorised service centre can assign different functions to the shift key "F", e.g. switchover of the control axles for actuation of the 5th hydraulic function.



Mini-console

The mini console is located on the steering column below the steering wheel.

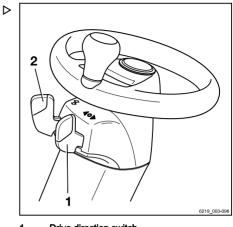

1 Drive direction switch 2 Turn indicator switch





4

Operation

Visual inspections and function checking




WARNING

Risk of injury from falling off the truck!

When climbing onto the truck, there is a risk of getting stuck or slipping and falling. Use suitable equipment to reach higher points on the truck.

- Use only the steps provided for this purpose to climb onto the truck.
- Use equipment such as stepladders or platforms to reach inaccessible areas.

Damage to the truck or the attachment (variant), non-functional switches or safety systems and modification of predefined set values can lead to unpredictable and dangerous situations. To ensure that the truck is operated safely, the visual inspections and function checking must be carried out before daily use. The components that must be checked and their check points are listed in the following table. If damage or other defects are identified on the truck or the attachment (variant) during the following inspections, the truck must not be used until it has been properly repaired. Damage or other defects must be reported to the supervisor or the responsible fleet manager immediately so that repairs by the authorised service centre can be arranged.

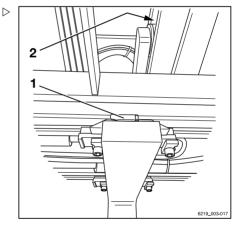

Fork arms and roller tracks

Ensure that the truck is safe for operation each day before it is used:

Component	Course of action
Fork arms, general lifting accessories	Perform a visual inspection to check for deformation and wear (e.g. to check if they are bent, broken or feature significant wear). Check the condition and function of the safety devi- ces (1) to prevent lifting and shifting.
Roller tracks (2)	Make sure that there is a film of grease.
Load chains	Perform a visual inspection to ensure that the chains are intact and have adequate and even tension.



Component	Course of action
Attachments (variant)	Ensure that the attachments are mounted correctly in accordance with the operating instructions from the manufacturer. Perform a visual inspection to ensure that the at- tachments are intact and are leak-tight. Perform checks to ensure the attachments are working correctly.
Lift cylinders, tilt cylinders, tank, valve block, hoses, pipes, connections	Perform a visual inspection for damage and leak- ages. Have damaged components replaced by the author- ised service centre.
Underside	Check the area under the truck for leaking consumables.
Wheels, tyres	Perform a visual inspection for wear and damage. Make sure that only rims of the same type from the same manufacturer are fitted. In the event of uneven tyre wear, replace both tyres. Observe the safety regulations in the section enti- tled "Tyres".
Axle	Make sure that no consumables are escaping from the axle.
Service brake	Check the filling level in the brake fluid reservoir.
Overhead guard, guard grille (variant)	Perform a visual inspection for integrity. Check for secure mounting.
Steps	Make sure they are clean (free of ice, not slippery).
Panes of glass (variant)	Perform a visual inspection for integrity. Make sure they are clean (also free of ice).
Handholds	Check for secure mounting.
Maintenance lids	Check the close function and close.
Battery hood	Make sure that there are no unused bores in the battery hood.
Battery door	Perform a visual inspection for integrity and defor- mation. Check that the interlock is in good condition and is working correctly. Check the close function. Close.
Battery	Check that the interlock is in good condition and is working correctly. Lock the battery.




Component	Course of action
Battery male connector and plug connec- tion	Inspect the battery male connector and the plug connection for moisture or any foreign objects that may have become lodged and remove as necessa- ry, e.g. using compressed air. Perform a visual inspection for integrity and defor- mation. Check the contacts. Have damaged battery male connectors replaced by the authorised service centre.
Coupling pin, tow coupling (variant)	Perform a visual inspection for deformation and wear (for example: bent, torn, broken). Check the securing bush in the counterweight for in- tegrity and to ensure that it is working correctly. Check that the linchpin is present and working cor- rectly (chain, rope, split pin).
Labelling, adhesive label	Check that labels are present and intact/legible. Replace damaged or missing adhesive labels in ac- cordance with the section entitled "Labelling points".
Driver's seat, seat belt	Check the integrity and function.
Lighting, warning units	Check the integrity and function.
Corona electrode (4) (See the following illustration.)	Perform a visual inspection for integrity. Ensure cleanliness. The discharge wires of the corona electrode (3) must not touch the ground. The wires discharge the energy to the air.

Depending on the tyres, the truck may be fitted with a corona electrode (3). This component ensures that the truck cannot charge statically.

If the truck is fitted with "non-marking" tyres, the authorised service centre must retrofit a corona electrode.

- Do not use the truck if there is any damage or defects.
- In this case, contact your authorised service centre.

Any other necessary tasks are summarised under their own headings, e.g. adjusting the driver's seat.

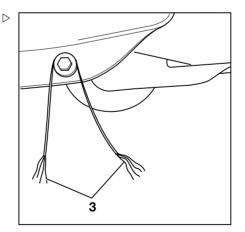



Climbing into and out of the truck

A WARNING

Risk of injury when climbing into and out of the truck due to slipping, striking parts of the truck or becoming stuck!

If the footwell cover is very dirty or smeared with oil, there is a risk of slipping. There is also a risk of hitting your head on the post of the overhead guard or of your clothes becoming stuck when climbing out of the truck.

- Ensure that the footwell cover is not slippery.
- Do not jump into or out of the truck.
- Ensure that you have a secure grip on the truck.

A WARNING

Risk of injury when jumping out of the truck!

If your clothing or jewellery (e.g. watch, ring etc.) becomes stuck on a component while you are jumping into or out of the truck, this can lead to serious injuries (from falling, loss of fingers etc.). It is forbidden to jump out of the truck.

- Do not jump out of the truck.
- Do not wear jewellery at work.
- Do not wear loose-fitting workwear.

A CAUTION

Components may become damaged through incorrect use!

Truck components, such as the driver's seat, steering wheel etc., are not designed to be used for climbing in and out of the truck and may be damaged due to misuse.

 Only use the fittings specifically designed for the purpose of climbing into and out of the truck.



To assist with climbing into and out of the truck, use the step (1), use the footwell (2) as a step and use the handle (4) for support. The post of the overhead guard (3) can also be used for support.

Always climb into the truck facing forwards:

- Grip the handle (4) with your left hand and do not let go.
- Place your left foot on the step (1).
- Climb into the truck with your right foot and sit down on the driver's seat (5).
- Next, place your left foot into the footwell (2).

Always climb out of the truck backwards:

- Grip the handle (4) with your left hand and do not let go.
- Stand up from the driver's seat (5) and place your left foot on the step (1).
- Climb out of the truck right foot first.

Adjusting the driver's seat

WARNING

Risk of accident from sudden adjustment of the seat or of the seat backrest!

The inadvertent adjustment of the seat or of the seat backrest can lead to uncontrolled movements by the driver. The steering or the operating devices can then be actuated unintentionally. This may cause uncontrolled movements of the truck or of the load.


- Do not move the seat or the seat backrest while the truck is in motion.
- Adjust the seat and the seat backrest so that all operating devices can be actuated safely.
- Ensure that the seat and the seat backrest are securely engaged.



A WARNING

On some equipment variants, the amount of head clearance on the truck may be restricted.

On these specific equipment variants, the distance between the head and the lower edge of the roofing sheet must be at least 40 mm.

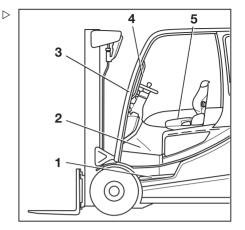



Observe any separate operating instructions for the seat.


WARNING

To obtain optimum seat cushioning, you must adjust the seat suspension to your own body weight. This course of action is better for your back and protects your health.

To avoid injuries, keep the swivel area of the seat clear of objects.

Moving the driver's seat

- Raise the lever (1) and hold it in position.
- Push the driver's seat into the required position.
- Release the lever.
- Ensure that the driver's seat is securely engaged.

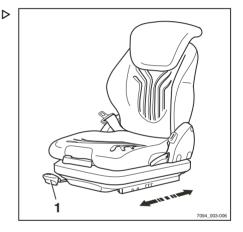



Adjusting the seat backrest

When the seat backrest is released, do not put pressure on the seat backrest.

- Raise the lever (2) and hold it in position.
- Push the seat backrest into the required position.
- Release the lever
- Ensure that the seat backrest is securely engaged.

i] NOTE

Δ

The backwards tilt angle of the seat backrest can be restricted by the structural conditions in the truck.

Adjusting the MSG 65/MSG 75 seat suspension





The MSG 65/MSG 75 driver's seat is designed for people weighing between 45 kg and 170 kg. The driver's seat can be adjusted to suit the weight of the individual driver. To obtain optimal settings for the seat suspension, the driver must perform the adjustment whilst sitting on the seat.

NOTE

The MSG 75 seat is equipped with electric air suspension that is activated using an electric switch instead of the lever (3).

- Fold out the weight adjusting lever (3).
- Pump the lever up or down to set the driver's weight.
- Return the weight-adjusting lever to the initial central position each time before raising it again (a click can be heard when this position is reached).
- Retract the weight adjusting lever once the adjustment is complete.

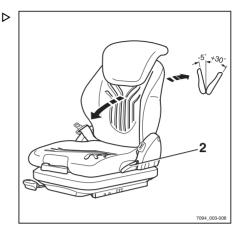

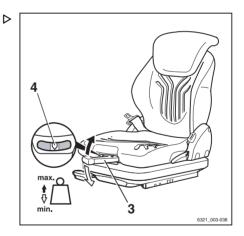



The correct driver's weight has been selected when the arrow (4) is in the centre position in the inspection window. Once the minimum or maximum weight setting is reached, the seat will not move any further even when you pump the weight adjusting lever.

Adjusting the MSG 75 E seat suspension

The MSG 75 E driver's seat is designed for persons weighing between 45 kg and 160 kg. It is equipped with electric air suspension that automatically adjusts to the driver's weight.


- Sit on the driver's seat.
- Turn the key switch to the "I" position.

The seat automatically adjusts to the driver's weight.

Adjusting the lumbar support (variant)

The lumbar support can be adjusted to suit the contours of the individual driver's spine. Adjusting the lumbar support moves a convex support cushion into the upper or lower part of the backrest.

 Turn the turning knob (5) up or down until the lumbar support is in the required position.

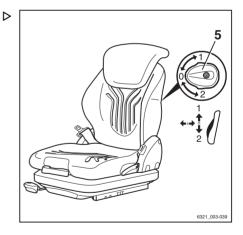




Adjusting the backrest extension (variant)

- Adjust the backrest extension (6) by pulling it out or pushing it into the desired position.

To remove the backrest extension, move it past the end stop by firmly pushing it upwards.

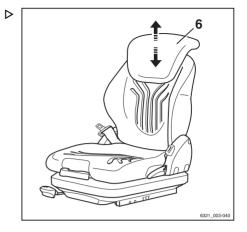


Switching the seat heater (variant) on and off



i NOTE

The seat heater only works if the driver is sitting on the driver's seat.

- Switch the seat heater (7) on or off using the switch.

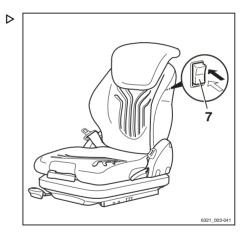



Swivelling the driver's seat to the right for reverse travel (variant)

A WARNING

Risk of accident due to the seat swivelling.

If the driver's seat swivels while the truck is in motion, the seat position is unstable.

Swivel the driver's seat only when the truck is at a standstill.

The driver's seat can be swivelled to the right to make reverse travel easier. The optimised seat position means that it is not necessary to turn your upper body as far. This makes it easier to look backwards.


To swivel the seat to the right for reverse travel:

- Sit on the driver's seat.
- To swivel the driver's seat, pull the lever (8) back and hold it in position.
- Swivel the driver's seat to the right until it reaches the stop.
- Move the lever (8) forwards again.
- Make sure that the driver's seat is securely engaged.

Swivelling the driver's seat to the right is intended only for reverse travel. The driver's seat must be swivelled back for forward travel.

To swivel the driver's seat back for forward travel:

- To swivel the driver's seat back to its original position, pull the lever (8) back and hold it in position.
- Swivel the driver's seat to the left until it reaches the stop.
- Move the lever (8) forwards again.
- Make sure that the driver's seat is securely engaged.

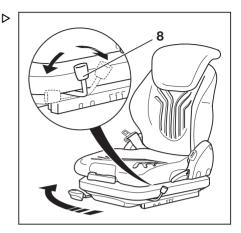



Seat belt



Risk of injury if the truck tips over!

Even if an approved restraint system is in use, there is still a residual risk that the driver could be injured if the truck tips over.

This risk of injury can be reduced through the combined use of the restraint system and the seat belt.

In addition, the seat belt protects against the consequences of rear-end collisions and falling off a ramp.

 We therefore recommend that you also use the seat belt.

A DANGER

Only bracket doors (variant) and the driver's cab (variant) with closed, fixed doors constitute driver restraint systems. Plastic doors (weather protection) do not constitute a restraint system!

If the doors are open or have been removed, you must use an alternative suitable restraint system (e.g. a seat belt)!


Fastening the seat belt

A DANGER

Risk to life when driving without a seat belt!

If the seat belt is not fastened and the truck tips over or crashes into an obstacle, the driver can be thrown out of the truck. The driver could slide under the truck or collide with an obstacle.

- Fasten the seat belt before every trip.
- Do not twist the seat belt when fastening it.
- Only use the seat belt to secure one person!
- Have any malfunctions repaired by the authorised service centre.

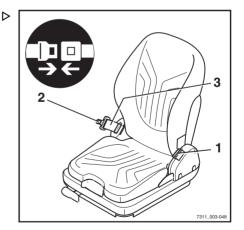



The buckle has a buckle switch. When the belt was not fastened, the following occurred:

- The message Close safety belt appears in the display-operating unit.
- The truck will not drive at speeds faster than 4 km/h.
- The hydraulic functions are blocked.
- Pull the seat belt (3) smoothly out of the belt retractor and fasten closely around the body over the thighs.

Sit back as far as possible so that your back is resting on the seat backrest. The automatic blocking mechanism permits sufficient freedom of movement on the seat.

- Click the belt tongue (2) into the buckle (1).
- Check the tension of the seat belt. The belt must fit closely around your body.

Special feature for trucks with a cab (variant)

If the truck is equipped with a cab (variant), it will have a cab door sensor. If the seat belt is not fastened and the cab door is not closed, the driving speed is limited to 4 km/h. The message Close cab door or seat belt appears in the display.

Special feature for trucks with a HSR restraint system (variant)


If the bracket is not closed, the message Close restraint system **appears** in the display.



Fastening on a steep slope

The automatic blocking mechanism prevents the belt from being extended whenever the truck is on a steep gradient. It is no longer possible to pull the seat belt out of the belt retractor.

- Move away carefully from the slope.
- Fasten the seat belt.

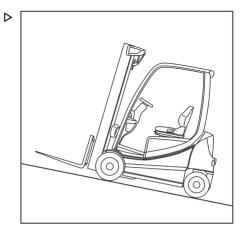

Releasing the seat belt


- Press the red button (4) on the buckle (1).
- Slowly guide the belt tongue back to the retractor by hand.

Slowly allow the seat belt to retract. The automatic blocking mechanism may be triggered if the belt tongue strikes the housing. It will then no longer be possible to pull the seat belt out with the usual force.

- Using increased force, pull the seat belt around 10 to 15 mm out of the retractor to disengage the blocking mechanism.
- Slowly allow the seat belt to retract again.
- Protect the seat belt from dirt, for example, by covering it.

Malfunction due to cold weather conditions

 If the buckle or belt retractor are frozen, thaw the buckle or the belt retractor and dry the parts to prevent them from refreezing.

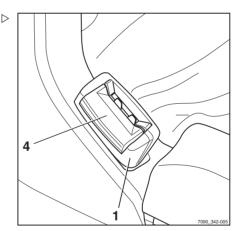



A CAUTION

The seat belt may be damaged by heat!

Do not subject the buckle or belt retractor to excessive heat when thawing.

- Do not use air warmer than 60°C when thawing.

Adjusting the armrest

A DANGER

There is a risk of accident if the armrest lowers suddenly, causing the driver to move in an uncontrolled manner.

This may result in unintentional actuation of the steering or operating devices and thus cause the truck or load to move in an uncontrolled fashion.


- Do not adjust the armrest while driving.
- Adjust the armrest so that all operating devices can be actuated safely.
- Ensure that the armrest is securely tightened.

Adjusting the length of the armrest

- Release the star-grip handle (1) by turning to the left.
- Shift the armrest (2) into the desired position.
- Tighten the star-grip handle by turning to the right.
- Check that the armrest is firmly attached.

Adjusting the height of the armrest

- Release the hand wheel (3) by turning to the left.
- Shift the armrest (2) into the desired position.
- Tighten the hand wheel by turning to the right.
- Check that the armrest is firmly attached.

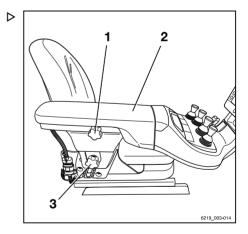



Adjusting the steering column

- Pull up and hold the lever (2) for steering column adjustment.

⊳

2

 Position the steering column (1), then push the lever down again and allow the steering column to engage.

A DANGER

Risk of accident!

 Ensure that the steering column is positioned securely.

The steering column must click into place.

Never adjust the steering column while driving.


Adjusting the swivelling display-operating unit

If the truck is equipped with multi-lever operation, the display-operating unit is swivel-mounted on the right A-pillar.

The display-operating unit can be swivelled from the neutral position to 15° to the left, right, up and down. The unit cannot rotate around its own axis.

To change the resistance for adjusting the display-operating unit, there are two socket head screws (2) on the support for the display-operating unit. The hexagon socket wrench for emergency lowering can be used to loosen or tighten the socket head screws (2).

- Loosen the socket head screws (2) as required.
- Hold the display-operating unit (1) in place.
- Adjust the display-operating unit (1) so that it can be read without glare.
- Tighten the socket head screws (2) as required.

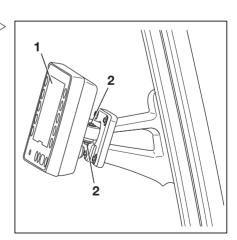



0




i NOTE

If the angle of the display-operating unit changes during driving, tighten the socket head screws. This makes the display-operating unit more secure in the support mounting.



Unlock the emergency off switch

 Turn the emergency off switch (1) clockwise until it pops out.

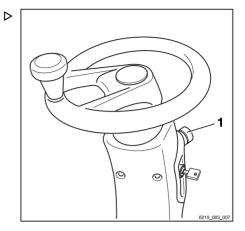




Operating the signal horn

The signal horn is used to warn people against imminent danger or to announce your intention to overtake.

- Press the signal horn button (1).

The signal horn sounds.

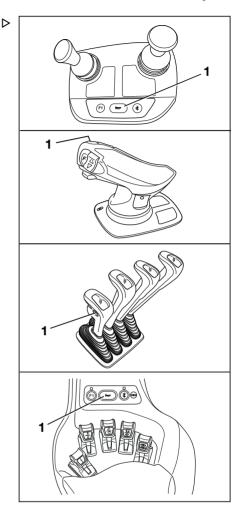



Checking the emergency off function

A WARNING

No electric braking assistance is available when the emergency off switch is actuated!

Actuating the emergency off switch disconnects the drives from the power supply.

- To brake, actuate the service brake.
- Drive the truck forwards slowly.
- Push the emergency off switch (1).

The truck will coast to a stop.


The message Emergency off active • appears on the display/operating unit.

- Stop the truck by actuating the brake pedal.

In trucks with an electric parking brake, the electric parking brake will be applied as soon as the truck comes to a stop.

 Turn the emergency off switch (1) clockwise until it pops out.

The truck performs internal self testing. It is then ready for operation again.

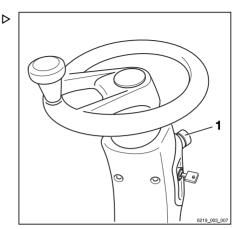



Driver's cab

A DANGER

Risk of fatal injury in the event of falling from the truck if it tips over!

In order to prevent the driver from sliding underneath the truck and being crushed if the truck tips over, a restraint system must be in place and must be used. The restraint system prevents the driver from being thrown from the truck if it tips over. The cab door must be sturdy and be closed in order for the driver's cab to function as a driver restraint system. Fabriccovered cabs (variant) with doors made of plastic or canvas do not constitute a driver restraint system and offer no protection from the consequences of the truck tipping over!

- Close the cab door before use.
- If the door is open or has been removed, use a comparably secure restraint system.
- We recommend that you always use the seat belt.

Checking the brake oil level


A brake oil reservoir is located under the cover of the emergency actuation mechanism for the electric parking brake. This brake oil reservoir supplies the oil for the service brake. The service brake is a wet-running multi-disc brake. It needs this oil.



- Lift the cover (1) and fold it up.

The brake oil level must be within the area (2) of the taper up to the neck. Do not top up the brake oil.

- If the brake oil level is lower than it should be or has visibly dropped, contact the authorised service centre.
- In this case, do not use the truck.
- The authorised service centre must rectify the cause of the reduced brake oil.

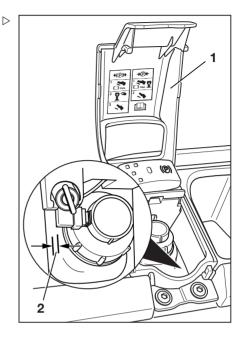





Checking the brake system for correct function

A DANGER

Δ

Risk of accident in the event of failure of the brake system!

If the brake system fails, the truck will be insufficiently braked.

Do **not** operate the truck if the brake system is faulty.

Checking the electric brake

Risk of accident if the braking effect of the electric brake is inadequate!

The braking effect of the electric brake may be insufficient for emergency braking.

 Always actuate the brake pedal (1) for emergency braking.

A DANGER

DANGER

Risk of accident due to excessive speed!

Depending on the charge state of the battery, regenerative braking may be insufficient when driving downhill, meaning that the maximum permissible speed of the truck is exceeded.

- Press the brake pedal (1).

If the driving speed is restricted or if the opposite drive direction is selected, the truck is braked using the electric brake.

To actuate this, release the accelerator pedal (2).


The truck must decelerate and remain stationary.

If the truck does not slow down, press the brake pedal (1).

Checking the service brake

- Release the parking brake.
- Press the brake pedal (1).

There must be a slight pedal clearance and then a noticeable brake pressure point.

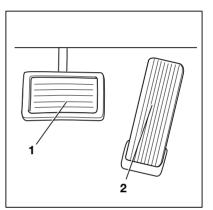



⊳

- Accelerate the unladen truck in a clear area.
- Press the brake pedal (1) firmly.

The truck must decelerate noticeably.

Checking the parking brake on a gradient or a ramp



Risk to life if the truck rolls away!

If the parking brake is not applied, the truck could run people over.

- Do not leave the truck until the parking brake has been applied.
- Stop the truck on a steep gradient (e.g. a ramp) and actuate the parking brake.

The parking brake must hold the truck on the incline.

- If the truck rolls away despite the parking brake being applied, stop the truck using the service brake.
- In an emergency, secure the truck with wedges on the downhill-facing side to prevent it from rolling away.
- Have the parking brake checked and repaired by the authorised service centre.

Checking the parking brake on a level surface

WARNING

Risk of accident from abrupt deceleration!

The truck will decelerate abruptly if the parking brake is applied.

- Fasten the seat belt.
- Use the available restraint systems.
- Find a sufficiently large and open area in which nobody will be endangered or obstructed.
- Accelerate the truck to walking speed.
- Press the emergency off switch.



When the emergency off switch is actuated, note the following:

- The electric brake is disabled. The truck no longer responds to the command issued by the accelerator pedal.
- The power steering is no longer available. Steering forces are increased due to the remaining emergency steering function.
- Release the accelerator pedal.
- Apply the parking brake.

The truck must decelerate and remain stationary.

- If the truck only coasts and does not decelerate or decelerates only slightly, stop the truck using the service brake.
- Secure the truck with chocks so that the truck does not roll away.
- Have the parking brake checked and repaired by the authorised service centre.

Special features of the electrical parking brake:

- The deceleration cannot be influenced.
- The electrical parking brake is applied moderately until the truck comes to a stop.
- The emergency off switch must be unlocked to release the electrical parking brake.

Warming up the hydraulic oil at cold ambient temperatures

If the truck has been exposed to low ambient temperatures for an extended period, because it has been parked outside during winter, for example, the hydraulic oil has a low temperature. In order to ensure smooth and safe operation of the hydraulic functions, the hydraulic oil must be at operating temperature.

 Drive the truck for approximately 5 minutes and actuate the brake several times.



 Actuate all hydraulic lifting functions several times.


During the warm-up phase, the load dynamics are limited to all load program 1

Checking the steering system for correct function

A DANGER

If the hydraulics fail, there is a risk of accident as the steering characteristics have changed.

- Do not operate the truck if it has a defective steering system.
- Operate the steering wheel (1). The steering play while stationary must not be more than two finger widths.

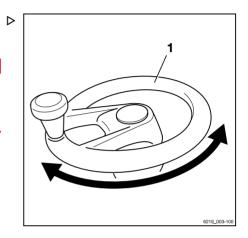


Checking the automatic mast vertical positioning (variant) for correct function

A CAUTION

Risk of damage to property due to the lift mast colliding with racks or other objects!

 Before using the "Automatic mast vertical positioning" comfort feature, position the truck at a sufficient distance from racks and other objects.

Goods, such as paper rolls, can be lowered vertically with precision using the "Automatic mast vertical positioning" comfort feature, thereby avoiding damage when unloading. "Automatic mast vertical positioning" functions when the lift mast is tilted forwards. The tilt cylinders run into the end stops gently to prevent hard vibrations and impacts. Oscillating motions of the truck are minimised, thus increasing work safety. Automatic mast vertical

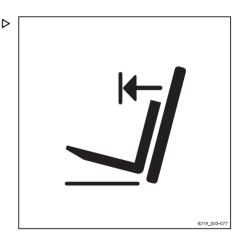



positioning reduces wear on various components and therefore reduces repair costs.

The "Automatic mast vertical positioning" comfort feature consists of the following individual functions:

- Display of the "Automatic mast vertical positioning" feature
- Automatic startup of the "Automatic mast vertical position" feature

The truck can also be fitted with only the display for the "lift mast tilt angle".

Check the function of automatic mast vertical positioning whenever the truck is used.

- Push the "automatic mast vertical positioning" softkey _/.

The J symbol appears in the display.

- Tilt back the lift mast until it reaches the end stop.
- Tilt the lift mast forwards.

The lift mast must stop in the vertical position.

The automatic mast vertical positioning can be used.

- If the lift mast does not stop in the vertical position, do not use the function.
- In this case, contact your authorised service centre.



Switching on

Switching on using the key switch

A WARNING


All checks and tasks required before daily use must have been performed without any defects being identified before switching on the truck.

- Perform the "visual inspections and functional checks".
- Do not operate the truck if defects have been detected; contact the authorised service centre.
- Insert the switch key (1) into the key switch and turn it to the "I" position.



If the truck is equipped with the "Access authorisation with PIN code" variant, the display initially changes to the input menu for access authorisation.


Once the truck is ready for operation, the main screen is shown on the display.

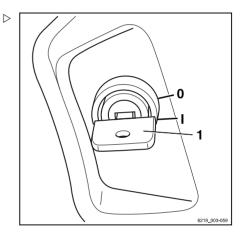

Main screen

- 1 Selected drive programme with driving dynamics display
- 2 Load information (variants)
- 3 Status bar: battery charge, operating hours, time
- 4 Selected load dynamics programme with dynamics bar
- 5 "Right" turn indicator display
- 6 Driving speed or parking brake (P)
- 7 "Left" turn indicator display
- 8 "Reverse" drive direction indicator
- 9 "Forward" drive direction indicator
- 10 Steering angle display

Additional information may appear on the display.

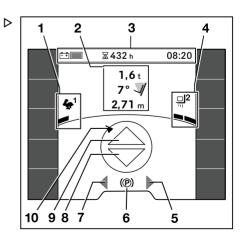



Switching on

Δ

 Refer to the chapter entitled "Display messages".



After connecting the battery, the correct charge state may not be displayed until the battery is placed under load by driving or lifting operations.

Switching on via push button (variant)

A WARNING

All checks and tasks required before daily use must have been performed without any defects being identified before switching on the truck.

- Perform the "visual inspections and functional checks".
- Do not operate the truck if defects have been detected; contact the authorised service centre.

The "Switch on via push button" variant is available only in conjunction with the "Fleet-Manager" or "Access authorisation with PIN code" variants. In place of the key switch, the truck has a push button (1) that is used to switch the truck on and off.

 To switch on the truck, press the push button (1) or sit on the driver's seat. A message on the display/operating unit asks the operator to place the FleetManager card in position or to enter the PIN code.


Authorisation via the "FleetManager" card or the PIN code must take place within a specified period of time:

- Within 30 seconds if the driver's seat is not occupied
- Within 60 seconds if the driver's seat is occupied

If this does not happen, the truck switches off again.

 To switch on the truck, press the push button (1) or sit in the driver's seat.

If authorisation was successful, the truck is ready for operation. The main view is shown on the display.

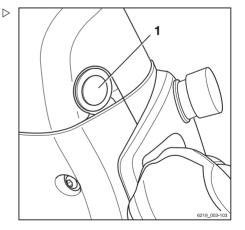



Switching on

- To switch off the truck, press the push button (1) and hold for 1 second.



For the variant with

- "Access authorisation with PIN code", see the relevant section.
- "FleetManager", see the "original operating instructions for FleetManager".



Display-operating unit

Display-operating unit

Access authorisation with PIN code (variant)

Trucks equipped with the "Access authorisation with PIN code" variant are protected against unauthorised use by a PIN code. So that the same truck can be used by different drivers, individual PIN codes can be specified.

An initial PIN code of "11111" is preset at the factory for the first use. We recommend that the fleet manager changes this PIN code using their access authorisation. See also the section entitled "Access authorisation for the fleet manager (variant)".

When the key switch is switched on, the "Access authorisation" input menu appears.

All hydraulic functions and drive functions of the truck are blocked. In the StVZO (German Road Traffic Licensing Regulations) variant, the function of the hazard warning system (variant) is guaranteed.


- To activate the blocked functions, use the softkeys to enter the PIN code.
- To confirm, press the button I.

If the input was correct, the display changes to the main display. The truck is ready for use.

If the input was incorrect, enter the PIN code again.

The authorised service centre can configure access authorisation so that the PIN code has to be re-entered each time after someone leaves the truck.

When the driver's seat is occupied again, the message $\log in \hat{e}$ appears. The display then changes to the "Access authorisation" input menu.

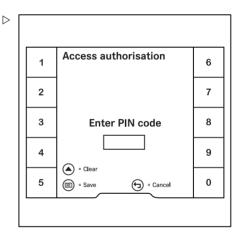



Access authorisation for the fleet manager (variant)

Trucks equipped with the "Access authorisation for the fleet manager" variant are protected against unauthorised configuration by a fleet manager password.


The initial fleet manager password was sent with the invoicing documents. For safety reasons, change this password after the first use. See also the section entitled "Changing the fleet manager password".

Access to the settings menu is only available if the truck is at a standstill and the parking brake is applied. If the parking brake is released prematurely, the settings menu will close.

- Stop the truck.
- Actuate the parking brake.
- Press the button I.
- Press the "Settings" Softkey 💣.

The first menu level appears.

- Press the Access authorisation Softkey •---.

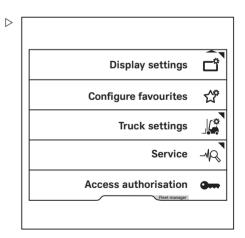




Display-operating unit

The display changes to the "Access authorisa- $\,\triangleright\,$ tion" menu.

- Enter the fleet manager password using the Softkeys.
- To confirm, press the button I.

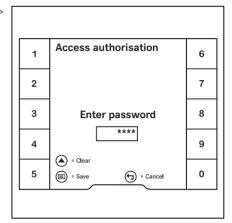

The Access authorisation fleet manager granted ✓ message appears.

– To confirm, push the Softkey \checkmark .

"Access authorisation for the fleet manager" is activated. The display returns to the settings menu.

If the password entered was incorrect, the message Password incorrect is displayed.

- If this happens, enter the password again.

While the "Access authorisation for the fleet manager" is activated, Fleet manager is displayed in an orange bar at the bottom of the screen. When the users switches to the main display, the access authorisation expires again.

Changing the fleet manager password

 Activate the "Access authorisation for the fleet manager".






- Press the Service softkey 48.

Truck information (i)


Display-operating unit

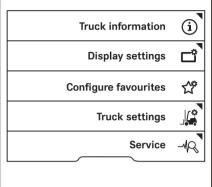

- Press the scroll keys $\Delta \nabla$ until the Change password (access auth.) menu appears.
- Press the Change password (access auth.) softkey.
- Follow the instructions on the display.

Changing the PIN code for the driver


- Activate the "Access authorisation for the fleet manager".

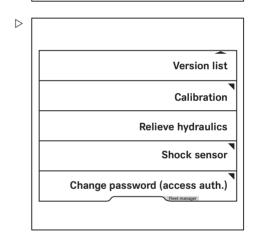




Display-operating unit

- Press the Service softkey -4.

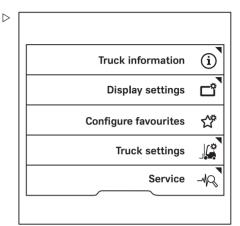

- Press the scroll keys △ ▽ until the Change PIN codes menu appears.
- Press the Change PIN codes softkey.
- Follow the instructions on the display.

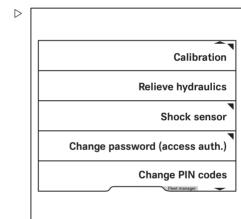



Description of the Pre-Shift Check (variant)

The Pre-Shift Check is a guided dialogue in the display-operating unit. It also helps the driver conduct the necessary "visual inspections and function checking" before everyday use. After the truck has been switched on, the driver must answer questions about the condition of the forklift truck with "Yes" or "No".

While the driver is doing this, the truck functions are available with restrictions. The driving speed and hydraulic functions are restricted.

To commission the truck, the authorised service centre can compile the Pre-Shift Check from a question catalogue in consultation with the fleet manager.

The fleet manager can then restrict the truck functions in the event of a negative test result using their access authorisation.

The following is possible:

- · No response
- Speed limitation (to 0 km/h)
- Hydraulic reduction (up to 0%)

In addition, the fleet manager has the following options:

- The fleet manager can view the results of all checks via the "History".
- The fleet manager can define the shift start for three different shifts. The Pre-Shift Check must be performed when these shifts start.
- If, due to a negative test result, truck functions are restricted, the fleet manager can reset these restrictions.

During commissioning, the first question can also be answered with "No". Truck functions are not restricted until the questions catalogue has been compiled by the authorised service centre and the limitations set by the fleet manager.



Pre-Shift Check

4

Pre-Shift Check


Process

- Switch the truck on.

The first question appears.

- Press the "Yes" or "No" softkey.

The next question appears.

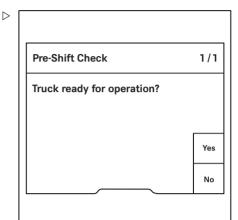

Some of the questions require functional tests, \triangleright such as the functional test of the lighting.

The main display button appears when it is required for the test.

- Switch the lighting on and check it.

Pre-Shift Check	4/6
Does the truck lighting work?	
	Yes
	No



The main display contains the message To complete Pre-Shift Check, press

This means that the Pre-Shift Check is still active and the truck functions are restricted.

- To acknowledge the message, press the softkey ☑.
- Press the back button + to go back to the Pre-Shift Check.
- If the lighting works, press the "Yes" softkey.

The next question appears.

If the truck has to be moved for a test, e.g. for a brake test, you can simply release the parking brake. The view changes to the main display. The truck can be moved at reduced speed. If you apply the parking brake again, the view goes back to the Pre-Shift Check.

At the end of the check, truck functions are restricted if they have been adjusted as a reaction to a negative test result. The message Pre-Shift Check truck restrictions active shows that truck functions are restricted. As long as the truck functions are restricted, no further Pre-Shift Check is requested at the start of a new shift. The check is only requested again after the fleet manager has reset the restrictions.

Pre-S ≣D 2.8 t \$ 6.89 m To complete 0,0° I . . . Pre-Shift Check. æ press •• Ĩ ← . . . $\overline{}$ 10 km/h

All questions

The authorised service centre can use this question catalogue to put together the Pre-Shift Check during commissioning:

Are the fork arms damaged (e.g. bent or cracked)?				
Are the fork arms securely mounted and the locking devices un-				
damaged?				
Are the roller tracks on the lift mast sufficiently greased?				
Are the load chains damaged?				
Are the load chains sufficiently tensioned and loaded equally.?				
Are all attachments securely mounted and undamaged? Are they in				
working order?				
Are operating fluids (e.g. oil, water, fuel) visibly leaking?				
Are the wheels damaged? Are they worn beyond permissible limits?				
Is the tyre pressure correct?				



Is the overhead guard visibly damaged?			
Is the entry area or footwell dirty or slippery?			
Are the windows clean and undamaged?			
Are the maintenance lids securely closed?			
Is the battery door/hood undamaged and securely closed?			
Is the battery lock present, undamaged and closed?			
Is the battery connection assembly dirty or damaged (e.g. hous- ing deformed, contacts corroded)?			
Is the towing device damaged?			
Is the capacity rating plate present, undamaged, and legible?			
Is the driver restraint system damaged?			
Does the horn work?			
Does the truck lighting work?			
Do the warning lights work?			
Is the antistatic belt present and does it have sufficient con- tact with the floor?			
Is the corona electrode present and clean?			
Does the parking brake work properly?			
Does the service brake work properly?			
Does the steering work properly?			
Does the emergency off work?			
Is the condition of the battery obviously not OK?			
Are all decal information and adhesive labels present and legi- ble?			
Is the load backrest undamaged?			
Does the accelerator pedal work properly?			
Is the engine compartment dirty or does it contain foreign objects?			
Are the lift mast or the fork carriage obviously damaged?			
Do the working hydraulics work properly according to the label- ling?			
Are the mirrors dirty or damaged?			
Is the gas tank or its mounting obviously damaged?			
Can unusual noises be heard when the industrial truck is used?			
Is there any other obvious damage to the truck?			
Does the washer system work?			
Is the bonnet undamaged and securely closed?			

If no questions have been compiled for the Pre-Shift Check, the following message appears:

No question(s) selected!




End with 'Yes' or 'No'. - To end, press the "Yes" softkey.

Defining the question sequence

The questions for the Pre-Shift Check can be defined in a random sequence or in a fixed sequence.

The random sequence is advisable, because the questions are then read more consciously by the driver. This means that there is no routine aspect.

- Activate the "Access authorisation for the fleet manager".
- Press the Service softkey 4.

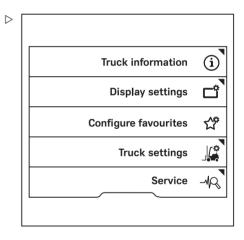



- Press the scroll keys △ ♥ until the Pre- ▷
 Shift Check menu appears.
- Press the Pre-Shift Check softkey.

Message list
Maintenance interval
Version list
Pre-Shift Check
Calibration

The Pre-Shift Check menu appears.

- Press the Question sequence softkey.

History

Reset restriction

Shift start

Question sequence

Fleet manager






Operation

Pre-Shift Check

Pressing the softkey allows fixed or random question sequences to be selected.


The orange activation bar displays the current selection.

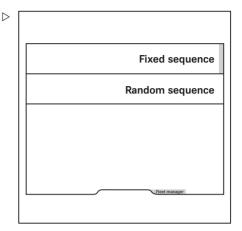

Displaying the history

The fleet manager can display a Pre-Shift Check history.

- Activate the "Access authorisation for the fleet manager".
- Press the Service softkey 4.

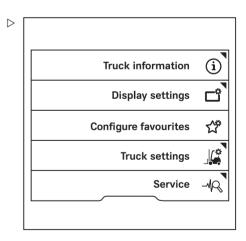



- Press the scroll keys △ ▽ until the Pre- ▷ Shift Check menu appears.
- Press the Pre-Shift Check softkey.

Message list
Maintenance interval
Version list
Pre-Shift Check
Calibration

The Pre-Shift Check menu appears.

- Press the History softkey.

History Reset restriction Shift start Question sequence



The "Pre-Shift Check results" display opens.

 \triangleright

This display shows all checks and questions that have been answered with the date and time.

To see more results, press the scroll buttons $\Delta \nabla$.

- To go back to the previous menu, press the softkey ☑.

 Pre-Shift Check results

 27.33.59

 165/11

 166/10

 17.33.59

 166/10

 17.33.59

 167/10

 17.33.59

 167/10

 17.33.59

 167/10

 17.33.59

 167/10

 167/10

 17.33.59

 167/10

 17.33.59

 163/10

 17.33.59

 164/10

 17.33.59

 164/10

 17.33.59

 164/10

 17.33.59

 164/10

 17.33.59

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49

 18.49


 18.49

 18.49

Defining the shift start

As a standard setting after commissioning, the Pre-Shift Check is always requested 24 hours after the last check was performed. The fleet manager can define up to three shifts and their start times. The Pre-Shift Check is then always requested at this time.

- Activate the "Access authorisation for the fleet manager".
- Press the Service softkey 49.

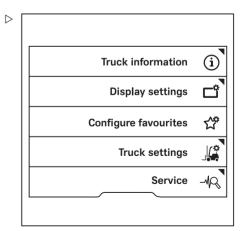



- Press the scroll keys △ ▽ until the Pre- ▷ Shift Check menu appears.
- Press the Pre-Shift Check softkey.

Message list
Maintenance interval
Version list
Pre-Shift Check
Calibration

The Pre-Shift Check menu appears.

- Press the Shift start softkey.

History

Reset restriction

Shift start

Question sequence

Fleet manager






Operation

Pre-Shift Check

In this menu, you can call up the shift to be defined and its start time.

The orange activation bar indicates which shifts are activated.

 To edit a shift, press the corresponding softkey.

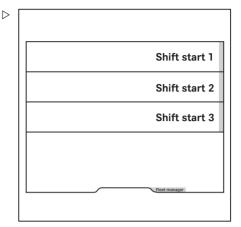


In this menu you can define the shift start.

- Enter the time using softkeys "0 to 9".
- To Save, press the button 🔳.


The shift start is now defined. The Pre-Shift Check is always requested from this shift start time.

The display returns to the previous menu.

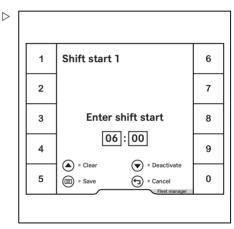



 − To delete a certain shift start, select the relevant shift.

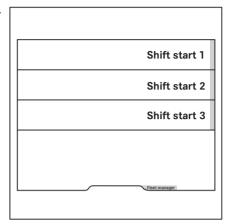

− To Clear, press the △ scroll button.

The shift start is deleted.

The shift is deactivated. The display returns to the previous menu. There is no activation bar next to this shift.

- To Cancel, press the back button 4.
- To access the main display, press the main display button ☆.

Shift start 1 1 6 2 7 Enter shift start 3 8 06:00 4 9 Clear - Deactivate 5 0 = Save - Cancel


Resetting the truck restrictions

If truck functions are restricted due to aborted checks or checks with a bad result, the fleet manager can reset these restrictions. The fleet manager can also do this if a problem on the truck has been rectified.


 Activate the "Access authorisation for the fleet manager".



- Press the Service softkey -4.

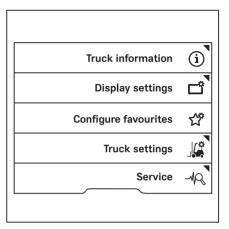

- Press the scroll keys △ ▽ until the Pre- ▷ Shift Check menu appears.
- Press the Pre-Shift Check softkey.

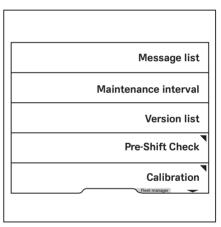





The Pre-Shift Check menu appears.

- \triangleright
- Press the Reset restriction softkey.

History
Reset restriction

Shift start
onneotare
Question sequence
Fleet manager
- Recentionage


A question pops up asking if you want to reset \triangleright the truck restrictions.

− To confirm, press the softkey ✓.

The full scope of the truck functions is now available. The display returns to the previous menu.

- To cancel, press the softkey X.

The truck functions remain restricted. The display returns to the previous menu.

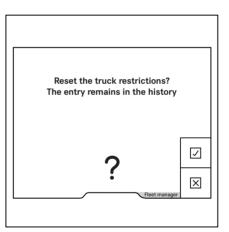



Meaning of the symbols


Individual lighting devices are switched on and off using the "Lighting" sub-menu.

 To access this sub-menu, push the button I.

Symbols for the lighting and their meanings

∋ddé	Parking light
øD	Headlights
	Hazard warning sys- tem ¹
举	Rotating beacon
∌D	Front working spot- lights
≣	Rear working spot- light

Only the symbols of the lighting devices that are installed in the truck can be selected. When one of the lighting devices is switched on, the activation bar next to the relevant symbol lights up orange.

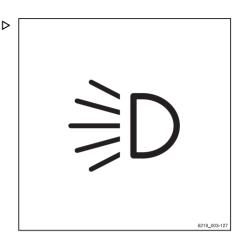

If the truck is equipped with the "StVZO" (German Road Traffic Licensing Regulations) variant, the hazard warning system works even when the truck is switched off.

¹ This function is not available if the truck is equipped with the "StVZO" (German Road Traffic Licensing Regulations) variant. In this case, the hazard warning system is switched on and off via the hazard warning button on the steering column. For more information, refer to the section entitled "Hazard warning system".



Lighting

Lighting

Driving lights

 To switch on the parking light (1), push the associated Softkey on the display-operating unit.

The front side lights and the tail lights light up.

 To switch on the driving light (2), press the associated Softkey on the display-operating unit.

The headlights light up. If the truck has StVZO (German Road Traffic Licensing Regulations) equipment (variant) and a licence plate lamp, then this also lights up.


 To switch off the driving light (2), press the Softkey again.

The driving light and licence plate lamp go out.

 To switch off the parking light (1), push the Softkey again.

The front side lights and the tail lights light up.

If the truck does not have StVZO (German Road Traffic Licensing Regulations) equipment (variant), then the parking light and driving light can be switched on and off independently of each other.

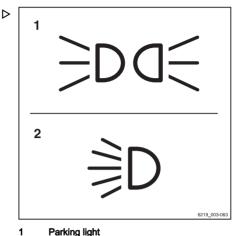

1 Pa 2 Dr

Driving light

STILL



Front and rear working spotlights

- To switch on the front working spotlights (3), push the associated Softkey on the display-operating unit.

The front working spotlights light up.

- To switch off the front working spotlights (3), push the Softkey again.

The front working spotlights go out.

- To switch on the rear working spotlights (4), push the associated Softkey on the displayoperating unit.

The rear working spotlights light up.

- To switch off the rear working spotlights (4). push the Softkey again.

The rear working spotlights go out.

i NOTE

For the StVZO (German Road Traffic Licensing Regulations) variant, the parking light is also switched on when the working spotlights are switched on. The licence plate lamp (if present) is also switched on when the forwardfacing working spotlights are switched on.

Working spotlights on the roof and the side of the lift mast

The roof spotlights light up the working area when the fork carriage is raised.

 To switch on the roof spotlights (5), push the associated Softkey on the display-operating unit.

The roof spotlights (5) light up.


- To switch off the roof spotlights (5), push the Softkey again.

The roof spotlights (5) go out.



Depending on the configuration, the roof spotlights automatically switch on when the fork carriage is raised.



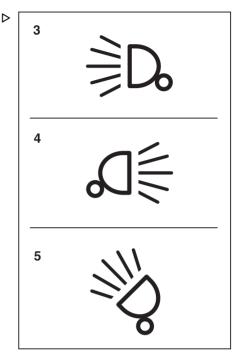

3 Front working spotlights 4

- Rear working spotlights 5
 - Roof spotlights

56378011501 EN - 12/2019 - 04

Liahtina

Lighting

Working spotlight for reverse travel (variant)

In this equipment variant, a working spotlight for reverse travel is fitted on the rear of the overhead guard and provides optimum illumination of the roadway during reverse travel.

- Press the J€ softkey.

The activation bar next to the symbol lights up. The working spotlight does not yet light up.


- Set the drive direction to "Reverse".

The working spotlight for reverse travel lights up.

If the drive direction is set to "Forward", the working spotlight goes out.

Turn indicators

The turn indicators are switched on and off via the mini-console.

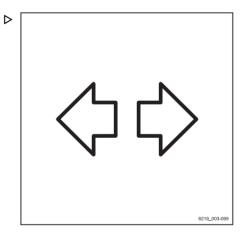




Lighting

 To switch on the left or right turn indicator, move the lever (1) to the desired direction.

The turn indicators and the turn indicator displays on the display/operating unit flash.

 To switch off the turn indicators, push the lever (1) back to the centre position.

All turn indicators and the turn indicator displays on the display/operating unit stop flashing.

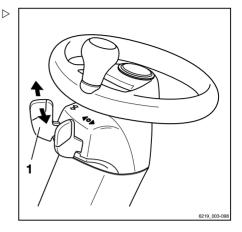

Hazard warning system


Switching the hazard warning system on and off is different for trucks with and without the StVZO (German Road Traffic Licensing Regulations) variant.

 To switch on the hazard warning system, push the associated Softkey on the displayoperating unit.

All direction indicators and the turn indicator displays on the display-operating unit flash.

- To switch off the hazard warning system, push the Softkey again.

All direction indicators and the turn indicator displays on the display-operating unit stop flashing.

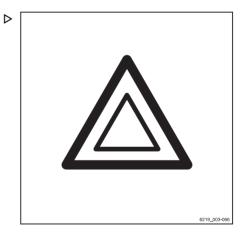



Specific features of the StVZO (German Road Traffic Licensing Regulations) variant

For the StVZO (German Road Traffic Licensing Regulations) variant, the hazard warning system cannot be switched on and off via the display/operating unit. It is switched on and off using the hazard warning button on the steering column. The hazard warning system in this variant works even when the truck is switched off.

- To switch on the hazard warning system, push the hazard warning button (1).

All direction indicators and the turn indicator displays on the display/operating unit flash.

 To switch off the hazard warning system, push the hazard warning button (1) again.

All direction indicators and the turn indicator displays on the display-operating unit stop flashing.


Rotating beacon


 To switch on the rotating beacon, push the associated Softkey on the display-operating unit.

The rotating beacon is switched on.

 To switch off the rotating beacon, push the Softkey again.

The rotating beacon goes out.

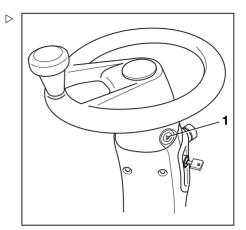

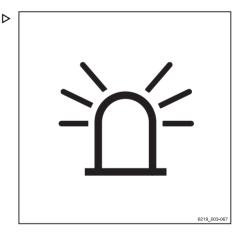





Danger of damage to eyes from looking into the STILL SafetyLight.

Do not look into the STILL SafetyLight.


The STILL SafetyLight is a visual warning unit designed to enable early detection of trucks in driving areas with low visibility (such as drive lanes, high racks), as well as at blind junctions. The STILL SafetyLight is mounted on a support on the overhead guard such that it is not affected by jolts and vibrations.

Depending on the version, the STILL Safety-Light projects one or more light-blue light spots in front of or behind the truck and thus warns others about the approaching truck. Several light spots are projected as a chase light. The chase light indicates the location of the truck with its direction of travel.

Depending on the configuration of the truck, the STILL SafetyLight automatically switches itself on when the truck is moving. This means that, during reverse travel (variant), for example, it can be used as an additional light for the working spotlight for reverse travel. The STILL SafetyLight can also be switched on and off on the display-operating unit.

- To do so, push the Softkey 🔌.

If the truck is to be operated on public roads, the STILL SafetyLight must be switched off.

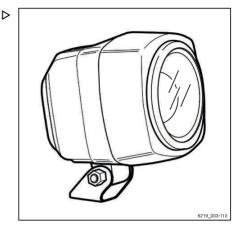

Liahtina



Liahtina

Warning zone light (variant)



A WARNING

Danger of damage to eyes from looking into the warning zone light.

Do not look into the warning zone light.

Adjust the warning zone light so as not to dazzle bystanders or the driver when climbing in and out of the truck.

The warning zone light is mounted on supports on the overhead guard such that it is not affected by jolts and vibrations. It projects a light bar next to the truck on both the left-hand side and right-hand side of the truck. These light bars indicate the danger areas to the sides of the truck while in operation. See the section entitled "Danger area" in the chapter entitled "Handling loads".

The warning zone light switches on and off again together with the truck.

If the truck has StVZO (German Road Traffic Licensing Regulations) equipment, the warning zone light can be switched on and off via the display-operating unit.

- To do this, press the corresponding softkey.


If the truck is to be operated on public roads, the warning zone light must be switched off.

 Before using the truck, make sure that the warning zone light is working and has been adjusted correctly.

The distance from the light bar to the truck must be between 70...75 cm.

 To adjust the warning zone light, see the section entitled "Adjusting the warning zone light" in the chapter entitled "Preserving operational readiness".

When ordering the truck, you can choose between a blue or red warning zone light.

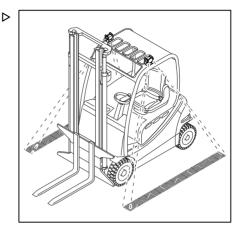



Efficiency and drive modes


Blue-Q (variant)

Functional description

The Blue-Q efficiency mode affects both the drive unit and the activation of the additional consumers, and reduces the truck's energy consumption. Blue-Q can be switched on and off via a softkey.

If efficiency mode is switched on, the acceleration behaviour of the truck changes to make acceleration more moderate.

When travelling at low speeds, normally when manoeuvring, no reduction is noticeable even if efficiency mode is switched on. For moderate speeds from approx. 7 km/h, acceleration is gentler. Therefore, on distances of up to approx. 40 m, lower speeds are reached than would be the case if the efficiency mode was not activated. As in "STILL Classic" mode, the maximum speed is 20 km/h.

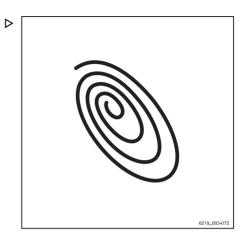

has no influence on:

- · Maximum speed
- · Climbing capability
- · Pulling force
- · Braking characteristics

Effects on additional consumers

The following table shows the specific conditions that cause certain auxiliary devices to shutdown when Blue Q is activated. The additional consumers available depend on the truck equipment.

Shut-off	Seat switch	Truck is stationary	Drive direction
Front working spot- light*	Х	Х	Reverse > 3 km/h
Rear working spotlight*	Х	Х	Forwards
Roof spotlight*	Х	Х	> 3 km/h
Headlight*	Х	Х	-
Front wiper	Х	Х	Reverse > 3 km/h
Rear wiper	Х	Х	Forwards
Roof wiper	Х	X	-
Seat heater	Х	-	-
Cab heating	Х	-	-



Efficiency and drive modes

Shut-off	Seat switch	Truck is stationary	Drive direction
Screen heating	Х	-	-
*No shut-off for StVZO (German Road Traffic Licensing Regulations) equipment (variant)			



Switching Blue-Q on and off

 To switch on Blue-Q efficiency mode, push the associated softkey.

The Blue-Q symbol 🕲 appears on the display/operating unit and Blue-Q efficiency mode is switched on.

 To switch off Blue-Q efficiency mode, push the associated softkey again.

The Blue-Q symbol disappears and Blue-Q efficiency mode is switched off.

STILL Classic and sprint mode

The drive modes affect the handling of the truck.

Two different drive modes are available:

1 STILL Classic

This mode is active after the truck has been switched on. This mode is the default setting and provides a balance between hydraulic functions and driving functions. The maximum speed is 18 km/h. No symbol is shown on the display.

2 Sprint mode

In sprint mode, the truck accelerates more quickly to a maximum speed of 20 km/h. This mode also increases the lifting speed. Sprint mode is for driving on clear and spacious terrain.



If sprint mode is used, the truck's energy consumption is higher. The battery is therefore discharged more quickly. The drive units heat up more quickly.


Switching sprint mode on and off

 To switch on sprint mode, push the associated softkey.

The "sprint mode" symbol 🔏 (2) appears on the display of the display-operating unit. Sprint mode is switched on.

 To switch off the mode, push the softkey again.



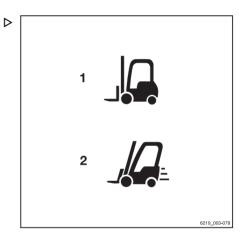

Efficiency and drive modes

The symbol disappears and the mode is switched off. The truck is then back in STILL Classic mode.

Automatic switch off for sprint mode

If the truck is operated in sprint mode at the maximum performance level, the truck will consume more energy. As a result, the battery is discharged faster and the traction drives and energy supply may become too hot.

The battery voltage and the temperature of the traction drives and energy supply are monitored continuously. If under voltage (does not apply to lithium-ion batteries) or overheating occurs, sprint mode is automatically deactivated.

If the truck is automatically switched off, sprint mode can then only be switched on again if the following conditions are met:

- · The battery is fully recharged.
- · The truck has been restarted.



Safety regulations when driving

Driving conduct

The driver must follow the public rules of the road when driving in company traffic.

The speed must be appropriate to the local conditions.

For example, the driver must drive slowly around corners, in tight passageways, when driving through swing-doors, at blind spots, or on uneven surfaces.

The driver must always maintain a safe braking distance from vehicles and persons in front, and must always have the truck under control. Stopping suddenly, turning quickly and overtaking at dangerous or blind spots must be avoided.

 Initial driving practice must be carried out in an empty space or on a clear roadway.

The following are forbidden during driving:

- Allowing arms and legs to hang outside the truck
- Leaning the body over the outer contour of the truck
- · Climbing out of the truck
- · Moving the driver's seat
- · Adjusting the steering column
- · Releasing the seat belt
- · Disabling the restraint system
- Raising the load higher than 300 mm above the ground (with the exception of manoeuvring processes during the placement into stock/removal from stock of loads)
- Using electronic devices, for example radios, mobile phones etc.



Driving

🛦 WARNING

The use of multimedia and communication equipment as well as playing these devices at an excessive volume during travel or when handling loads can affect the operator's attention. There is a risk of accident!

- Do not use devices during travel or when handling loads.
- Set the volume so that warning signals can still be heard.

WARNING

In areas where use of mobile phones is prohibited, use of a mobile phone or radio telephone is not permitted.

- Switch off the devices.

Visibility when driving

The driver must look in the drive direction and have a sufficient view of the driving lane.

Particularly for reverse travel, the driver must be sure that the driving lane is clear.

When transporting goods that impair visibility, the driver must drive the truck in reverse.

If this is not possible, a second person acting as a guide must walk in front of the truck.

In this case the driver must only move at walking pace and with extra care. The truck must be stopped immediately if eye contact with the guide is lost.

Rear-view mirrors are only to be used for observing the road area behind the truck and not for reverse travel. If visual aids (mirror, monitor) are necessary to achieve sufficient visibility, it is necessary to practise using them. For reverse travel using visual aids, extra care should be taken.

When using attachments, special conditions apply; see the chapter entitled "Fitting attachments".

Any glass (variant, e.g. windscreen) and mirrors must always be clean and free of ice.



Roadways

Dimensions of roadways and aisle widths

The following dimensions and aisle width requirements apply under the specified conditions to ensure safe manoeuvring. In each case, it must be checked whether a larger aisle width is necessary, e.g. in the case of different load dimensions.

Within the EU, Directive 89/654/EEC (minimum safety and health requirements for the workplace) must be observed. The respective national guidelines apply for areas outside the EU.

The required aisle widths depend on the dimensions of the load.

The aisle widths for pallets are as follows:

		Aisle width [mm]	
Model	Туре	With pallet 1000x1200 crosswise	With pallet 800x1200 lengthwise
RX60-25	6301	3615	3823
RX60-25/600	6302	3625*	3823
RX60-25L/600	6304	3759*	3958
RX60-30	6305	3647	3847
RX60-30L	6307	3779	3978
RX60-30L/600	6308	3779*	3978
RX60-35	6309	3802	4002
* Without taking protruding fork arms into account			

The truck must be used only on roadways that do not have excessively sharp curves, excessively steep gradients or excessively narrow or low entrances.



Drivin

Driving on ascending and descending gradients

WARNING

Risk of accident due to the drive unit switching off!

Driving up and down longer gradients can cause the drive unit to overheat and switch off. The truck will then no longer decelerate when the accelerator pedal is released and will coast.

Driving up and down longer gradients greater than 15% is not permitted due to the minimum specified braking values. The climbing capability values given below apply only to negotiating obstacles on the roadway and to temporary differences in level, e.g. ramps.

 Consult the authorised service centre before driving on long ascending and descending gradients greater than 15%.

Model	Turne	Maximum	gradient [%]
Model	Nodel Type	With load (SP/HP)	Without load (SP/HP)
RX60-25	6301	25.5/26.0	29.7/30.0
RX60-25/600	6302	24.0/26.0	28.3/30.0
RX60-25L/600	6304	24.0/26.0	29.0/30.0
RX60-30	6305	21.7/26.0	29.0/30.0
RX60-30L	6307	21.7/26.0	30.0/30.0
RX60-30L/600	6308	20.9/26.0	29.2/30.0
RX60-35	6309	19.1/26.0	29.2/30.0
SP = Standard Performance, HP = High Performance (variant)			

It is permitted to drive the truck on the following ascending and descending gradients:

The ascending and descending gradients must not exceed the gradients listed above and must have a rough surface.

The top and bottom of the gradient must feature smooth and gradual transitions to prevent the load from falling to the ground or the truck being damaged.

Warning in the event that components protrude beyond the truck contour

Trucks are often required to drive through very narrow or very low spaces such as aisles or containers. The dimensions of the trucks are designed for this purpose. However, movable components may protrude beyond the truck



contour and be damaged or torn off. Examples of these components are:

- · An unfolded roof panel in the driver's cab
- Open cab doors

Condition of the roadways

Roadways must be sufficiently firm, level and free from contamination and fallen objects.

Drainage channels, level crossings and similar obstacles must be evened out and, if necessary, ramps must be provided so that trucks can drive over these obstacles with as few bumps as possible.

Note the load capacity of manhole covers, drain covers etc.

There must be sufficient distance between the highest points of the truck or the load and the fixed elements of the surrounding area. The height is based on the overall height of the lift mast and the dimensions of the load.

Rules for roadways and the working area

It is only permitted to drive on routes authorised for traffic by the operating company or its representatives. Traffic routes must be free from obstacles. The load must only be set down and stored in the designated locations. The operating company and its representatives must ensure that unauthorised third parties do not enter the working area.

Please observe the definition of the following responsible person: "operating company".

Hazardous areas

Hazardous areas on roadways must be indicated by standard traffic signs or, if necessary, by additional warning signs.



Selecting drive programmes 1 to 3 ▷

The truck has three drive programmes with different preset driving and braking characteristics. The basic principle is that the higher the number of the drive programme selected, the greater the driving dynamics.

The drive programme is selected using the display-operating unit under the "Drive" $\textcircled{}{}^{{}_{\mathbb{H}}}$ menu item.

- Press the \$\$^1...\$\$^3 softkey to select the desired drive programme.
- 4
- \triangleright
- If the drive programmes are saved as a favourite on a softkey, press the "Drive programme" softkey until the number of the desired drive programme is shown on the display.

The number of dynamic bar segments indicates the driving dynamics of the selected drive programme.





Selecting drive programme A or B

The truck has two drive programmes with different handling and braking characteristics.

Unlike the fixed drive programmes "1 to 3", the programs "A" and "B" can be configured. The procedure for this is described in the following section.

The drive programme is selected using the display-operating unit under the "Drive" ◎= menu item.

- Press the A or B softkey to select the desired drive programme.
- If the drive programmes are saved as a favourite on a softkey, press the "Drive programme" Softkey until the letter of the desired drive programme is shown on the display.

Configuring drive programmes A and B

The drive programmes can be configured by the driver.

Access to the settings menu is only available if the truck is at a standstill and the parking brake is applied. If the parking brake is released prematurely, the settings menu will close.

- Stop the truck.
- Actuate the parking brake.
- Press the button I.


The first menu level appears.

- Press the "Settings" softkey &.
- Press the Truck settings softkey 🎉.
- Press the Drive programmes softkey.

The "drive programme" menu appears.

- Press the associated softkey for drive programme A or drive programme B.



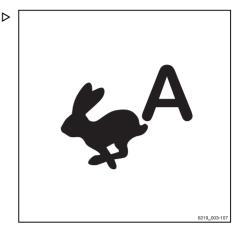

Driving

Configuring the drive programs using the "drive programme A" is explained here.

The menu Set drive programme A appears.

 \triangleright

The following parameters can be set:

• max. speed

Determines the maximum speed (max. 20 km/h).

• Agility

Determines the acceleration behaviour and the reversing behaviour using five levels. "1" indicates the lowest agility and "5" indicates the greatest agility

• Deceleration

Determines the delay using five levels. "1" indicates the lowest delay and "5" indicates the greatest delay

- To select a higher level, press the appropriate "plus" + softkey.
- To select a lower level, press the appropriate "minus" – softkey.
- To save the setting, press the "confirm" Softkey ☑.

The settings are saved.

− To cancel the setting, press the "cancel" Softkey ⊠.

The settings return to the most recently saved value.

Press the button **t** once to return to the previous menu level.

\mathbf{X}	Set drive programme A	\checkmark
_	max. speed 16 km/h	+
_	Agility 3	+
	Deceleration 2	+



Selecting the drive direction

The drive direction of the truck must be selected using the drive direction switch before attempting to drive. The method of actuating the drive direction switch depends on the operating devices included in the truck's equipment.

The drive direction can also be changed during travel. Your foot can remain on the accelerator pedal while you do so. The truck is then decelerated and accelerated again in the opposite direction (reversing).

The indicator for the selected drive direction ("forwards" (1) or "backwards" (2)) lights up on the display-operating unit.


Neutral position

If leaving the truck for a prolonged period, the neutral position must be selected in order to avoid the truck suddenly moving off due to an inadvertent actuation of the accelerator pedal.

 Briefly select the drive direction switch for the direction opposite to the current drive direction.

The drive direction indicator on the display-operating unit goes out.


When the seat is vacated, the selected drive direction is set to the "neutral position". To drive, the drive direction switch must be actuated again.

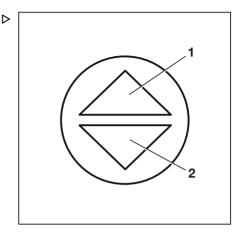

Driving

Actuating the drive direction switch, \triangleright multiple-lever version

- For the "forwards" drive direction, push the drive direction switch (1) downwards.
- For the "backwards" drive direction, push the drive direction switch (1) upwards.

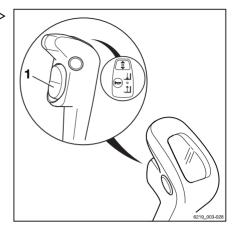

Actuating the drive direction switch, \triangleright mini-lever version


- For the "forwards" drive direction, push the drive direction switch (1) forwards.
- For the "backwards" drive direction, push the drive direction switch backwards.






Actuating the drive direction switch, ▷ Fingertip version

- For the "forwards" drive direction, push the drive direction switch (1) forwards.
- For the "backwards" drive direction, push the drive direction switch backwards.

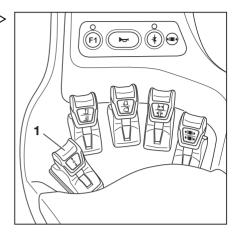

Actuating the vertical rocker button for the "drive direction", Joystick 4Plus version

- For the "forward" drive direction, push the vertical rocker button for the "drive direction" (1) upwards (A).
- For the "backward" drive direction, push the vertical rocker button for the "drive direction" (1) downwards (B).

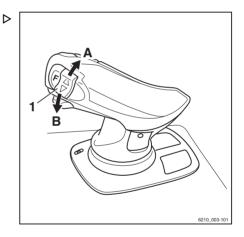



Actuating the drive direction switch, \triangleright mini-console version

- For the "forward" drive direction, push the drive direction switch (1) forwards.
- For the "backward" drive direction, push the drive direction switch (1) backwards.

Alternatively, the drive direction can also be selected using the drive direction switches on the operating devices for the hydraulic functions.

If the drive direction switch on the operating devices is faulty and the truck comes to a standstill in a danger area, the drive direction switch on the mini-console can be used as an emergency drive direction switch.

- To do this, push down the drive direction switch (1) in the desired direction of travel.
- Drive the truck out of the danger area.

Starting drive mode


A DANGER

Being trapped under a rolling or tipping truck could cause fatal injuries!

- Sit on the driver's seat.
- Fasten the seat belt.
- Activate the available restraint systems.
- Observe the information in the chapter entitled "Safety regulations when driving".

The driver's seat is equipped with a seat switch. This seat switch checks whether the driver's seat is occupied. If the driver's seat is not occupied or if the seat switch is malfunctioning, the truck cannot be moved and all lifting functions are locked. In these situations, the message Sit in the driver's seat is shown on the display of the displayoperating unit.

- Sit on the driver's seat. Fasten the seat belt.
- Lift the fork carriage until the necessary ground clearance is achieved.

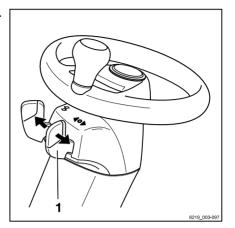




- Release the parking brake.
- Select the desired drive direction.

The indicator for the selected drive direction ("forwards" (1) or "reverse" (2)) lights up on the display-operating unit.

Different warning signals can be emitted to indicate reverse travel depending on the equipment; an acoustic signal (variant) may sound, the warning light (variant) may light up or the hazard warning system (variant) may flash.

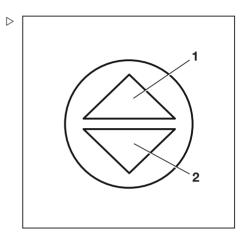

- Press the accelerator pedal (3).

The truck will travel in the selected drive direction. The speed is controlled by the accelerator pedal position. The truck brakes when the accelerator pedal is released.

The truck is also held in place on ascending or descending gradients even if the electric parking brake is not engaged.

A DANGER


Risk of accident due to brake failure!

The regenerative brake only functions if the truck is switched on, the emergency off switch has not been actuated and the parking brake is released.

- Use the brake pedal if the regenerative brake malfunctions.
- Engage the parking brake before leaving the truck.

Changing the drive direction

- Take your foot off the accelerator pedal.
- Select the desired drive direction.

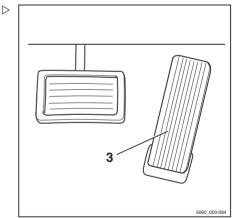

Driving

- Press the accelerator pedal.

The truck will travel in the selected drive direction.

The drive direction can also be changed during travel. Your foot can remain on the accelerator pedal while you do so. The truck is then decelerated and accelerated again in the opposite direction (reversing).

If an electrical fault occurs in the accelerator, the drive unit is switched off. In this situation, the truck is not electrically braked. Once the electrical fault has been corrected, it will be possible to drive the truck again by releasing the accelerator pedal and then actuating the accelerator pedal again. If the truck still cannot be operated, park the truck securely and contact the authorised service centre.

Starting drive mode, dual pedal version (variant)

A DANGER

Being trapped under a rolling or tipping truck could cause fatal injuries!

- Sit on the driver's seat.
- Fasten the seat belt.
- Activate the available restraint systems.
- Observe the information in the chapter entitled "Safety regulations when driving".


The driver's seat is equipped with a seat switch. This seat switch checks whether the driver's seat is occupied. If the driver's seat is not occupied or if the seat switch is malfunctioning, the truck cannot be moved and all lifting functions are locked. In these situations, the message Sit in the driver's seat is shown on the display of the displayoperating unit.

- Sit on the driver's seat. Fasten the seat belt.



- Lift the fork carriage until the necessary ground clearance is achieved.
- Tilt the lift mast backwards.
- Release the parking brake.
- Press the right accelerator pedal (1) for the "forwards" drive direction and press the left accelerator pedal (2) for the "backwards" drive direction.

In the dual pedal version, the drive direction switches on the operating devices do not function.

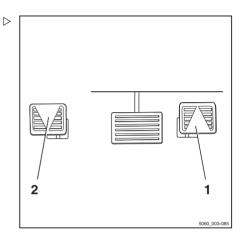


The indicator for the selected drive direction ("forwards" (1) or "reverse" (2)) lights up on the display-operating unit.

Different warning signals can be emitted to indicate reverse travel depending on the equipment; an acoustic signal (variant) may sound, the warning light (variant) may light up or the hazard warning system (variant) may flash.

The truck will travel in the selected drive direction. The speed is controlled by the accelerator pedal position. The truck brakes when the accelerator pedal is released.

The truck is also held in place on ascending or descending gradients even if the electric parking brake is not engaged.

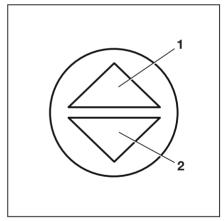



 \triangleright

Risk of accident due to brake failure!

The regenerative brake only functions if the truck is switched on, the emergency off switch has not been actuated and the parking brake is released.

- Use the brake pedal if the regenerative brake malfunctions.
- Engage the parking brake before leaving the truck.

Changing the drive direction

- Remove your foot from the actuated accelerator pedal.
- Press down the accelerator pedal for the opposite direction.

The truck will travel in the selected drive direction.


If an electrical fault occurs in the accelerator, the drive unit is switched off. In this situation, the truck is not electrically braked. Once the electrical fault has been corrected, it will be possible to drive the truck again by releasing the accelerator pedal and then actuating the accelerator pedal again. If the truck still cannot be operated, park the truck securely and contact the authorised service centre.

Operating the service brake

The regenerative brake converts the acceleration energy of the truck into electrical energy. When the accelerator pedal is released, the truck decelerates.

Electrical braking recovers energy for the battery. This results in a longer operating time between the charging processes and less wear to the brakes.

The truck can also be braked with the service brake by actuating the brake pedal (2). In the first section of the brake pedal's travel, only the regenerative braking takes effect. As the pedal is depressed further, the mechanically actuated service brake is also activated and acts on the drive wheels.

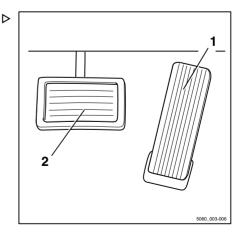



There is a risk of accident if the service brake fails!

If the regenerative braking effect noticeably deteriorates, a component failure may have occurred. It will no longer be possible to sufficiently brake the truck.

- When braking with the service brake, it may be necessary to use the parking brake to assist the braking process.
- Notify the authorised service centre.
- Do not operate the truck again until the service brake has been repaired.

A DANGER

At speeds that are too high, there is a danger that the truck could slip or overturn!

The braking distance of the truck depends on the weather conditions and the level of contamination on the roadway. Note that the basic braking distance increases with the square of the speed.

- Adapt the driving and braking style to suit the weather conditions and the level of contamination on the roadway.
- Always choose a driving speed that will provide a sufficient stopping distance.

If the parking brake is actuated while the truck is in motion, the truck may decelerate with a jerk.

Actuating the electric parking brake >




A DANGER

There is a risk of fatal injury from being run over if the truck rolls away.

- Do not park the truck on a gradient.
- Do not leave the truck until the parking brake has been applied.
- In an emergency, secure the truck with wedges on the downhill-facing side to prevent it from rolling away.

This truck is equipped with an electric parking brake. The parking brake must not be applied manually when the driver leaves the truck. The parking brake is applied automatically.

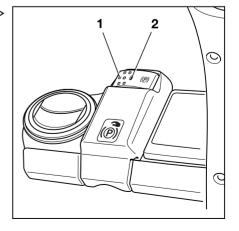

Driving



Driving

Despite these automatic aids, the driver is always responsible for parking the truck safely. The safety information about parking the truck safely applies.

The electric parking brake can be actuated or released only if the battery male connector has been connected **and** the truck is switched on.

If the parking brake is applied, this is indicated by a symbol in the display-operating unit instead of the driving speed.

Symbols for the parking brake in the display-operating unit

Symbol	Description
(@)	The parking brake was applied automatically. Actuating the accelerator pedal automatically releases the parking brake.
(C)	The parking brake was applied by pressing the push button. Pressing the push button is the only way to release the parking brake.

Releasing the electric parking brake after the truck has been switched on

Press the push button (1) to release the parking brake.

The truck is held in place by the traction motor.

Manually actuating the electric parking brake when the truck is stationary

Applying the parking brake manually


- Press the push button (1).

The electric parking brake will make a noise when it is applied and the LED (2) lights up continuously. The symbol () appears in the display.

Releasing the parking brake manually

- Sit on the driver's seat.
- Press the push button (1).

The electric parking brake will make a noise when it releases and the LED (2) goes out.

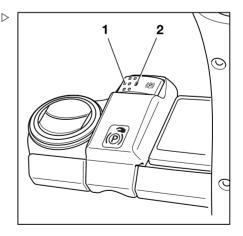



The driving speed display is replaced by the symbol $(\ensuremath{\mathbb{D}})$.

Automatic actuation of the electric parking brake when the truck is stationary

The electric parking brake is applied automatically when the truck is stationary in the following situations:

Automatically triggered actuation when the truck is stationary

Cause	Effect
The driver's seat is vacated.	The electric parking brake will make a noise when it is applied. The LED (2) lights up with a steady light.
The accelerator pedal is released (brake pedal not actuated).	After a specified delay, the electric parking brake is applied with an audible sound. The LED (2) lights up with a steady light. On a gradient, the truck is held by the traction motor for 3 seconds. Then the electric parking brake is applied.
The truck is switched off.	The electric parking brake is immediately ap- plied with an audible sound. The LED (2) will light up briefly with a steady light until the control units switch off.
The emergency off switch is actuated.	The electric parking brake is immediately ap- plied with an audible sound. The LED (2) lights up with a steady light.

If the electric parking brake has applied automatically, the symbol (®) appears in the display-operating unit. The LED (2) lights up.

- To release the electric parking brake, the driver must sit down on the driver's seat again.
- Press the accelerator pedal.

The electric parking brake will make a noise when it is released. The LED (2) goes out.

If the symbol () appears in the display, the truck cannot be driven until the electric parking brake has been released by pressing the push button (1). This is the case if the parking brake has been applied manually.



Actuation of the electric parking brake when the truck is in motion

Manual actuation when the truck is in motion

- Press the push button (1).

The truck is braked with the drive unit in accordance with the selected drive programme. Once the truck has come to a standstill, the electric parking brake is applied with an audible sound. The LED (2) lights up with a steady light. The symbol () appears in the displayoperating unit.

 If the braking effect is insufficient, also use the service brake.

If the drive unit fails, the truck can be braked by pressing the push button (1). The truck brakes more strongly if the push button (1) is pressed and held or pressed several times. The electric parking brake cannot be released by actuating the accelerator pedal.

WARNING


Risk of accident!

The truck may decelerate abruptly.

Fasten the seat belt.

Automatically triggered actuation when the truck is in motion

Cause	Effect
The driver's seat is vacated.	The truck is braked in accordance with the se- lected drive programme. Once the truck has come to a standstill, the electric parking brake is applied with an audible sound. The LED (2) lights up with a steady light. The symbol ((P)) appears in the display.
The key switch is switched off.	The truck will coast to a stop. Once the truck has come to a standstill, the electric parking brake is applied with an audible sound. The LED (2) lights up with a steady light. The symbol ^(®) appears in the display until the con- trol units switch off.

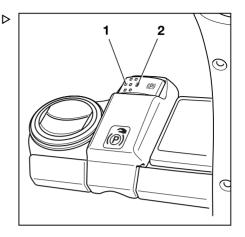



Cause	Effect
The emergency off switch is actuated.	The truck will coast to a stop. Once the truck has come to a standstill, the electric parking brake is applied with an audible sound. The LED (2) lights up with a steady light. The symbol ([®]) appears in the display.
The truck accelerates sharply, even though the driver's seat has been vacated.	The electric parking brake is immediately applied with an audible sound. The LED (2) lights up with a steady light. The symbol ^(®) appears in the display.
The truck accelerates sharply, even though the accelerator pedal has not been actuated.	The parking brake is immediately applied with an audible sound. The LED (2) lights up with a steady light. The symbol ^(®) appears in the display.

Malfunctions in the electric parking brake



A DANGER

There is a risk of fatal injury from being run over if the truck rolls away.

- Do not park the truck on gradients.
- Do not leave the truck until the parking brake has been applied.
- In an emergency, secure the truck with wedges on the downhill-facing side to prevent it from rolling away.
- Before leaving the truck, make sure that the parking brake is properly applied.



Message: Apply parking brake via button.

If the truck control unit detects a malfunction in \triangleright the parking brake, the truck cannot be switched off

- The (1) Apply parking brake via button message appears on the displayoperating unit.
- The LED (1) on the push button (2) flashes.
- · A warning signal sounds.

NOTE

If it becomes necessary to switch off a truck with a faulty parking brake, always secure the truck to prevent it from rolling.

A possible cause of the malfunction is that the parking brake cannot determine whether the truck is stationary or still in motion. The following section describes how to actuate the parking brake when it has a malfunction:

Actuating a parking brake with a malfunction when the truck is stationary

There are two ways to apply the parking brake:

- Press and hold the push button (1) for at least five seconds and then release the push button.


OR

- Press the push button (1) several times in succession so that the push button is actuated for a total of 5 seconds

The parking brake is applied with an audible sound. After the push button is released, the parking brake should not make any further sounds: if a sound is heard, this means the push button was pressed for less than five seconds. In this case, press the push button again to apply the parking brake again. Repeat this process as necessary until the parking brake applies and the (P) symbol appears.

Actuating a parking brake with a malfunction when the truck is in motion

- Press the push button (1).

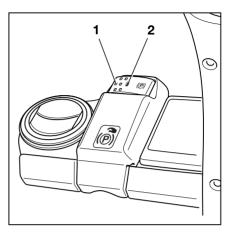



The parking brake is applied.

The truck brakes more strongly if the push button (1) is pressed and held down for longer or pressed several times.

"Safe parking" function

This function monitors the braking effect after the truck is parked. If a sensor is fitted on the lift mast (variant), it also checks whether the fork carriage is lowered.

This function alerts the driver with an audible warning signal if:

- The driver leaves the driver's seat and it has not been possible to apply the parking brake
- The driver leaves the driver's seat without lowering the fork carriage (variant)
- The driver attempts to switch off the truck and it has not been possible to apply the parking brake
- The truck starts moving within the next 20 seconds after the parking brake is applied



Driving

Activation and intervention by the "Safe parking" function

Cause	Effect
The driver's seat is vacated. The electric park- ing brake cannot be applied or previously could not be applied.	The following message appears in the display: Parking brake cannot be applied. - To confirm the message, press the S Soft- key. A warning signal sounds when the driver's seat is vacated. Sitting in the driver's seat silences the warning signal again.
The truck must be switched off. The electric parking brake cannot be applied or previously could not be applied.	The truck cannot be switched off. A warning signal sounds. The following messages appear in the display: Parking brake cannot be ap- plied. (①) - To confirm the message, press the ☑ Soft- key. Switch off truck anyway? ? - To confirm the message, press the ☑ Soft- key. Secure the truck to prevent it from rolling. △ - Secure the truck with wedges so that the truck does not roll away. - To confirm the message, press the ☑ Soft- key. It is now possible to switch off the truck.

A DANGER

Risk of fatal injury from being run over if the truck rolls away!

Park the truck securely if the parking brake is faulty. Secure the industrial truck to prevent it from rolling away.

- To do this, strictly adhere to the following instructions:
- If the parking brake cannot be applied automatically or via the push button, perform an emergency actuation of the parking brake. Refer to the section entitled "Emergency actuation of the parking brake" in the chapter "Procedure in emergencies".
- If the parking brake cannot be applied via the emergency actuation mechanism, secure the truck with wedges to prevent it from rolling.
- Have the parking brake repaired by an authorised service centre.



Message: Parking brake cannot be applied


If the truck control unit detects a malfunction in \triangleright the parking brake, the truck cannot be switched off.

- The Parking brake cannot be applied message appears on the display-operating unit.
- The LED (2) on the push button (1) flashes.
- · A warning signal sounds.

If it is necessary to switch off a truck with a faulty parking brake, the "Switching off a truck with a faulty electrical parking brake" section must be observed. It is essential to secure the truck to prevent it from rolling away.

If the parking brake is released via the emergency actuation mechanism, it is possible to drive the truck at a low speed.

- The truck can be moved out of the hazardous situation or to the repair location.
- Driving with a defective parking brake requires the driver to be especially vigilant.
- If the parking brake cannot be applied automatically or via the push button, apply the parking brake via the emergency actuation process. Refer to the section entitled "Emergency actuation of the parking brake" in the chapter "Procedure in emergencies".
- If the parking brake cannot be applied via the emergency actuation process, secure the truck with wedges so that the truck cannot roll away.
- Have the parking brake repaired by an authorised service centre.

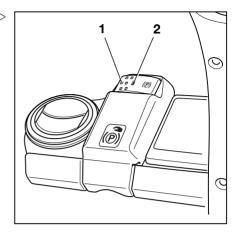



Steering

A DANGER

Risk of accident!

If the hydraulics fail, there is a risk of accident as the steering characteristics will have changed.


- Do not operate the truck if it has a defective steering system.
- Steer the truck by turning the steering wheel (1) accordingly.

Turning the steering wheel to the left (L) steers the truck to the left (L).

Turning the steering wheel to the right (R) steers the truck to the right (R).

The arrow (2) displays the direction in which the truck is moving.

For information on the turning radius, see the "Technical data".

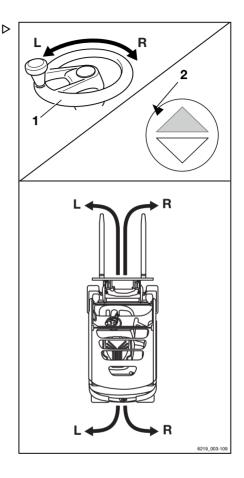



Reducing speed when turning (Curve Speed Control)

This function reduces the speed of the truck as the steering angle increases, regardless of the amount to which the accelerator has been actuated. If the steering angle is reduced again upon exiting the curve, the truck accelerates in line with how far the accelerator is depressed. ⊳

However, the function does not release the driver from the duty to approach a curve at a speed according to the following factors:

- · The carried load
- · The roadway conditions
- · The radius of the curve

A DANGER

The Curve Speed Control function cannot override the physical limits of stability. Despite this function, there still is a risk of tipping!

 Before using this function, familiarise yourself with the change to the driving and steering characteristics of the truck.


A DANGER

Increased risk of tipping if the Curve Speed Control function is disabled! If the controller fails while the truck is in motion or if the controller is disabled, the truck will no longer automatically brake when steering.

- Do not turn off the key switch while driving.
- Actuate the emergency stop switch only in emergencies.
- Always adapt your driving style to the conditions.

Despite the Curve Speed Control function, the truck may overturn in extreme cases within the following situations:

- Cornering too fast on uneven or inclined roadways.
- Turning the steering wheel sharply while driving.
- Cornering with an inadequately secured load.
- Cornering too fast on a smooth or wet roadway.

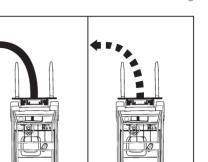

6227 002 0



Speed reduction when the fork carriage is raised (variant)

If the truck is equipped with this variant, the driving speed is automatically reduced to 5 km/h (forwards and backwards) from a lift height of more than 500 mm.

If the fork carriage is lowered below this lift height again, the driving speed limitation is deactivated.

If the lift height measuring system is not working correctly, e.g. due to contamination of the sensor, the driving speed is permanently limited to 5 km/h.

Speed reduction when the cab door is open

WARNING

Risk of accident from sudden deceleration of the truck

If the cab door is opened while the truck is in motion, the truck brakes automatically.

- Keep the cab door closed when driving.

With the "cab" equipment variant, the truck has a cab door monitoring function via a sensor. The signal from this sensor is linked with the signal from the buckle switch in the control electronics of the truck.

If the cab door is not closed and the seat belt is not fastened, the driving speed is limited to 4 km/h. The message Close the cab door or fasten belt appears in the display.

If the cab door is opened while the truck is in motion, the truck brakes automatically to a speed of 4 km/h. The message Close the cab door appears in the display.

If the seat belt is released with the cab door closed, no message appears in the display.



Speed restriction (variant)

The speed restriction (variant) is a function that can be configured by the fleet manager. It sets a maximum speed that can either be permanent or be called up by the driver. This function helps the driver to comply with speed restrictions, e.g. in storage areas or specific areas.

Switching the speed restriction on and off

- Press the button I.

The first menu level appears.

- Press the "Drive" softkey O.

The "Drive" menu appears.

- Press the "Speed restriction" softkey (6).

The activation bar appears next to the symbol. The speed restriction is switched on.

 To switch off the speed restriction, press the softkey again.

Configuring the speed restriction



Access to the settings menu is only available if the truck is at a standstill and the parking brake is applied. If the parking brake is released prematurely, the settings menu will close. Access is only granted when the password is entered by the fleet manager.

- Stop the truck.
- Actuate the parking brake.
- Press the button I.
- Press the "Settings" softkey #.


The first menu level appears.

 Activate the "Access authorisation for the fleet manager".

The "Settings menu" opens on the display.

- Press the Truck settings softkey 🎉.
- Press the Speed restriction softkey.



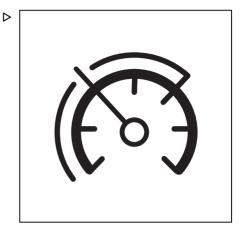

Drivinc

Driving

The menu that opens offers the following functions:

• Permanent

Enabling this function restricts the speed until the fleet manager disables this function.

- By pressing a button If this function is activated, the driver may switch the speed restriction on and off by pressing the (S) softkey.
- Entering the maximum speed This menu can be used to set the maximum truck speed when speed restriction is active.
- To adjust the maximum speed, press the Enter max. speed softkey.

The speed restriction menu opens.

 Using the softkeys, set a maximum speed between 2 km/h and 20 km/h.

The maximum speed is dependent on the truck equipment and may be restricted by a factory setting.

- To save, press the 🔳 button.

The maximum speed is entered.


− To clear, press the △ scroll button.

The entry is deleted.

- To cancel, press the 🕁 back button.

The display returns to the previous menu.

The main display button takes you to the main display.

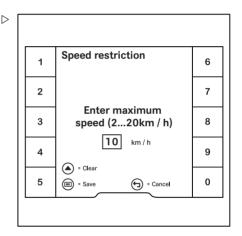



Parking

Parking

Parking the truck securely and switching it off



A DANGER

There is a risk of fatal injury from being run over if the truck rolls away.

- Do not park the truck on gradients.
- In emergencies, secure the truck using wedges on the side facing downhill.
- Only leave the truck when the parking brake has been applied.

A DANGER

There is a risk to life caused by a falling load or if truck components are being lowered.

- Lower the load fully before leaving the truck.

A CAUTION

Batteries may freeze!

If the truck is parked in an ambient temperature of below -10°C for an extended period, the batteries will cool down. For lead-acid batteries, the electrolyte can freeze and damage the batteries. The truck is then not ready for operation.


- At ambient temperatures of below -10°C, only park the truck for short periods of time.
- Apply parking brake.




-

Parking

- Lower the fork carriage to the ground.
- Tilt the lift mast forwards until the tips of the fork arms rest on the ground.
- If attachments (variant) are fitted, retract the working cylinders; see the chapter entitled "General instructions for controlling attachments".

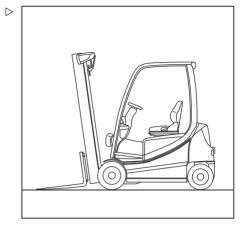

 Turn the switch key to position "0" and remove the key.

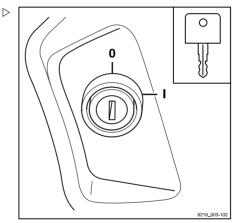




Parking

 In the "push button ignition" variant, press the button. (1)


Switch keys, FleetManager cards (variant), FleetManager transponder chips (variant) and the PIN code for access authorisation (variant) must not be handed over to other persons unless explicit instructions to this effect have been given by the responsible fleet manager.

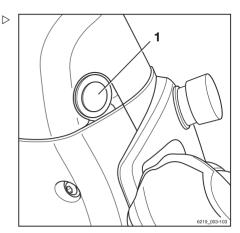

Wheel chock (variant)

The wheel chock (variant) is used to prevent the truck from rolling away on a slope. It is located on the rear post of the overhead guard.

- Pull the support bracket (1) away from wheel chock and hold the support bracket in position.
- Grasp the wheel chock (2) and pull it upwards and out of the support mounting (3).
- Push the wheel chock under a front axle wheel on the side facing the descending gradient.
- After use, insert the wheel chock back into the support mounting so that the support bracket locks the wheel chock into position.

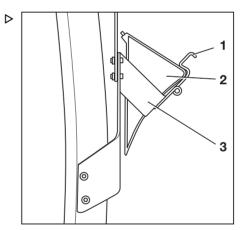



Lifting

Lifting system variants

The movement of the fork carriage and the lift mast heavily depends on the following equipment:

- The lift mast with which the truck is equipped, see ⇒ Chapter "Lift mast versions", Page 170
- The operating device with which the hydraulic functions are controlled, see ⇒ Chapter "Operating devices for the lifting system", Page 171

Regardless of the equipment variants of the truck, the basic specifications and procedures must be complied with, see \Rightarrow Chapter "Safety regulations when handing loads", Page 195.

Lift mast versions

A DANGER


Risk of accident due to collision of the lift mast or load with low ceilings or entrances.

- Note that the inner lift mast or load may be higher than the fork carriage.
- Observe the heights of ceilings and entrances.

One of the following lift masts may be attached to the truck:

Telescopic lift mast

When lifting, the lift mast rises above the outer lift cylinders. The lift mast takes the fork carriage with it via the chains. In this scenario, the fork carriage rises at twice the speed of the inner lift mast. The top edge (1) of the inner lift mast can therefore be higher than the fork carriage.

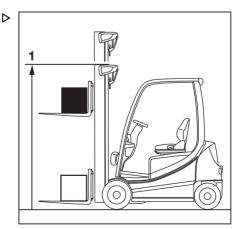




Lifting

NiHo lift mast (variant)


During lifting, the inner lift cylinder moves up to free lift (3) and then the outer lift cylinders raise the inner lift mast up to the maximum height (2).

When lifting above the free lift, the fork carriage always remains at the upper edge of the extending lift mast.

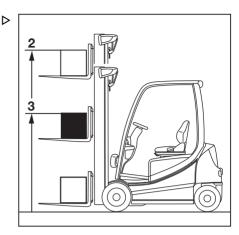

Triple mast (variant)

During lifting, the inner lift cylinder moves up to free lift (3) and then the outer lift cylinders raise the inner lift mast up to the maximum height (2).

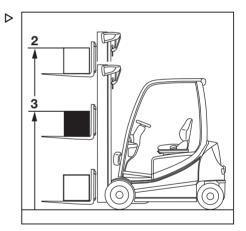

Operating devices for the lifting system

The method of operating the lifting system depends on the operating devices included in the truck's equipment.

Possible equipment variants include:

- · Multi-lever
- · Double mini-lever
- · Triple mini-lever
- · Quadruple mini-lever



4

Lifting

- Fingertip
- Joystick 4Plus

For clarity, the movements of the lifting system \triangleright are referred to by the letters (A, B, C, D) in this subchapter.


- A Lowering the fork carriage
- B Lifting the fork carriage
- C Tilting the lift mast forwards
- D Tilting the lift mast backwards
- See the relevant sections in this subchapter.

WARNING

Risk of injury due to delayed response from the truck!

If the lifting movements are configured to use low dynamics, the lifting system responds after a delay when the operating device is released, even in an emergency. The fork carriage does not stop immediately upon release. It only stops after approximately one second. This behaviour may also occur when specific settings are configured for the Dynamic Load Control 1 & 2 assistance functions.

- Work with particular attention and care.

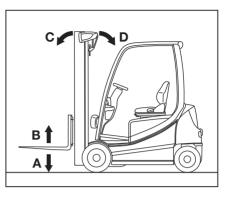



Controlling the lifting system using multi-lever operation

A DANGER

Reaching into or climbing between moving parts of the truck (e.g. lift mast, sideshifts, working equipment, load carrying devices etc.) can lead to serious injury or death and is therefore prohibited.

- Observe the safety regulations for handling loads.
- Operate the lifting system from the driver's seat only.

The lifting, lowering and tilting functions of the lift mast are controlled using the "lifting/lowering" operating lever (1) and the "tilting" operating lever (2). The adhesive labels bearing the pictograms for the hydraulic functions (3, 4) are affixed on the operating levers.

Observe the pictograms on the adhesive labels (3) and (4).

The pictograms are arranged according to the direction of movement of the operating lever (1) or (2).

Lifting/lowering the fork carriage

To lift the fork carriage:

Move the "lifting/lowering" operating lever (1) in the direction of the arrow (B).

To lower the fork carriage:

Move the "lifting/lowering" operating lever (1) in the direction of the arrow (A).


Tilting the lift mast

To tilt the lift mast forwards:

 Move the "tilting" operating lever (2) in the direction of the arrow (C).

To tilt the lift mast backwards:

 Move the "tilting" operating lever (2) in the direction of the arrow (D).

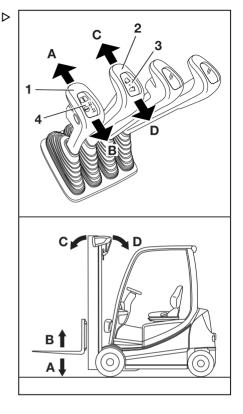

Lifting



Lifting

Movements of the lifting system and meanings of the pictograms

- A _J Lowering
- B _1 Lifting
- C \iint Tilting forwards
- D C Tilting backwards



Controlling the lifting system using a \triangleright double mini-lever

A DANGER

Reaching into or climbing between moving parts of the truck (e.g. lift mast, sideshifts, working equipment, load carrying devices etc.) can lead to serious injury or death and is therefore prohibited.

- Observe the safety regulations for handling loads.
- Operate the lifting system from the driver's seat only.

The lifting, lowering and tilting movements of the lift mast are controlled using the "lift mast" 360° lever (3). The adhesive label bearing the pictograms for the hydraulic functions (1) or (2) is affixed at the designated point (4).

- If the adhesive label becomes illegible or is missing, please contact your authorised service centre.
- Observe the pictograms on the adhesive labels (1) and (2).

The pictograms are arranged according to the direction of movement of the "lift mast" 360° lever (3).

NOTE

The truck is configured at the factory in accordance with the adhesive label (1). The following steps for moving the fork carriage and lift mast are based on this configuration.

Lifting/lowering the fork carriage

To lift the fork carriage:

- Move the "lift mast" 360° lever (3) in the direction of the arrow (B).


To lower the fork carriage:

- Move the "lift mast" 360° lever (3) in the direction of the arrow (A).

Tilting the lift mast


To tilt the lift mast forwards:



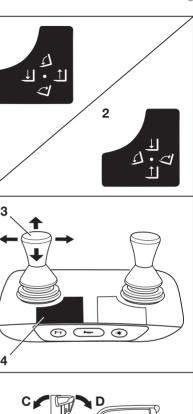

1

4

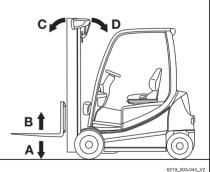

4

Lifting

Move the "lift mast" 360° lever (4) in the direction of the arrow (C).

To tilt the lift mast backwards:

Move the "lift mast" 360° lever (4) in the direction of the arrow (D).

Movements of the lifting system and meanings of the pictograms

- A 🔄 Lowering
- B ______ Lifting
- C 🗳 Tilting forwards
- D C Tilting backwards



Controlling the lifting system using a \triangleright triple mini-lever

A DANGER

Reaching into or climbing between moving parts of the truck (e.g. lift mast, sideshifts, working equipment, load carrying devices etc.) can lead to serious injury or death and is therefore prohibited.

- Observe the safety regulations for handling loads.
- Operate the lifting system from the driver's seat only.

The lifting, lowering and tilting movements of the lift mast are controlled using the "lift mast" 360° lever (3). The adhesive label bearing the pictograms for the hydraulic functions (1) or (2) is affixed at the designated point (4).

- If the adhesive label becomes illegible or is missing, please contact your authorised service centre.
- Observe the pictograms on the adhesive labels (1) and (2).

The pictograms are arranged according to the direction of movement of the "lift mast" 360° lever (3).

NOTE

The truck is configured at the factory in accordance with the adhesive label (1). The following steps for moving the fork carriage and lift mast are based on this configuration.

Lifting/lowering the fork carriage

To lift the fork carriage:

- Move the "lift mast" 360° lever (3) in the direction of the arrow (B).


To lower the fork carriage:

- Move the "lift mast" 360° lever (3) in the direction of the arrow (A).

Tilting the lift mast

To tilt the lift mast forwards:




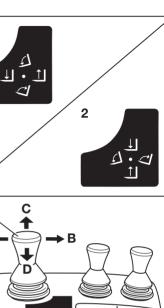

(*

1

3

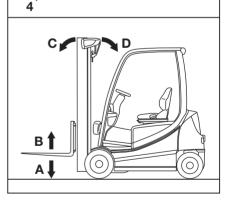

(F1)

Lifting

4

Lifting

Move the "lift mast" 360° lever (4) in the direction of the arrow (C).

To tilt the lift mast backwards:

Move the "lift mast" 360° lever (4) in the direction of the arrow (D).

Movements of the lifting system and meanings of the pictograms

- A 🔄 Lowering
- B ______ Lifting
- C 🗳 Tilting forwards
- D C Tilting backwards



Controlling the lifting system using a ⊳ quadruple mini-lever

A DANGER

Reaching into or climbing between moving parts of the truck (e.g. lift mast, sideshifts, working equipment, load carrying devices etc.) can lead to serious injury or death and is therefore prohibited.

- Observe the safety regulations for handling loads.
- Operate the lifting system from the driver's seat only.

The lifting, lowering and tilting functions of the lift mast are controlled using the "lifting/lowering" operating lever (3) and the "lift mast" operating lever (4). The adhesive label bearing the pictograms for the hydraulic functions (1) is affixed at the designated point (6). The adhesive label (2) is attached at the designated point (5). The truck is configured at the factory in accordance with the adhesive label (1).

Observe the pictograms on the adhesive labels (1) and (2).

The pictograms are arranged according to the direction of movement of the operating lever (3) or (4).

Lifting/lowering the fork carriage

To lift the fork carriage:

Move the "lifting/lowering" operating lever (3) in the direction of the arrow (D).

To lower the fork carriage:

Move the "lifting/lowering" operating lever (3) in the direction of the arrow (C).


Tilting the lift mast

To tilt the lift mast forwards:

 Move the "lift mast" operating lever (4) in the direction of the arrow (A).

To tilt the lift mast backwards:

 Move the "lift mast" operating lever (4) in the direction of the arrow (B).

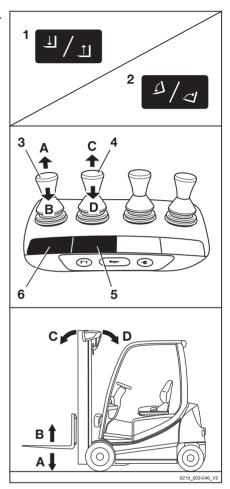



Lifting

Lifting

Movements of the lifting system and meanings of the pictograms

- A _J Lowering
- B ______ Lifting
- C \iint Tilting forwards
- D C Tilting backwards



Controlling the lifting system using the Fingertip

A DANGER

Reaching into or climbing between moving parts of the truck (e.g. lift mast, sideshifts, working equipment, load carrying devices etc.) can lead to serious injury or death and is therefore prohibited.

- Observe the safety regulations for handling loads.
- Operate the lifting system from the driver's seat only.

The lifting, lowering and tilting functions of the lift mast are controlled using the "lifting/lowering" operating lever (1) and the "tilting" operating lever (4). The adhesive labels bearing the pictograms for the hydraulic functions (2, 3) are affixed on the operating levers.

Observe the pictograms on the adhesive labels (2) and (3).

The pictograms are arranged according to the direction of movement of the operating lever (1) or (2).

Lifting/lowering the fork carriage

To lift the fork carriage:

Move the "lifting/lowering" operating lever (1) in the direction of the arrow (A).

To lower the fork carriage:

Move the "lifting/lowering" operating lever (1) in the direction of the arrow (B).


Tilting the lift mast

To tilt the lift mast forwards:

 Move the "tilting" operating lever (2) in the direction of the arrow (C).

To tilt the lift mast backwards:

 Move the "tilting" operating lever (2) in the direction of the arrow (D).

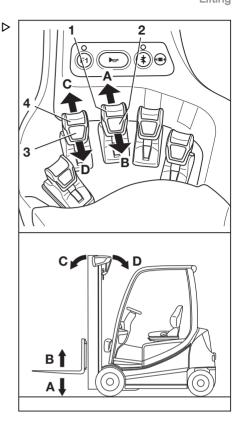



4

Lifting

Movements of the lifting system and meanings of the pictograms

- A ⊥ Lowering
- B 🗋 Lifting
- C 💋 Tilting forwards
- D C Tilting backwards

Controlling the lifting system using the Joystick 4Plus

A DANGER

Reaching into or climbing between moving parts of the truck (e.g. lift mast, sideshifts, working equipment, load carrying devices etc.) can lead to serious injury or death and is therefore prohibited.

- Observe the safety regulations for handling loads.
- Operate the lifting system from the driver's seat only.


Lifting/lowering the fork carriage

To lift the fork carriage:

- Pull the Joystick 4Plus (1) backwards (B).

To lower the fork carriage:


- Push the Joystick 4Plus (1) forwards (A).

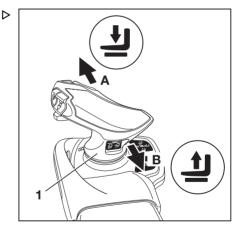



To tilt the lift mast forwards:

- Tilt the horizontal rocker button (2) to the left (C).
- To tilt the lift mast backwards:
- Tilt the horizontal rocker button (2) to the right (D).

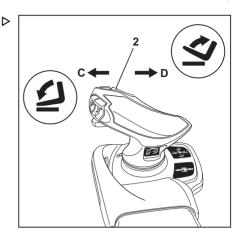

Fork carriage sideshift

To move the fork carriage to the left:

- Push the Joystick 4Plus (1) to the left (E).


To move the fork carriage to the right:

- Push the Joystick 4Plus (1) to the right (F).

i NOTE

The pictograms on the Joystick 4Plus indicate the direction of movement of the lift mast and the fork carriage.

⊳

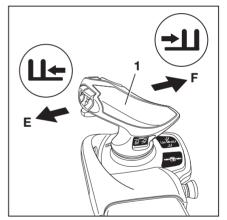



Lifting

Dynamics of the hydraulic movements

WARNING

Risk of injury due to delayed response from the truck!

If the lifting movements are configured to use low dynamics, the lifting system responds after a delay when the operating device is released, even in an emergency. The fork carriage does not stop immediately upon release. It only stops after approximately one second. This behaviour may also occur when specific settings are configured for the Dynamic Load Control 1 & 2 assistance functions.

- Work with particular attention and care.

The authorised service centre can reduce the dynamics of the hydraulic movements to adapt the hydraulic movements to the application requirements. The hydraulic system movement will then respond more slowly to the actuation of the operating device.

Maximum dynamics are suitable for applications that require the load pick up system to respond quickly and directly. Minimum dynamics are suitable for applications that involve, for example, the movement of fragile goods during which impacts must be avoided.

Maximum dynamics (standard setting)

- The hydraulic movement immediately follows the actuation of the operating device.
- When the operating device is released, the hydraulic movement decelerates very quickly.

The fork carriage quickly comes to a standstill.

Minimum dynamics

- The hydraulic movement accelerates very slowly when actuating the operating device.
- The hydraulic movement follows the actuation of the operating device very slowly.
- When the operating device is released, the hydraulic movement only decelerates slow-ly.

The fork carriage therefore continues to run for some time before the movement comes to a standstill.



Selecting load programs 1 to 3

The truck has three load programs for the different lifting behaviours of the fork carriage and the lift mast. The higher the number of the load program selected, the greater the load dynamics.

Differences between the load programs


- [□] Load program 1: 66% lifting speed
- □² Load program 2: 85% lifting speed
- Image: Provide the second seco


The lifting behaviour of the truck is selected via the display-operating unit under the "Load" menu item ■.

- Press the softkey □¹...□³ to select the desired load program.
- If the load programs are saved as a favourite on a softkey, press the "Load dynamics" softkey
 [□] until the number of the desired load program is shown on the display.

The number of dynamic bar segments shows the load dynamics of the selected load program.

During the warm-up phase, the load dynamics are limited to \mathbb{Q}^{1} load program 1.

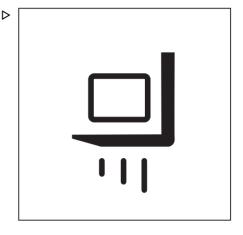

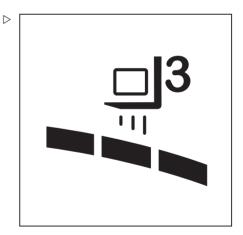

Fork wear protection (variant)

The "fork wear protection" variant ensures that the fork arms do not touch the ground. The fork arms are protected against wear and the building floor is protected against damage. Inserting the forks into a pallet is more comfortable thanks to the lower stop.

There are two types of fork wear protection:



Lifting

Lifting

Mechanical version

With this version, fixed stops are installed in the lift cylinders. These stops prevent the fork arms from coming into contact with the floor. No symbol appears in the display-operating unit.

This version cannot be adjusted. However, the mechanical fork wear protection must be continually adjusted as the tyre wear increases.

Contact the authorised service centre on this matter.

Electronically controlled version

This version ensures that the fork arms do not touch the ground. The fork arms are protected against wear and the building floor is protected against damage. Inserting the forks into a pallet is more comfortable thanks to the lower stop.

The correct height for comfortably driving into a pallet on the floor can be adjusted.

Contact the authorised service centre on this matter.

The fork wear protection function is always active when the truck is switched on. The "fork wear protection" symbol data appears in the display. Only the authorised service centre may deactivate the function.


- If the "Fork wear protection" symbol dis is grey, the function is switched on.
- If the "Fork wear protection" symbol black, the function is taking effect.
 The fork carriage does not lower to a level that is higher than the set level.

Lowering to the ground

The fork wear protection can be temporarily deactivated to lower the fork arms to the ground and securely park the truck.

 Lower the fork carriage until the fork wear protection function intervenes.

When the fork wear protection intervenes, the "fork wear protection" symbol $\frac{1}{22}$ turns black. Other symbols, e.g. lift height restriction, are then covered.

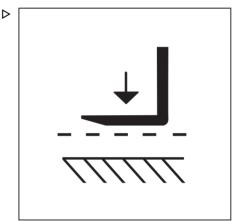



Liftin

 Release the operating device for lowering and press the "F" button to acknowledge this.

The fork wear protection is switched off. The forks can now be lowered to the ground. The function remains switched on. The function becomes active again the next time the fork carriage is lifted above the set value. It intervenes the next time the fork carriage is lowered.

With the access authorisation, the fleet manager can adjust the length of the fork arms and calibrate the height of the fork wear protection.

Changing the fork arms

A DANGER

There is a risk of fatal injury from being run over if the truck rolls away.

- Do not park the truck on gradients.
- Apply the parking brake.
- Change the fork extension in a cordoned-off, safe location on a level surface.

A WARNING

There is a risk of injury when changing the fork arms; the weight of the fork arms could cause them to fall on your legs, feet or knees. The space to the left and right of the fork is a danger area.

- Always wear protective gloves and safety shoes when changing the fork arms.
- Ensure that no one stands in the danger area!
- Do not pull on the fork arms.
- The fork arms must always be carried by two people; if necessary, use a hoist.



Operation

4

Lifting

- It is recommended that a transport pallet is used to supporting the fork arms when they are being installed or removed. The pallet size depends on the size of the fork arms used and must be of sufficient size so that the fork arms do not protrude after being placed on the pallet. This means the fork arms can be safely placed down and transported.
- Both fork arms can be pushed over onto one side.


Removing

⊳

- Select the pallet according to the size of the fork arms.
- Position the pallet to the left or right of the fork carriage.
- Raise the fork carriage until the lower edges of the fork arms are approx. 3 cm higher than the height of the pallet.
- Actuate the parking brake and make sure it is applied securely.
- Turn the switch key to the left and remove it.
- Undo the locking screw (2) on the right or left.
- Pull the locking lever (1) upwards and push the fork arms outwards onto the pallet.

Installing

- Position the fork arms on a pallet to the left or right of the fork carriage.
- Push the fork arms onto the fork carriage from the outside towards the centre.
- Pull the locking lever (1) upwards and push the fork arms into the required position. Ensure that the locking lever snaps into place.
- Fit and tighten the locking screw (2).

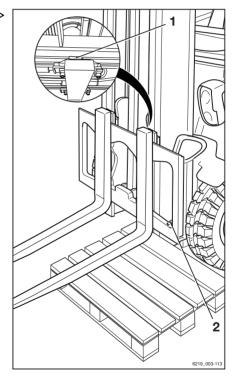



There is a risk of fatal injury from a falling load or fork!

- Tighten the locking screw (2) each time a fork is changed.
- It is not permitted to drive or to transport loads without the locking screw in place.

If the truck is equipped with the "load measurement" comfort feature (variant), a "zero adjustment of the load measurement" must always be performed after the fork arms have been changed. Otherwise, correct load measurement cannot be guaranteed.

Fork extension (variant)

A DANGER

There is a risk of fatal injury from being run over if the truck rolls away.

- Do not park the truck on gradients.
- Apply the parking brake.
- Change the fork extension in a cordoned-off, safe location on a level surface.

WARNING

There is a risk of crushing!

The weight of the fork extension can cause crushing and cuts can be caused by sharp edges or burrs.

Always wear protective gloves and safety shoes.

WARNING

There is a risk of tipping!

The weight and dimensions of the fork extension affect the stability of the truck. The permissible weights stated on the capacity rating plate must be reduced in proportion to the actual load distance.

If the truck is equipped with a fork extension ex works, then the capacity rating plate will already have been adjusted accordingly.

 Observe the load capacity; refer to the chapter entitled "Before picking up a load".



4

Lifting

If the truck is equipped with the "load measurement" comfort feature (variant), a "zero adjustment of the load measurement" must always be performed after the fork arms have been changed. Otherwise, correct load measurement cannot be guaranteed.

Fitting

A DANGER

Risk of fatal injury from falling load!


At least 60% of the length of the fork extension must lie on the fork arm. No more than 40% of the length of the fork extension may overhang the end of the fork arms. In addition, the fork extension must be secured against slipping from the fork arm.

If the fork extension (1) is not secured with a securing bolt (2) and linch pin (3), the load may fall, along with the fork extension.

- Push the fork extension all the way to the back of the fork.
- Make sure that 60% of the length of the fork extension is on the fork arm.
- Always secure the fork extension with the securing bolt.
- Always secure the securing bolt with the linch pin.
- Remove the linch pin (3) from the securing bolt (2).
- Remove the securing bolt from the fork extension (1).
- Push the fork extension onto the fork arms until the fork extension is flush with the fork back.
- Insert the securing bolt located behind the fork back fully into the fork extension.
- Insert the linch pin into the securing bolt and secure.

Removing

- Remove the linch pin (3) from the securing bolt (2).
- Remove the securing bolt from the fork extension (1).

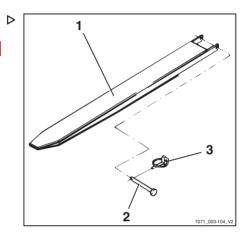



- Pull the fork extension off the fork arms.
- Insert the securing bolt fully into the fork extension.
- Insert the linch pin into the securing bolt and secure.

Operation with reversible fork arms ▷ (variant)

A DANGER

Risk of fatal injury from falling load!

Normal fork arms are not structurally designed for reverse operation. If this instruction is not observed, it can lead to material failure and the load falling.

 Only work in reverse operation using reversible fork arms (1).

WARNING

Risk of accident from slipping load!

Loads may slip on the reversible fork arms if there is no load support. A fork extension (variant) cannot be secured against slipping.

Do not use a fork extension (variant).

A WARNING


Risk of accident from the truck tipping over.

When driving, the centre of gravity of the load (2) must not be more than 600 mm above the ground. The truck may tip forwards when driving or braking.

 Only drive with a load centre of gravity up to a max. of 600 mm above the ground



If the truck is equipped with the "load measurement" comfort feature (variant), a "zero adjustment of the load measurement" must always be performed after the fork arms have been changed. Otherwise, correct load measurement cannot be guaranteed.

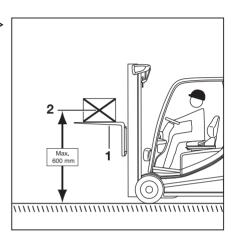



Lifting

Reversible fork arms (1) can be used to reach an additional lift height. The reversible fork arms are attached to the fork carriage in the same manner as standard fork arms. Loads may be lifted on and beneath the reversible fork arms. The mast is lifted and tilted in the same manner.

- Only work in reverse operation using reversible fork arms.
- Do not use a fork extension (variant).
- If the "load measurement" comfort feature (variant) is available, perform a "zero adjustment of the load measurement".
- To drive, raise the load centre of gravity (2) to a max. of 600 mm above the ground.
- Observe the information in the section entitled "Transporting suspended loads".

Malfunctions during lifting mode

Incorrect extension sequence

A DANGER


Risk of accidents!

In the case of Hi-Lo lift masts (variant) and triplex lift masts (variant), an incorrect extension sequence may occur, i.e. the inner lift mast may extend before the free lift is complete. As a result, the overall height is exceeded and damage may occur in passageways or from low ceilings.

An incorrect extension sequence may, for instance, result from:

- The hydraulic oil temperature being too low.
- Blocking of the fork carriage in the inner lift mast.
- · Blocking of the free lift cylinder.
- Blocking of the chain roller on the free lift cylinder.
- If the hydraulic oil temperature is too low, slowly actuate the lift mast functions several times in order to raise the oil temperature.

In the event that the fork carriage is blocked in the inner lift mast, or the free lift cylinder or chain roller are blocked, the cause of the blockage must be eliminated before resuming work.

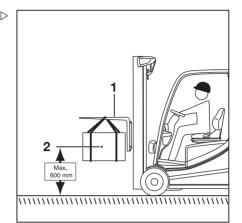



- Notify your service centre

Load chains not under tension

A DANGER

Danger caused by a falling load!

 Make sure that the chain(s) does (do) not become slack when lowering the load.

Slack chains can, for instance, result from:

- Resting the fork carriage or the load on the racking.
- Fork carriage rollers blocking in the lift mast due to contamination.
- If the fork carriage or the load comes to an unexpected stop, lift the fork carriage until the chains are under tension again and lower the load at another suitable location.
- If the fork carriage rollers in the lift mast become blocked due to contamination, lift the fork carriage until the chains are under tension again. Remove the contamination before resuming work.

WARNING

Risk of injury!

 Observe the safety regulations for working on the lift mast, see the chapter entitled "Working at the front of the truck".

Hydraulic blocking function

The hydraulic blocking function ensures that all the functions of the working hydraulics are disabled whenever the seat switch in the driver's seat is unloaded.

If the driver's seat is vacated, the blocking function prevents hydraulic operation for the following functions:

- · Lift the load
- · Lower the load
- · Tilt the lift mast
- · Auxiliary hydraulic functions
- · Steering

 


Lifting



Only the emergency steering function remains available.





Handling loads

Safety regulations when handing loads

⊳

The safety regulations for handling loads are shown in the following sections.

A DANGER

There is a risk to life caused by falling loads or if parts of the truck are being lowered.

- Never walk or stand underneath suspended loads or raised fork arms.
- Never exceed the maximum load indicated on the capacity rating plate. Otherwise stability cannot be guaranteed!

A DANGER

Risk of accident from falling or crushing!

- Do not step onto the forks.
- Do not lift people.
- Never grab or climb on moving parts of the truck.

A DANGER

Risk of accident from a falling load!

- When transporting small items, attach a load safety guard (variant) to prevent the load from falling on the driver.
- Use a closed roof covering (variant) in addition.





Δ

Before picking up a load

Load capacity

The load capacity indicated for the truck on the capacity rating plate must not be exceeded. The load capacity is influenced by the load centre of gravity and the lift height as well as by the tyres, if applicable.

 The position of the capacity rating plate can be taken from the "labelling points".

WARNING

The figures show examples.

Only the capacity rating plates on the truck are valid!

The attachment of additional weights to increase the load capacity is prohibited.

A DANGER

Risk of fatal injury from the truck losing stability!

Never exceed the maximum loads shown! These values apply to compact and homogeneous loads. If these values are exceeded, the stability and rigidity of the fork arms and lift mast cannot be guaranteed.

Improper or incorrect operation or the placement of persons to increase load capacity is prohibited.

							2
		An	bau2				h(mm)
1	Fabrik	Q (kg)		660	800	910	5030
				680	800	930	4830
				690	3	950	4630
				710	860	970	4230
	s=ssvmm			730	880	1000	3830
	SES			800	600	500	c(mm)
							6219_003

Capacity rating plate

⊳

- 1 Load distance from fork back
- 2 Permissible lift height
- 3 Weight of load to be lifted

Example

Weight of load to be lifted: 880 kg (3)

Load distance from fork back: 500 mm (1)


Permitted lift height: 5230 mm (2)

A WARNING

Risk of accident from the truck losing stability!

The permissible loading of the attachments (variant) and the reduced load capacity of the combination of truck and attachment must not be exceeded.

- Observe the special capacity rating plate information shown on the truck and the attachment.

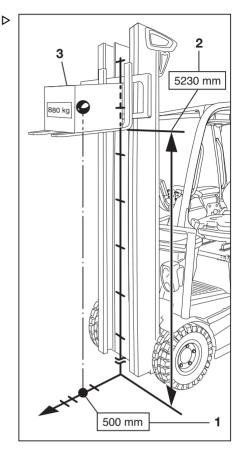

Picking up loads

To make sure that the load is securely supported, it must be ensured that the fork arms are sufficiently far apart and are positioned as far as possible under the load.

If possible, the load should rest on the back of the fork.

The load must not protrude too far over the fork tips, nor should the fork tips protrude too far out from the load.

Loads are to be picked up and transported as close to the middle as possible.



A DANGER

Risk of accident from a falling load!

When transporting small items, attach a load safety guard (variant) to prevent the load from falling on the driver.

A closed roof covering (variant) should also be used.


Removable roof panels may not be removed.

Adjusting the fork

- Lift the locking lever (1) and move the fork arms to the desired position.
- Allow the locking lever to snap back into place.

The load centre of gravity must be midway between the fork arms.

 Only actuate the fork prong positioner (variant) when the fork is not carrying a load.

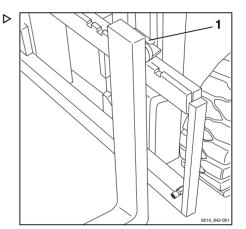

Danger area

The danger area is the area in which people are at risk due to the movements of the truck, its working equipment, its load-carrying equipment (e.g. attachments) or the load. Also included are the areas where loads could fall or working equipment could fall or be lowered.



A DANGER

Risk of injury!

Do not step on the fork.



A DANGER

Risk of injury!

- Do not step under the raised forks.



A DANGER

People may be injured in the danger area of the truck!

The danger area of the truck must be completely clear of all personnel, except the driver in his normal operating position. If persons fail to leave the danger area despite warnings:

- Cease work with the truck immediately.
- Secure the truck against use by unauthorised parties.



Danger of death from falling loads!


• Never walk or stand underneath suspended loads.

Transporting pallets

As a rule, loads (e.g. pallets) must be transported individually. Transporting multiple loads at the same time is only permitted:

- · when instructed by the supervisor and
- when the technical requirements have been met.

The driver must ensure proper condition of the load. Only safely and carefully positioned loads may be transported.

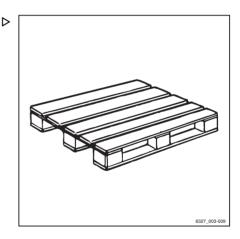



Transporting suspended loads

Before transporting suspended loads, consult the national regulatory authorities (in Germany, the employer's liability insurance associations).

National regulations may place restrictions on these operations. Contact the relevant authorities.

A DANGER

Suspended loads that begin to swing can result in the following risks:

- Impaired braking characteristics and steering movement
- Tipping over the load wheels or drive wheels
- Tipping the truck at right angles to the drive direction
- · Risk of crushing of guide persons
- · Reduced visibility

A DANGER

Loss of stability.

Slipping or swinging suspended loads can lead to a loss of stability and cause the truck to tip over.

 When transporting suspended loads, observe the following instructions

Instructions for transporting suspended loads:

- Swinging loads must be prevented by using the proper driving speed and driving style (careful steering, braking)
- Hanging loads must be hooked on to the truck in such a way that the harness cannot shift or release unintentionally and cannot be damaged
- When transporting suspended loads, suitable devices (e.g. guy wires or supporting poles) must be available so that accompanying persons can guide suspended loads and prevent the loads from swinging
- Take particular care to ensure that there is no one in the drive direction in the driving lane
- If, despite this, the load begins to swing, ensure that no person is placed at risk





Δ

A DANGER

Risk of accident!

When transporting suspended loads, never perform or end driving and load movements abruptly.

Never drive on slopes with a suspended load.

Transporting containers holding fluids as hanging loads is not permitted.

Lift mast vertical position (variant)

A CAUTION

Risk of damage to property due to the lift mast colliding with racks or other objects!

 Before using the "automatic mast vertical positioning" comfort feature, position the truck at a sufficient distance from racks and other objects.

Goods such as paper rolls can be lowered vertically with precision using the "automatic mast vertical positioning" comfort feature, thereby avoiding damage when unloading. "Automatic mast vertical positioning" functions when tilting forwards. A further variant is available which also functions when tilting backwards. The tilt cylinders run into the end stops gently to prevent hard vibrations and impacts. Oscillating motions of the truck are minimised, thus increasing work safety. Automatic mast vertical positioning reduces wear on various components, thereby reducing repair costs.


 Push the "automatic mast vertical positioning" softkey

The symbol _ appears in the display.

- Tilt back the lift mast until it reaches the end stop.
- Tilt the lift mast forwards.

The lift mast stops in the vertical position.

The lift mast also stops in the vertical position if it is tilted forwards by $\geq 3^{\circ}$ from a backward tilt.

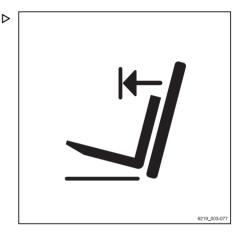



Handling loads



The automatic mast vertical positioning must be calibrated in order to ensure accuracy at all times. The "access authorisation for the fleet manager" is required for the calibration. This access is required:

- When placing loads into stock and removing loads from stock on ramps
- In the event of tyre wear
- If the lift mast is obviously not in the vertical position
- See the section entitled "Calibrating the automatic mast vertical positioning".

Calibrating the automatic mast vertical positioning

The automatic mast vertical positioning is calibrated using a wizard on the display-operating unit.

The wizard requires authorisation at service level. Access to the settings menu is only available if the truck is at a standstill and the parking brake is applied. If the parking brake is released prematurely, the settings menu will close.

- Set the load down, if necessary.
- Drive the truck into one of the areas that is to be used for placing loads into stock and removing loads from stock.

This means that, after the calibration, the "automatic mast vertical positioning" comfort feature can be used, for example, to place a pallet into a storage rack horizontally when the truck is on a ramp.


- Lift the fork carriage slightly.
- Apply the parking brake.




Operation

Handling loads

- Attach a tilt angle template with a spirit level ▷ to the outer lift mast.
- Bring the lift mast to the vertical position according to the spirit level.
- Press the button I.
- Press the "Settings" Softkey 🧬.
- Activate the "Access authorisation for the fleet manager".

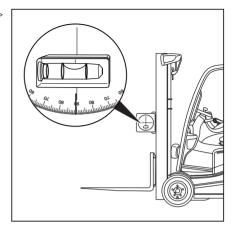

- Press the Service softkey -4.

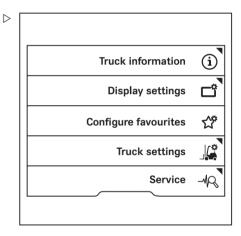



4

Handling loads

- Press the scroll keys △ ♥ until the Cal- ▷ ibration menu appears.

Maintenance interval
Calibration
Shock sensor
Change password (access auth.)
Relieve hydraulics

– Press the Lift mast tilting softkey. \triangleright

The wizard for calibrating the load measurement is started.

- Follow the instructions on the display.
- If the message Calibration failed ! appears, press the softkey <a>[.
- Repeat the process.

After the calibration has been completed successfully, the message Successful calibration \checkmark appears.

- Switch the truck off and on again.

The calibration is now complete.

If the message A6701 Fault: Monitoring of assistance system (A) appears during the calibration, perform the calibration again. Lift mast tilting Load measurement




Picking up a load

A DANGER

There is a risk to life from a falling load or from truck components being lowered.

- Never walk or stand underneath suspended loads or raised fork arms.
- Never exceed the maximum load values specified on the capacity rating plate. Otherwise, stability cannot be guaranteed.
- Only store pallets that do not exceed the specified maximum size. Damaged loading equipment and incorrectly formed loads must not be stored.
- Attach or secure the load to the lifting accessory so that the load cannot move or fall.
- Store the load so that the specified aisle width is not reduced by protruding parts.
- Approach the rack carefully, brake gently and stop just in front of the rack.

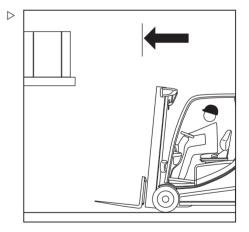




- Position the forks.
- Set the lift mast to vertical.
- Lift the fork carriage to the stacking height.


A CAUTION

Risk of component damage!

When the fork is inserted into the rack, take care not to damage the rack or the load.

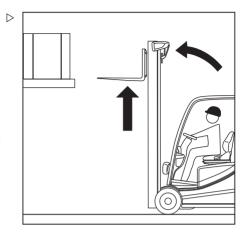

 Insert the fork as far under the load as possible. Stop the truck as soon as the fork back is resting on the load. The load centre of gravity must be midway between the fork arms.

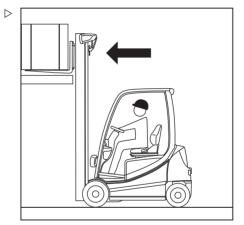



 Lift the fork carriage until the load is resting entirely on the fork.

A DANGER


Risk of accident!


- Beware of any people in the danger area.
- Ensure that the roadway behind you is clear.

A DANGER

Due to the risk of tipping, never tilt the lift mast with a raised load!

- Lower the load before tilting the lift mast.
- Reverse carefully and slowly until the load is clear of the rack. Brake gently.
- Lower the load while maintaining ground clearance.

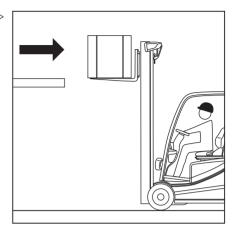


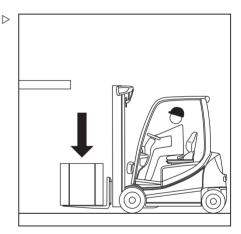



- Tilt the lift mast backwards.

The load can be transported.

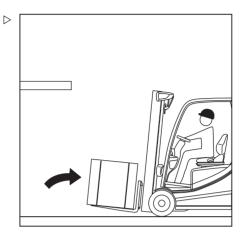

Transporting loads




Observe the information in the chapter entitled "Safety regulations when driving".

A DANGER

The higher a load is lifted, the less stable it becomes. The truck can tip over. The load can fall. There is an increased risk of accidents.

Driving with a raised load and the lift mast tilted forward is not permitted.

- Only drive with the load lowered.
- Lower the load until ground clearance is reached (not over 300 mm).
- Only drive with the lift mast tilted backwards.

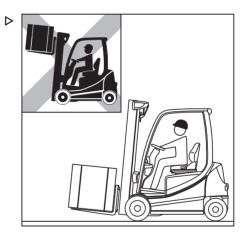



- Drive slowly and carefully around corners.


i NOTE


Observe the information in the chapter entitled "Steering".

- Always accelerate and brake gently.

Observe the information in the chapter entitled "Operating the service brake".

Never drive with a load protruding to the side (e.g. with the sideshift)!

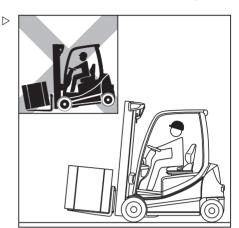

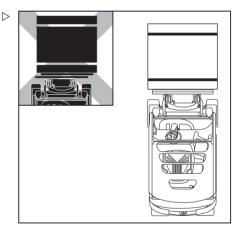

Shake function (variant)



The shake function is intended only for shortterm use, as it reduces the service life of the load chains due to the increased loading on them.

Description

The shake function of the hydraulics makes it easier for the driver to perform tasks such as emptying containers of bulk material. The



Δ

shake function moves the fork carriage quickly up and down via the "Lifting" function.

This function may only be used for a limited load and must not be used with a full nominal load.

Maximum permissible load for the shake function:

 Maximum 30% of the nominal load. If an attachment is being used, its weight must be subtracted from this value.

The weight of an attachment can be seen on its nameplate.

Operation

To activate the shake function:

 Move the corresponding operating device for the "Lifting" function over the zero position four times in quick succession.

The fork carriage moves as normal. The shake function is active after the fourth time the operating device is moved.

 Continue to move the operating device back and forth.

The fork carriage moves up and down more quickly and more jerkily.

The intensity of the shaking is controlled via the vigour with which the operating device is moved. The more vigorously and frequently the operating device is moved, the more intense the shaking is.

After the function has been activated, the driver has two seconds to start the shaking. If the two seconds elapse without the shake function being used, the shake function is deactivated again.



WARNING


The shake function remains active for two seconds following activation.

If the driver simply wants to lift or lower the load during this time, note that the fork carriage may move significantly more jerkily with the load than in normal operation. If the two seconds elapse without the shake function being used, the fork carriage can be moved normally again with the load.

The following section shows how the shake function is activated via the standard assignment for "lifting/lowering" using the different variants of the operating devices. If the "lifting/ lowering" function is assigned differently on the operating device, the shake function is activated via this other assignment.

Joystick 4Plus:


 Move the Joystick 4Plus (1) back and forth between positions (A) and (B) four times. Then continue to move the component in the same way.

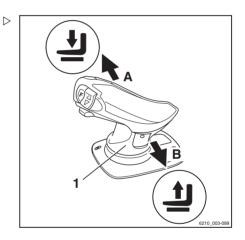




Double mini-lever:

 Move the 360° lever (2) back and forth between positions (A) and (B) four times. Then continue to move the component in the same way.

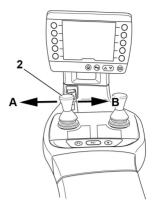

Triple mini-lever:

 Move the 360° lever (3) back and forth between positions (A) and (B) four times. Then continue to move the component in the same way.

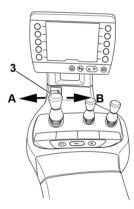


Quadruple mini-lever:

 Move the operating lever (4) back and forth between positions (A) and (B) four times. Then continue to move the component in the same way. \triangleright

 \triangleright


 \triangleright

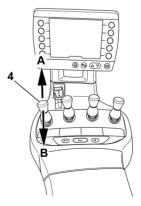



Fingertip:

 Move the operating lever (5) back and forth four times. Then continue to move the component in the same way. \triangleright

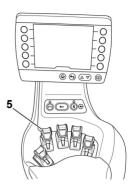

Setting down a load

A DANGER

Risk of accident due to changed moment of tilt!

The load centre of gravity and the moment of tilt move due to tilting the lift mast forwards with a raised load or due to the load slipping. The truck may tip forwards.

- Only tilt the lift mast forwards with a raised lifting accessory when it is directly above the stack.
- When the lift mast is tilted forwards, take particular care to ensure that the truck does not tip forwards and that the load does not slip.

A WARNING

Risk of accident from falling load!

If the fork or the load remains suspended during lowering, the load may fall.

 When removing from stock, move the truck far enough back so that the load and the fork can be lowered freely.



- Drive up to the stack with the load lowered in accordance with regulations.
- Set the lift mast to vertical.
- Lift the load to the stacking height.
- Drive the truck towards the rack carefully.



Lower the load until it rests securely on the prack.

A DANGER

Risk of accident!

- Beware of any people in the danger area.
- Ensure that the roadway behind you is clear.
- Move the truck back until the fork arms can be lowered without touching the stack.
- Lower the fork while maintaining ground clearance.
- Tilt the lift mast backwards and drive away.





Driving on ascending and descend- ▷ ing gradients

A DANGER

Risk of fatal injury!

Driving on ascending and descending gradients carries special dangers!

- Always follow the instructions below.
- On ascending and descending gradients, the load must be carried facing uphill.
- It is only permitted to drive on ascending and descending gradients that are marked as traffic routes and that can be used safely.
- Ensure that the ground to be traversed is clean and provides a good grip.
- Do not turn on ascending and descending gradients.
- Do not drive onto or along ascending and descending gradients at an angle.
- Do not park the truck on ascending or descending gradients.
- In case of emergency, secure the truck with wedges so that the truck does not roll away.
- Reduce the driving speed on descending gradients.

It is not permitted to drive on long ascending and descending gradients greater than 15% due to the specified minimum braking and stability values.

 Before driving on ascending and descending gradients greater than 15%, consult the authorised service centre.

The process of placing loads into stock and removing loads from stock while on an ascending or descending gradient is not permitted!

 Always place loads into stock and remove loads from stock on a horizontal plane.





Driving on lifts

The driver may only use this truck on lifts with a sufficient load capacity and for which the operating company has been granted authorisation (refer to the section entitled "Definition of responsible persons").

There is a risk of fatal injury from being crushed or run over by the truck.

- There must not be any persons already in the lift when the truck is driven into the lift.
- Persons are only permitted to enter the lift once the truck is secure, and must exit the lift before the truck is driven out.


Determining the total actual weight

- Park the truck safely and switch it off.
- Determine the unit weights by reading the truck nameplate and, if necessary, the attachment (variant) nameplate and/or by weighing the load to be lifted.
- Add together the determined individual weights to obtain the total actual weight of the truck:

Tare weight (1)

- + Max. permissible battery weight (2)
- + Ballast weight (variant) (3)
- + Net weight of attachment (variant)
- + Weight of the load to be lifted
- + 100 kg allowance for driver
- = Total actual weight
- Drive the truck into the lift with the forks facing forwards. Make sure not to touch the shaft walls.
- Park the truck securely in the lift and switch it off to prevent uncontrolled movements of the load or the truck.



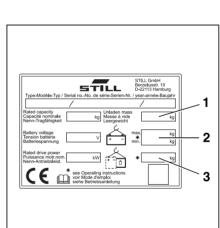



6219 003-040

⊳

⊳

Driving on loading bridges

A DANGER

Risk of accident from the truck falling!

Steering movements can cause the rear of the truck to veer off the loading bridge towards the edge. This may cause the truck to crash.

The lorry driver and the forklift truck driver must agree on the departure time of the lorry.


- Establish the departure time of the lorry.
- Determine the total actual weight of the truck.
- Before driving over a loading bridge, observe the operating instructions for the loading bridge.
- Make sure that the loading bridge is properly attached and secured and has a sufficient load capacity (e.g. lorry, bridge).
- Ensure that the lorry onto which you will be driving is secured to prevent it from shifting and that it can support the load of the truck.


Determining the total actual weight

- Park the truck securely.
- Determine the unit weights by reading the truck nameplate and, if necessary, the nameplate on the attachment (variant) and/or by weighing the load to be lifted.
- Add together the determined unit weights to obtain the total actual weight of the truck:

Net weight (1)

- + Max. permissible battery weight (2)
- + Ballast weight (variant) (3)
- + Net weight of attachment (variant)
- + Weight of the load to be lifted
- + 100 kg allowance for driver
- = Total actual weight
- Drive slowly and carefully on the loading bridge.

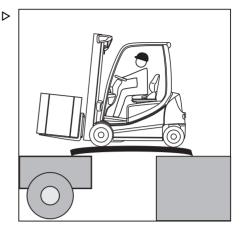

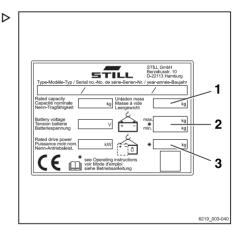




Tilt angle-dependent functions

Tilt angle-dependent functions

⊳

Mast tilt angle display

Knowing the actual tilt angle of the lift mast makes it easier to place loads into stock and remove loads from stock. If the truck is equipped with the "mast tilt angle display" assistance function, the lift mast tilt angle (1) is shown on the display.

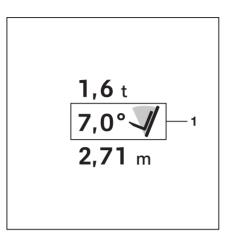

Tilt end stop damping

This assistance function ensures that the movement to the end positions is smooth. This protects the load against jerking movements.



Overload detection (variant)

A WARNING

Risk of accident as a result of exceeding the permissible load capacity!

This assistance function does not replace the driver's duty to observe the load capacity specified on the nameplate.

 Observe the load capacity specified on the nameplate.

The assistance function alerts the driver as soon as a load that is too heavy is picked up. The Overload message is shown on the display-operating unit.

The maximum load always refers to the sum of the load picked up plus any attachments present. The authorised service centre can configure the setting for the maximum load. However, the maximum load must not be higher than the nominal load.

The overload protection variant restricts the hydraulic functions as follows:

- If the rated capacity or the maximum load set by the authorised service centre is exceeded, the lifting speed is reduced.
- If the rated capacity or the set maximum load are exceeded by more than 10%, the "Lifting" function is disabled.

Please note the following special considerations:

- If the load pressure sensor fails, the maximum load (nominal load) is assumed. The function engages to the maximum extent.
- If the lifting stage switch fails, the truck control unit assumes the fork carriage is at the maximum lift height.
- In the case of overload, the "lifting" function is blocked from the factory. The authorised service centre can remove the "lifting" function block and restrict the function instead.



Dynamic Load Control 1

WARNING

Risk of accident as a result of overloading!

Dynamic Load Control 1 is not a safety function and does not release the driver from the duty to observe the information specified in the load capacity diagram!

WARNING

Risk of accident due to the slow response of the lifting system!

If the lifting movements are configured to use low dynamics, the lifting system responds after a delay when the operating device is released, even in an emergency. The fork carriage does not stop immediately; instead, it takes approx. one second.

This behaviour may also occur when specific settings are configured for the Dynamic Load Control 1.

- Work with particular attention and care.
- Observe the "Dynamics of the hydraulic movements" section in the chapter entitled "Lifting".

Dynamic Load Control 1 improves the handling of the load. This function protects the truck and the load from abrupt movements.

Dynamic Load Control 1 regulates the lifting and tilting dynamics and the driving dynamics according to the following criteria:

- Lift height
- Load weight

Load movements which could lead to critical conditions are slowed down if necessary.

If the following conditions are met, the Dynamic Load Control 1 intervenes:

- With telescopic lift masts: the fork carriage is at least 2.1 m off the ground
- With triplex and NiHo lift masts: the fork carriage is at the second lifting stage
- The load picked up exceeds 50% of the nominal load

The driving speed is reduced to 5 km/h at a lift height of 2.1 m and higher or in the second lifting stage.



When the fork carriage has been lowered below the lift heights mentioned above, the driver can deactivate the speed limitation again. Release the accelerator pedal for a short period to do this.

If a sensor belonging to Dynamic Load Control 1 fails, the level of intervention from the function is increased to a maximum.

Dynamic Load Control 2

A WARNING

Risk of accident as a result of overloading!

"Dynamic Load Control 2" is not a safety function and does not release the driver from the duty to observe the information specified in the load capacity diagram!

A WARNING

Risk of accident due to the slow response of the lifting system!

If the lifting movements are configured to use low dynamics, the lifting system responds after a delay when the operating device is released, even in an emergency. The fork carriage does not stop immediately; instead, it takes approx. one second.

This behaviour may also occur when specific settings are configured for the Dynamic Load Control 2.

- Work with particular attention and care.
- Observe the "Dynamics of the hydraulic movements" section in the chapter entitled "Lifting".

"Dynamic Load Control 2" improves the handling of the load. This function protects the truck and the load from abrupt movements.

Dynamic Load Control 2 regulates the lifting and tilting dynamics and the driving dynamics according to the following criteria:

- · Lift height
- Load weight
- Load centre of gravity



If the following conditions are met, the Dynamic Load Control 2 intervenes:

- With telescopic lift masts: the fork carriage is at least 2.1 m off the ground
- With triplex and NiHo lift masts: the fork carriage is at the second lifting stage
- The truck centre of gravity has shifted to an unfavourable position due to the position of the load

Dynamic Load Control 2 calculates the interaction between these three criteria and intervenes in the calculated result.

Load movements which could lead to critical conditions are slowed down if necessary.

The driving speed is reduced to 5 km/h at a lift height of 2.1 m and higher or in the second lifting stage.

When the fork carriage has been lowered below the lift heights mentioned above, the driver can deactivate the speed limitation again. Release the accelerator pedal for a short period to do this.

The bar display on the display of the displayoperating unit is part of the load information. It is part of the Dynamic Load Control 2.

The number and colour of the bars indicates to what extent the determined load weight and load centre of gravity affect the stability of the truck.

The bar display is divided into three sections and ten segments.

A Grey area


The dynamics of the lifting movements and tilting movement are not noticeably reduced.

B Yellow area

If a load that is close to the nominal load is picked up, the display moves into the yellow area.

The dynamics of the lifting movements and tilting movements are noticeably reduced.

 Handle the load with the appropriate level of care.

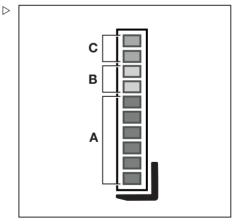





C Red area


When the combination of load weight and load centre of gravity exceeds the specified value, the display moves into the red area.

The dynamics of the lifting movements and tilting movements are significantly reduced.

 In this case, set down the load or tilt backwards.

If a sensor belonging to Dynamic Load Control 2 fails, the level of intervention from the function is increased to a maximum. A cross appears instead of the bar.

 If this display appears permanently, contact the authorised service centre.

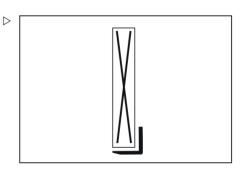

Load measurement (variant)

Knowing the weight of the load to be transported gives the driver greater security. If the truck is equipped with the "load measurement" comfort feature, the weight of the lifted load is measured and displayed in the display-operating unit (1).


- Observe the following safety information.

A DANGER

Risk of accident from a falling load!

The load may fall if the load centre of gravity has not been taken into account or the load has not been picked up securely.

 Pick up the load securely; see the chapter entitled "Picking up loads".

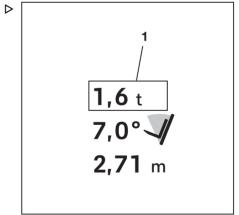



Load-dependent functions

A WARNING

Risk of accident as a result of exceeding the residual load capacity.

If the weight determined by a load measurement exceeds the permissible residual load capacity of the truck, the truck cannot be operated safely.

- Set down and reduce the load immediately.
- If necessary, use another truck with sufficient load-bearing capacity.

The load measurement must be calibrated in order to ensure accuracy at all times. The "access authorisation for the fleet manager" is required for the calibration. This access is required:

- · After changing the fork arms,
- After fitting or changing attachments
- If the displayed values are obviously incorrect
- See the section entitled "Calibrating the load measurement".

Calibrating the load measurement

If the truck is equipped with the "Load measurement" comfort feature, then this feature must be calibrated.


The load measurement is calibrated using a wizard on the display-operating unit.

The wizard requires authorisation at service level. Access to the settings menu is only available if the truck is at a standstill and the parking brake is applied. If the parking brake is released prematurely, the settings menu will close.


- Set the load down, if necessary.
- Drive the truck onto an even surface.
- Apply the parking brake.
- Press the button I.
- Press the "Settings" Softkey 💣.



- Activate the "Access authorisation for the fleet manager".
- Press the Service softkey -4.

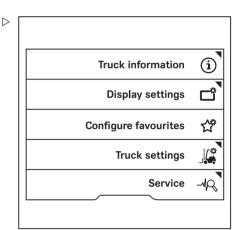

 Press the scroll keys △ ▽ until the Cal- ▷ ibration menu appears.

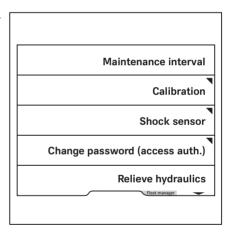



- Press the Load measurement softkey.

The wizard for calibrating the load measurement is started.

- Follow the instructions on the display.
- If the message Calibration
 failed ! appears, press the softkey \$\u2296\$.

After the calibration has been completed successfully, the message Successful calibration \checkmark appears.

- Switch the truck off and on again.

The calibration is now complete.

- Repeat the process.

If the message A6701 Fault: Monitoring of assistance system (A) *appears during the calibration, perform the calibration again.*

Precision load measurement (variant)

This function is available only if the truck is equipped with the "Load measurement" variant.

The "Precision load measurement" variant allows the weight of the load being picked up to be measured and displayed on the display-operating unit accurate to within 1% of the rated capacity of the truck.




In order to avoid a weighing error, tare the empty load pick up; see the section entitled "Tare function (variant)".

- Pick up the load safely.
- Press the button I.

The first menu level appears.


- Press the "Load" softkey I.

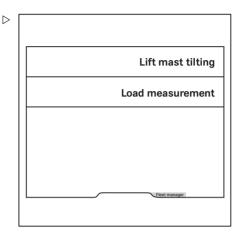





 Press the "Precision load measurement" softkey il (1).

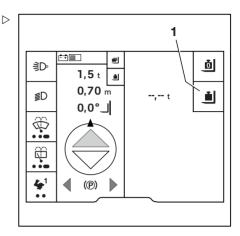


- Lower the fork carriage.

I NOTE

Slowly lowering the fork carriage increases the measurement accuracy in trucks with multilever operation.

The value is calculated. The Calc. ongoing \bigcirc message appears.

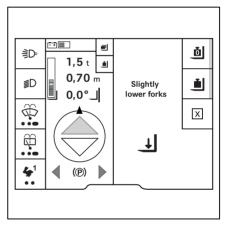





If the calculation was successful, the load (1) \triangleright minus the tare value is displayed.

If the tare function was not active, the load is shown including the fork carriage and load pick up.

- To delete the tare weight, press the softkey 희 (1).

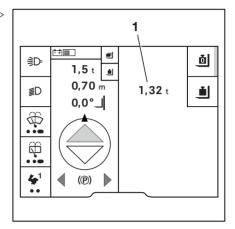

The Slightly lower forks prompt ${\color{black} \bot} >$ is displayed.

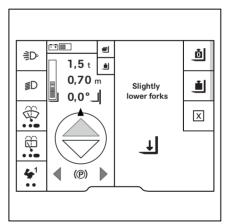




- Lower the fork carriage.

The tare weight is deleted. The activation bar next to the "Tare" symbol 희 (1) goes out. --.- t is shown on the display.

- Switch the truck off and on again.

Only then is the display --.-- t replaced by the load indicator.

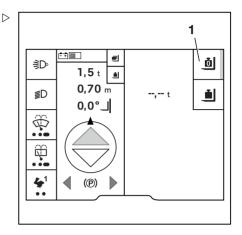

Tare function (variant)

The tare function is a variant of the precision load measurement. The tare function ensures that the load measurement records only the load itself, and not the fork or the attachment.


This function is a sub-function of the "precision load measurement" variant.

During the following process, the fork carriage must be lowered slightly. When doing so, the fork must not touch the ground, as otherwise the taring operation will be inaccurate.

- Set the lift mast to vertical.
- Raise the fork to a height of between 300 mm and 800 mm.
- Press the button I.

The first menu level appears.


- Press the "Load" softkey 🔳.

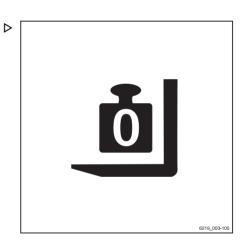



- Press the "Tare" softkey 道 (1).

The activation bar next to the "Tare" symbol 희 lights up.

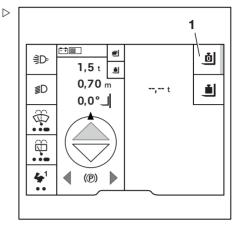

The Slightly lower forks prompt \sqcup \triangleright is displayed.

- Lower the fork carriage.


The value is calculated. The message ${\tt Zero-ing}$ ongoing \bigcirc is displayed.

If the taring operation was successful, the value 0.00 t is displayed. The activation bar next to the "Tare" symbol riangle goes out.

 If the taring operation was unsuccessful, follow the prompts on the display and repeat the process.

When a load is picked up, the load indicator appears.

The "Precision load measurement" can be performed.

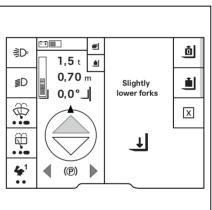



Total load (variant)

Use the "total load" variant to calculate the total weight of multiple loads. The "total load" is an additional function of the "load measurement". It records the individual loads and stores up to three total loads.

This allows, for example, three different containers to be laden and their loading weight to be determined. This function is helpful if, for instance, a container has a limited payload and you want to know when the permissible load weight has been reached.

This function is useful for comparing the loads indicated on delivery documents to the actual loads, for example.

The procedure for adding up the total load is as follows:

- 1 Pick up the load and call up the load menu,
- 2 Measure the load,
- 3 Add/subtract the load.

WARNING

Risk to stability.

If the weight determined by a load measurement exceeds the permissible residual load capacity of the truck, the truck cannot be operated safely.


- Do not lift the load higher than 800 mm.
- Set down and reduce the load immediately.
- If necessary, use another truck with sufficient load-bearing capacity.

Lift the load to a height of between 300 mm and 800 mm, since the load must subsequently be lowered slightly for the weighing process. If the weighing process establishes that the load is too heavy, the load must not be lifted higher than 800 mm. The fork arms must not touch the ground.

Picking up the load and calling up the load menu

- Pick up the load safely.
- Press the button I.



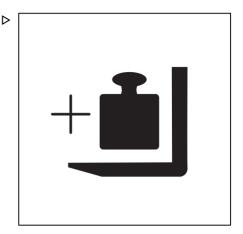

4

Load-dependent functions


The first menu level appears.

- Press the "Load" softkey I.
- Press the "Total load" softkey 🙂.

The "Total load" menu appears. A total of three load totals can be saved.

The total load is explained here using ±1.

- Press the softkey ±1.

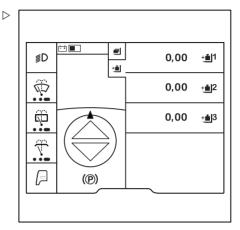

The "Total load" menu storage space 1 appears.


This menu provides the following functions:

- 🖄 Tare
- I Precision load measurement
- + Add a load
- Subtract a load
- 🛱 Delete load summation

Measuring the load

 Press the "Precision load measurement" Softkey

 Measure the load.

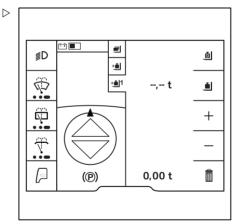



The Slightly lower forks prompt $\sqcup \ \triangleright$ is displayed.

- Lower the fork carriage.

The value is calculated. The Calc. ongoing \bigcirc message appears.

If the calculation was successful, the load is displayed.

Adding a load

- Pick up the load to be added.
- Press the Softkey +.
- Measure the load as described previously.
- To save, press the button I.

The display changes to the "Total load" menu.

Subtracting a load

- Pick up the load to be subtracted.
- To subtract the current load, press the Softkey – .
- Measure the load as described previously.

The current load is subtracted from the sum.

- To save, press the button I.

The display changes to the "Total load" menu.

If, for instance, this load was added to the wrong total load, it is also possible to perform a subtraction with the previously measured and added load.

Delete total load


 To delete the total load, press the softkey 11/10.

The Clear total load? message ? is displayed.

- − To delete, press the Softkey ✓.
- To cancel, press the Softkey X.

The display changes to the "Total load" menu.



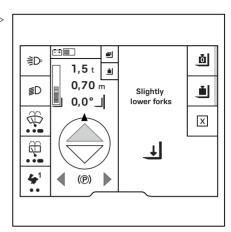

Δ

Depressurising the hydraulic system

Need to depressurise the hydraulic system

To enable additional hydraulic functions other than the basic functions to be used, the truck has plug connectors (1) on the lift mast.

Clamping and non-clamping attachments can be connected to these plug connectors.


- Non-clamping attachments are connected to the third hydraulic circuit via the plug connectors (1) on the fork carriage and are controlled via the "5th hydraulic function".
 If the truck is equipped with multi-lever operation, the attachments can also be controlled via the "6th hydraulic function".
- Clamping attachments are not controlled via the "5th/6th hydraulic function"

Attachments must be installed only by competent persons. The specifications provided by the manufacturer and supplier of the attachments must be observed during installation of the attachments.

Before changing attachments, the hydraulic system must be depressurised. This is done using a wizard on the display-operating unit.

If the truck has a "5th hydraulic function" or "6th hydraulic function", the hydraulic circuits of these functions must also be depressurised.

- Observe the following sections to depressurise the hydraulic system.
- "Wizard for depressurising the hydraulic system"
- "Depressurising the hydraulic system using ..." (see the respective operating device!)
- "Depressurising the hydraulic system using ... and the 5th function" (see the respective operating device!)
- · "Special feature for clamping attachments"
- · "Completing the depressurisation"

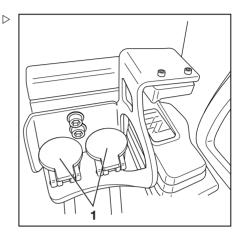

Plug connectors on the lift mast



Wizard for depressurising the hydraulic system

The hydraulics are depressurised using a wizard on the display-operating unit.


If this function is required for daily operation, contact your authorised service centre. The authorised service centre can enable the function for the fleet manager or driver.

The wizard requires authorisation at service level. Access to the settings menu is only available if the truck is at a standstill and the parking brake is applied. If the parking brake is released prematurely, the settings menu will close.

- Set the load down, if necessary.
- Apply the parking brake.

Starting the wizard

- Press the button I.
- Press the "Settings" Softkey 💣.
- Activate the "Access authorisation for the fleet manager".
- Press the Service softkey -4.

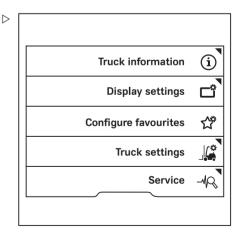



 Press the scroll keys △ ▽ until the Relieve hydraulics menu appears.

 \triangleright

- Push the Relieve hydraulics softkey.
- Check electr. parking brake Relieve hydraulics Version list Message list Fault list

The following message appears: Caution, ▷ the lift mast may move! !

- To confirm, push the softkey 🔽.

Press the softkey $\boxed{\times}$ to exit the wizard.

Caution, the lift mast may move!	
:	



56378011501 EN - 12/2019 - 04

The following message appears: Disengage ▷ all hydraulic axles then switch off the truck !

 Depressurise the hydraulics; see the corresponding section.

A WARNING

The movements of the load lift system present a risk of crushing.

During the depressurisation process, the fork carriage or the lift mast can move slightly.

 Do not reach into or stand below the components of the load lift system.

Do not move the steering wheel while depressurising the hydraulics. Otherwise the hydraulic system will build up pressure again. As soon as pressure has built up in the hydraulic system again, the function for relieving the hydraulics becomes inactive.

Depressurising the hydraulic system using multi-lever operation

 Start the "wizard for depressurising the hydraulic system".


Depressurising the hydraulic circuits for \triangleright the basic functions


The basic functions include the first four hydraulic functions. The basic functions are controlled via the first two hydraulic circuits.

The basic functions are:

- · Lifting the fork carriage
- · Lowering the fork carriage
- Tilting the lift mast forwards
- · Tilting the lift mast backwards
- Push the operating levers (1, 2) once in the direction of the arrow until the end position is reached.

The hydraulic circuits of the basic functions are now depressurised.

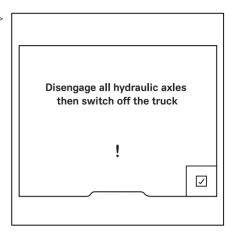

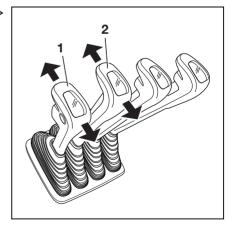



Depressurising the hydraulic circuits for \triangleright the additional functions

The additional features include features such as the sideshift and fork adjustment. Clamping attachments are also connected to these hydraulic circuits. These functions are controlled via hydraulic circuits three and four.

 Actuate the operating levers (3, 4) for controlling the additional functions once in the direction of the arrow until the end positions are reached.

The hydraulic circuits of the additional functions are now depressurised.



Depending on the equipment, the operating lever (2) can be assigned the sideshift and the fork adjustment functions.

- In this case, press the button (1) and hold it down.
- Push the operating lever (2) once in the direction of the arrow until the end position is reached.
- Release the button (1).

The hydraulic circuits of the sideshift and fork adjustment are now depressurised. The plug connectors on the lift mast are depressurised.


Completing the depressurisation

 To complete the depressurisation, observe the section entitled "Exiting the wizard".

Depressurising the hydraulic system using multi-lever operation and the 5th and 6th function

If the truck is equipped with multi-lever operation, the attachments can also be controlled via the "5th hydraulic function" and "6th hydraulic function".

 Start the "wizard for depressurising the hydraulic system".

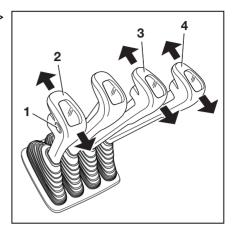



Depressurising the hydraulic circuits for \triangleright the "5th and 6th hydraulic function"

If the truck has a "5th and 6th hydraulic function", their hydraulic circuits must also be depressurised. The procedure is similar to the depressurisation of the hydraulic circuits for the basic functions and the additional functions. In addition, the hydraulic circuits are depressurised in the same way as the attachments are operated. The hydraulic circuits for the "5th and 6th hydraulic functions" are actuated via the corresponding buttons on the operating devices.

- Press the button (1) and hold it down.
- Push the operating lever (4) once in the direction of the arrow until the end position is reached.

The hydraulic circuit of the 5th hydraulic function is depressurised. The plug connectors on the lift mast are depressurised.


- Press the button (2) and hold it down.
- Push the operating lever (3) once in the direction of the arrow until the end position is reached.

The hydraulic circuit of the 6th hydraulic function is depressurised. The plug connectors on the lift mast are depressurised.

Completing the depressurisation

 To complete the depressurisation, observe the section entitled "Exiting the wizard".

Depressurising the hydraulic system using a double mini-lever

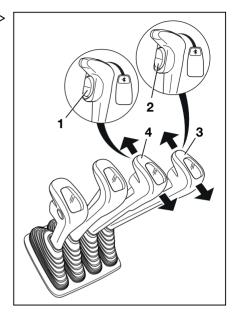



Depressurising the hydraulic circuits for \triangleright the basic functions

The basic functions include the first four hydraulic functions. The basic functions are controlled via the first two hydraulic circuits.

The basic functions are:

- · Lifting the fork carriage
- · Lowering the fork carriage
- Tilting the lift mast forwards
- · Tilting the lift mast backwards
- Push the cross lever (1) once in the direction of the arrow until the end position is reached.

The hydraulic circuits of the basic functions are now depressurised.

Depressurising the hydraulic circuits for \triangleright the additional functions

The additional features include features such as the sideshift and fork adjustment. Clamping attachments are also connected to these hydraulic circuits. These functions are controlled via hydraulic circuits three and four.

 Actuate the cross lever (1) for controlling the additional functions once in the direction of the arrow until the end position is reached.


The hydraulic circuits of the additional functions are now depressurised.


Completing the depressurisation

 To complete the depressurisation, observe the section entitled "Exiting the wizard".

Depressurising the hydraulic system using the double mini-lever and the 5th function

If the truck is equipped with the double minilever, the attachments can also be controlled via the "5th hydraulic function".

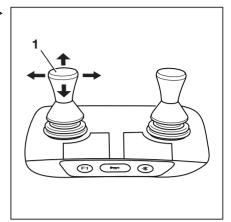

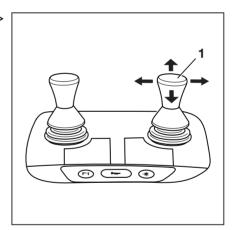



Depressurising the hydraulic circuits for \triangleright the "5th hydraulic function"

If the truck has a "5th hydraulic function", the hydraulic circuit of this function must also be depressurised. The procedure is similar to the depressurisation of the hydraulic circuits for the basic functions and the additional functions. In addition, the hydraulic circuit is depressurised in the same way as the attachments are operated. The hydraulic circuit for the "5th hydraulic function" is actuated using the function key for the "5th function" (2).

 Actuate the function key for the "5th function" (2).

The LED for the "5th function" +* lights up.

 Push the cross lever (1) once in the direction of the arrow until the end position is reached.

The hydraulic circuit of the 5th hydraulic function is depressurised. The plug connectors on the lift mast are depressurised.


 Actuate the function key for the "5th function" (2).

The LED for the "5th function" +* goes out.

Completing the depressurisation

 To complete the depressurisation, observe the section entitled "Exiting the wizard".

Depressurising the hydraulic system using a triple mini-lever

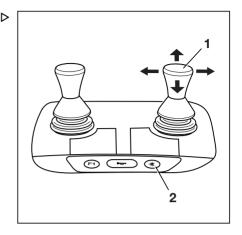



Depressurising the hydraulic circuits for \triangleright the basic functions

The basic functions include the first four hydraulic functions. The basic functions are controlled via the first two hydraulic circuits.

The basic functions are:

- · Lifting the fork carriage
- · Lowering the fork carriage
- Tilting the lift mast forwards
- · Tilting the lift mast backwards
- Push the cross lever (1) once in the direction of the arrow until the end position is reached.

The hydraulic circuits of the basic functions are now depressurised.

Depressurising the hydraulic circuits for \triangleright the additional functions

The additional features include features such as the sideshift and fork adjustment. Clamping attachments are also connected to these hydraulic circuits. These functions are controlled via hydraulic circuits three and four.

 Actuate the operating levers (1, 2) for controlling the additional functions once in the direction of the arrow until the end positions are reached.


The hydraulic circuits of the additional functions are now depressurised.


Completing the depressurisation

 To complete the depressurisation, observe the section entitled "Exiting the wizard".

Depressurising the hydraulic system using the triple mini-lever and the 5th function

If the truck is equipped with the triple mini-lever, the attachments can also be controlled via the "5th hydraulic function".

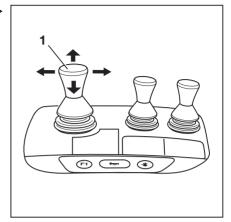

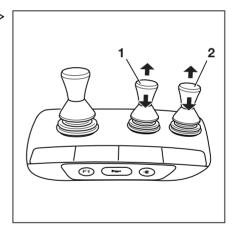



Depressurising the hydraulic circuits for \triangleright the "5th hydraulic function"

If the truck has a "5th hydraulic function", the hydraulic circuit of this function must also be depressurised. The procedure is similar to the depressurisation of the hydraulic circuits for the basic functions and the additional functions. In addition, the hydraulic circuit is depressurised in the same way as the attachments are operated. The hydraulic circuit for the "5th hydraulic function" is actuated using the function key for the "5th function" (2).

 Actuate the function key for the "5th function" (2).

The LED for the "5th function" +* lights up.

 Push the operating lever (1) once in the direction of the arrow until the end position is reached.

The hydraulic circuit of the 5th hydraulic function is depressurised. The plug connectors on the lift mast are depressurised.


 Actuate the function key for the "5th function" (2).

The LED for the "5th function" +* goes out.

Completing the depressurisation

 To complete the depressurisation, observe the section entitled "Exiting the wizard".

Depressurising the hydraulic system using a quadruple mini-lever

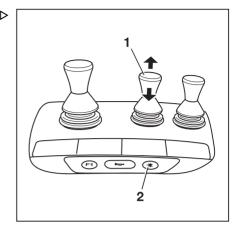

Depressurising the hydraulic circuits for \triangleright the basic functions

The basic functions include the first four hydraulic functions. The basic functions are controlled via the first two hydraulic circuits.

The basic functions are:

- · Lifting the fork carriage
- · Lowering the fork carriage
- Tilting the lift mast forwards
- · Tilting the lift mast backwards
- Push the operating levers (1, 2) once in the direction of the arrow until the end position is reached.

The hydraulic circuits of the basic functions are now depressurised.

Depressurising the hydraulic circuits for \triangleright the additional functions

The additional features include features such as the sideshift and fork adjustment. Clamping attachments are also connected to these hydraulic circuits. These functions are controlled via hydraulic circuits three and four.

 Actuate the operating levers (1, 2) for controlling the additional functions once in the direction of the arrow until the end positions are reached.


The hydraulic circuits of the additional functions are now depressurised.


Completing the depressurisation

 To complete the depressurisation, observe the section entitled "Exiting the wizard".

Depressurising the hydraulic system using the quadruple mini-lever and the 5th function

If the truck is equipped with the quadruple mini-lever, the attachments can also be controlled via the "5th hydraulic function".

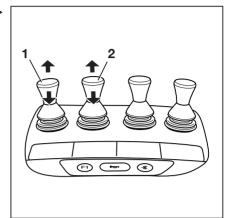

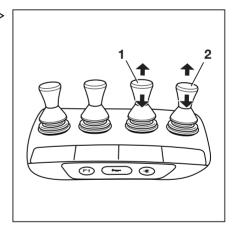



Depressurising the hydraulic circuits for \triangleright the "5th hydraulic function"

If the truck has a "5th hydraulic function", the hydraulic circuit of this function must also be depressurised. The procedure is similar to the depressurisation of the hydraulic circuits for the basic functions and the additional functions. In addition, the hydraulic circuit is depressurised in the same way as the attachments are operated. The hydraulic circuit for the "5th hydraulic function" is actuated using the function key for the "5th function" (2).

 Actuate the function key for the "5th function" (2).

The LED for the "5th function" +* lights up.

 Push the operating lever (1) once in the direction of the arrow until the end position is reached.

The hydraulic circuit of the 5th hydraulic function is depressurised. The plug connectors on the lift mast are depressurised.


 Actuate the function key for the "5th function" (2).

The LED for the "5th function" +* goes out.

Completing the depressurisation

 To complete the depressurisation, observe the section entitled "Exiting the wizard".

Depressurising the hydraulic system using the Fingertip

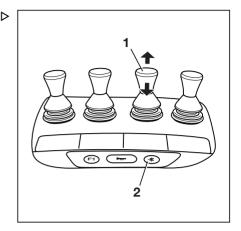



Depressurising the hydraulic circuits for \triangleright the basic functions

The basic functions include the first four hydraulic functions. The basic functions are controlled via the first two hydraulic circuits.

The basic functions are:

- · Lifting the fork carriage
- · Lowering the fork carriage
- Tilting the lift mast forwards
- · Tilting the lift mast backwards
- Push the operating levers (1, 2) once in the direction of the arrow until the end position is reached.

The hydraulic circuits of the basic functions are now depressurised.

Depressurising the hydraulic circuits for \triangleright the additional functions

The additional features include features such as the sideshift and fork adjustment. Clamping attachments are also connected to these hydraulic circuits. These functions are controlled via hydraulic circuits three and four.

 Actuate the operating levers (1, 2) for controlling the additional functions once in the direction of the arrow until the end positions are reached.

The hydraulic circuits of the additional functions are now depressurised.

Completing the depressurisation


 To complete the depressurisation, observe the section entitled "Exiting the wizard".


Depressurising the hydraulic system using the Fingertip and the 5th function

If the truck is equipped with the Fingertip, the attachments can also be controlled via the "5th hydraulic function".

 Start the "wizard for depressurising the hydraulic system".

56378011501 EN - 12/2019 - 04

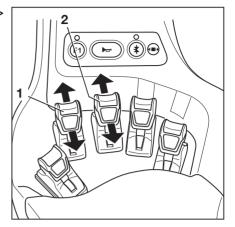

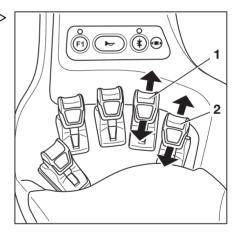



246

Depressurising the hydraulic circuits for \triangleright the "5th hydraulic function"

If the truck has a "5th hydraulic function", the hydraulic circuit of this function must also be depressurised. The procedure is similar to the depressurisation of the hydraulic circuits for the basic functions and the additional functions. In addition, the hydraulic circuit is depressurised in the same way as the attachments are operated. The hydraulic circuit for the "5th hydraulic function" is actuated using the function key for the "5th function" (2). The operating levers (1) or (4) can be assigned the 5th function. Observe the relevant pictogram for the 5th function.

 Actuate the function key for the "5th function" (2).

The LED for the "5th function" +* (3) lights up.

 Push the operating levers (1) or (4) once in the direction of the arrow until the end position is reached.

The hydraulic circuit of the 5th hydraulic function is depressurised. The plug connectors on the lift mast are depressurised.


 Actuate the function key for the "5th function" (2).

The LED for the "5th function" +* (3) goes out.

Completing the depressurisation

 To complete the depressurisation, observe the section entitled "Exiting the wizard".

Depressurising the hydraulic system using the Joystick 4Plus

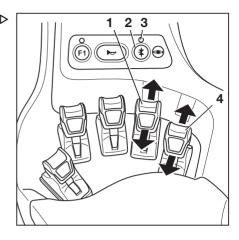



Operation

Depressurising the hydraulic system

Depressurising the hydraulic circuits for \triangleright the basic functions

The basic functions include the first four hydraulic functions. The basic functions are controlled via the first two hydraulic circuits.

The basic functions are:

- Lifting the fork carriage
- · Lowering the fork carriage
- · Tilting the lift mast forwards
- · Tilting the lift mast backwards
- Push the Joystick 4Plus (2) once in the direction of the arrow until the end position is reached.
- Push the horizontal rocker button (1) once in the direction of the arrow.

The hydraulic circuits of the basic functions are now depressurised.

Depressurising the hydraulic circuits for \triangleright the additional functions

The additional features include features such as the sideshift and fork adjustment. Clamping attachments are also connected to these hydraulic circuits. These functions are controlled via hydraulic circuits three and four.

Push the Joystick 4Plus (1) once in the direction of the arrow until the end position is reached


The hydraulic circuits of the additional functions are now depressurised.


Completing the depressurisation

- To complete the depressurisation, observe the section entitled "Exiting the wizard".

Depressurising the hydraulic system using the Joystick 4Plus and the 5th function

If the truck is equipped with the Joystick 4Plus, the attachments can also be controlled via the "5th hydraulic function".

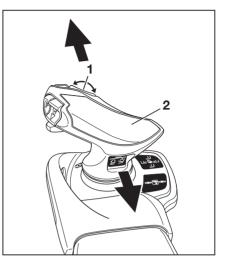

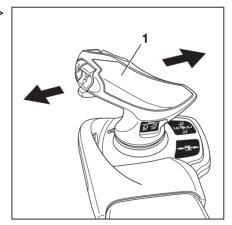



 Start the "wizard for depressurising the hydraulic system".

Depressurising the hydraulic circuits for \triangleright the "5th hydraulic function"

If the truck has a "5th hydraulic function", the hydraulic circuit of this function must also be depressurised. The procedure is similar to the depressurisation of the hydraulic circuits for the basic functions and the additional functions. In addition, the hydraulic circuit is depressurised in the same way as the attachments are operated. The hydraulic circuit for the "5th hydraulic function" is actuated using the shift key "F" (1). The Joystick 4Plus (3) or the horizontal rocker button (2) can be assigned the 5th function. Observe the relevant pictogram for the 5th function.

- Press and hold shift key "F" (1).
- Push the Joystick 4Plus (3) once in the direction of the arrow until the end position is reached.

Push the horizontal rocker button (2) once in the direction of the arrow.

The hydraulic circuit of the 5th hydraulic function is depressurised. The plug connectors on the lift mast are depressurised.

- Release shift key "F" (1).


Completing the depressurisation

 To complete the depressurisation, observe the section entitled "Exiting the wizard".

Special feature for clamping attachments

If a clamping attachment is fitted, please observe the following:

- Depressurising the hydraulic circuit for clamping attachments is performed in the same way as opening and closing the clamp.
- Loosen the clamp locking mechanism; see the relevant sections related to the clamp locking mechanism.

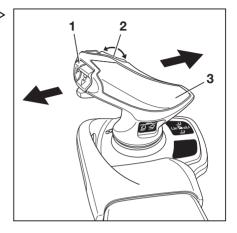



- Push the operating device once in the "Open" direction.
- Push the operating device once in the "Close" direction.
- Observe the section entitled "Clamp locking mechanism (variant)" in the chapter entitled "Attachments".

Exiting the wizard

 After the hydraulics have been depressurised, press the softkey ✓ to confirm.

The wizard for depressurising the hydraulics is switched off. The truck is ready for operation.



Fitting attachments

If the truck is equipped with an integrated attachment (variant) at the factory, the specifications in the STILL operating instructions for integrated attachments must be observed.

If attachments are fitted at the place of use, the specifications in the operating instructions from the attachment manufacturer must be observed.

If an attachment is not delivered together with the truck, the specifications from the manufacturer and the operating instructions from the attachment manufacturer must be observed.

Before initial commissioning, the function of the attachment and the visibility from the driver's position with and without a load must be checked by a competent person. If the visibility is deemed insufficient, visual aids must be used, such as mirrors, a camera, a monitor system etc.

- Observe the following warning notices.

A DANGER

Risk of fatal injury from falling load!

If attachments that hold the load by clamping it or exerting pressure on it do not have a second method of operating the function (lock), the load can work loose and fall off.

- Ensure that the second method of operating the function (lock) is available.
- When retrofitting such attachments, a second method of operating the function (lock) must also be retrofitted.

A DANGER

Risk of fatal injury from falling load!

When installing a clamp with an integrated sideshift function, ensure that the clamp does not open when the sideshift is actuated.

- Notify your authorised service centre before installation.
- Never grab or climb on moving parts of the truck.



WARNING

Risk of accident due to incorrect labelling!

The use of attachments can cause accidents if the labelling is incorrect or missing.

If the truck is not fitted with an attachment-specific residual load capacity rating plate, and the operating devices are not marked with the relevant pictograms, the truck must not be used.

- Use only CE-certified attachments that include operating instructions and the required labels.
- Arrange for an attachment-specific residual load capacity rating plate to be fitted to the truck.
- Arrange for the operating devices to be re-labelled.
- Arrange for the authorised service centre to adjust the hydraulic system to the requirements of the attachment (e.g. adjust the pump motor speed).

If the required labelling is not provided with the attachment, contact the authorised service centre promptly.

Alternating operation using an electrical switch valve

If non-integrated attachments for alternating operation are used in conjunction with an electrical switch valve for the 5th and 6th hydraulic function, the electrical switch valve must operate at 12 V.

 Contact the authorised service centre if necessary.



Plug connectors on the lift mast \triangleright

 Before fitting the attachment, depressurise the hydraulic system; see the chapter entitled "Depressurising the hydraulic system".

A CAUTION

Risk of damage to components!

Open connections on the plug connectors (1) can become dirty. Dirt can enter the hydraulic system. The plug connectors can become stiff.

 Once the attachment has been disassembled, seal the plug connectors using the protective caps.

Mounting attachments

Only competent persons are permitted to mount and connect the energy supply to the attachment.

 Observe the information provided by the manufacturer and supplier or sub-supplier of the attachment when doing so.

Please observe the definition of the following responsible person: "competent person".

- Switch off the truck.
- Install the attachment.
- Switch on the truck.
- Check and ensure all functions of the installed attachment.

Load capacity with attachment

The permissible load capacity of the attachment and the permissible load (load capacity and load moment) of the truck must not be exceeded by the combination of the attachment and the payload. Comply with the specifications of the manufacturer and supplier of the attachment.

 Observe the residual load capacity rating plate; see the chapter entitled "Picking up a load using attachments".



56378011501 EN - 12/2019 - 04

Attachments

General instructions for controlling attachments

Attachments can be controlled via the first four hydraulic functions but also as a variant via the 5th or 6th function. The 5th or 6th function is activated via a button on the operating device and by moving the operating device or additional push buttons.

The way in which attachments (variant) are controlled depends on the operating devices included in the truck's equipment.

Possible equipment variants include:

- · Multi-lever
- Multi-lever with a 5th or 6th function (variant)
- · Double mini-lever
- Double mini-lever with a 5th function (variant)
- · Triple mini-lever
- Triple mini-lever with a 5th function (variant)
- · Quadruple mini-lever
- Quadruple mini-lever with a 5th function (variant)
- · Fingertip
- · Fingertip with a 5th function (variant)
- · Joystick 4Plus
- · Joystick 4Plus with a 5th function (variant)
- To control attachments, see the sections relating to the respective operating devices in this chapter.



WARNING

Use of attachments can give rise to additional hazards such as a change in the centre of gravity, additional danger areas etc.

Attachments must only be deployed for their intended use as described in the relevant operating instructions. Drivers must be taught how to operate the attachments.

Loads may only be picked up and transported with attachments if the loads are securely grasped and attached. If necessary, the loads must also be secured against slipping, rolling away, falling over, swinging and tipping over. Note that any change to the location of the load centre of gravity will affect the stability of the truck.

Observe the capacity rating plate for the attachments being used.

Further variants and functions are available in addition to the functions described below. The directions of movement can be seen in the pictograms on the operating devices. All the attachments described fall into the category of equipment variants. An exact description of the respective movements or actions of the attachment fitted can be found in the relevant operating instructions.



Controlling attachments using multi- ⊳ lever operation

In this version, the attachments (variant) are controlled using the operating levers (1, 3). The pictograms for the hydraulic functions (2, 4) are affixed to the operating levers.

- Observe the pictograms (2) or (4).

The pictograms are arranged according to the directions of movement of the operating lever (1) or (3).

The following applies:

- Move the operating lever forwards.


The attachment moves in the direction of movement shown in the upper part of the pictogram.

- Move the operating lever backwards.

The attachment moves in the direction of movement shown in the lower part of the pictogram.

 Note the following attachment functions and pictograms.

Picto- gram	Attachment function
L	Move the side shift frame or fork for- wards
⇒	Move the side shift frame or fork backwards
<u>L</u> +	Move the sideshift to the left
≯	Move sideshift to the right
⊢	Adjust fork arms: open
<u>≁ال</u> د	Adjust fork arms: close
<u>+</u>	Push off the load
<u>+</u>	Pull in the load
5	Rotate to the left
Ċ	Rotate to the right
۲P	Tip shovel over
₹.	Tip shovel back
⊐ ₽	Swivel the fork to the left
₽	Swivel the fork to the right

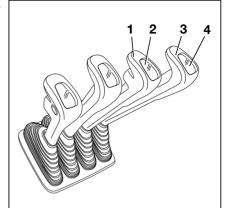



i NOTE

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.

Clamp locking mechanism

i NOTE

For technical reasons, no clamp locking mechanism is available for the multi-lever operating device.



Controlling attachments using multi- ▷ lever operation and the 5th and 6th function

The function keys for the "5th and 6th function" (1, 2) and the operating levers (3, 4) are used to control the "5th function" or the "6th function".

The central and bottom parts of the pictograms on each operating lever show the function that is activated by that lever. The top part of the pictogram shows that the attachment is equipped with the "5th function" or the "6th function".

The following applies:

- Move the operating lever (3, 4) forwards.

The attachment moves in the direction of movement shown in the central part of the pictogram.

- Move the operating lever (3, 4) backwards.

The attachment moves in the direction of movement shown in the lower part of the pictogram.

- Press and hold the switch (1).

The additional function of the attachment is activated and can be controlled as the "5th function" with the operating lever (4).


The movement/action of the "5th function" can be found in the operating instructions of the attachment that is fitted.

- Press and hold the switch (2).

The additional function of the attachment is activated and can be controlled as the "5th function" or "6th function" with the operating lever (3).



The movement/action of the "5th function" or "6th function" can be found in the operating instructions of the attachment that is fitted.

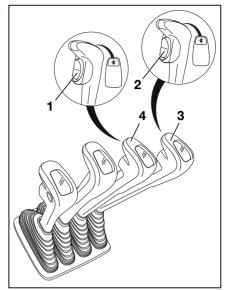



 Note the following attachment functions and pictograms.

Picto- gram	Attachment function
Ł	Move the side shift frame or fork for- wards
⇒	Move the side shift frame or fork backwards
Цŧ	Move the sideshift to the left
Ł	Move sideshift to the right
⊨	Adjust fork arms: open
<u>≁II+</u>	Adjust fork arms: close
<u>+</u>]	Push off the load
<u>+</u>]	Pull in the load
5 C	Rotate to the left
C	Rotate to the right
۲	Tip shovel over
7 .	Tip shovel back
⊐ £	Swivel the fork to the left
₽	Swivel the fork to the right

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary. If the attachment is known, the relevant symbol is stuck on the panelling in front of the corresponding operating lever.



Controlling attachments using a double mini-lever

In this version, the attachments (variant) are controlled using the "attachments" cross lever (1). The adhesive label bearing the pictograms for the hydraulic functions (2) is affixed at the designated point.

- If the adhesive label becomes illegible or is missing, please contact your authorised service centre.
- Observe the pictograms for the attachment functions on the adhesive label (2).

The pictograms on the "attachments" cross lever (1) show the respective functions that are activated by this lever.


The pictograms are arranged according to the direction of movement of the "attachments" cross lever (1).

The following applies:

 Move the "attachments" cross lever(1) in the direction of arrow (A), (B), (C) or (D).

The attachment moves accordingly in the directions (A), (B), (C) or (D) as shown in the pictogram.

Picto- gram	Attachment function
IJ	Move the side shift frame or fork for- wards
⇒	Move the side shift frame or fork backwards
<u>∐+</u>	Move the sideshift to the left
≯⊔	Move sideshift to the right
⊢	Adjust fork arms: open
≯∐ ≮	Adjust fork arms: close
<u> </u>	Release load retainer
ð	Clamp load retainer
€ →	Open clamps
≯ ∭ ¢	Close clamps
5	Rotate to the left
Ċ	Rotate to the right
۲	Tip shovel over
N .	Tip shovel back

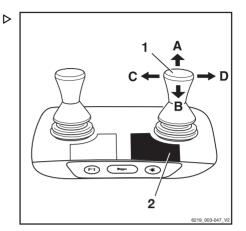



The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.

Clamp locking mechanism

 To release the clamp locking mechanism, push the operating lever (2) forwards.


The clamp locking mechanism is released. The LED for the "clamp release" (1) lights up and remains lit while the clamp locking mechanism is released.

The hydraulic function for opening the clamp is available for one second after the clamp locking mechanism is released. After one second, the clamp locking mechanism is automatically reactivated.

To open the clamp, push the operating lever (2) forwards again.

It is not necessary to release the clamp locking mechanism in order to close the clamp.

To close the clamp, pull the operating lever (2) backwards.

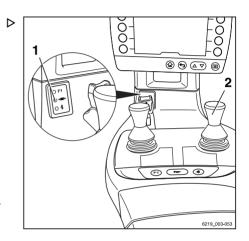



Controlling attachments using the double mini-lever and the 5th func-tion

For technical reasons, clamping attachments **must not** be controlled via the "5th function".

The function key for the "5th function" (3) and the cross lever (1) are used to control the "5th function".

The adhesive label bearing the pictograms for the hydraulic functions (2) is affixed at the designated point.

- If the adhesive label becomes illegible or is missing, please contact your authorised service centre.
- Observe the pictograms for the attachment functions on the adhesive label (2).

The pictograms on the "attachments" cross lever show the respective functions that are activated by this lever.


The following applies:

 Actuate the function key for the "5th function" (3).

The LED for the "5th function" +* lights up.

 Move the "attachments" cross lever (1) in the direction of the arrow (A), (B), (C) or (D).

The attachment moves accordingly in the directions (A), (B), (C) or (D) as shown in the pictogram.

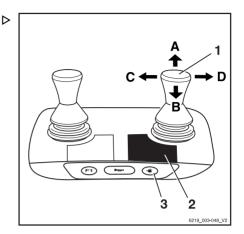




Example using the pictograms for configuration (1):

If the "attachments" cross lever (1) is moved in the direction of the arrow (A), the fork is extended.

If the function key for the "5th function" (3) is actuated and the "attachments" cross lever (1) is moved in the direction of the arrow (A), the fork arms open.

Picto- gram	Attachment function
+*	Auxiliary hydraulics "5th function"
<u>н</u>	Move the side shift frame or fork for- wards
⇒	Move the side shift frame or fork backwards
L+	Move the sideshift to the left
Ъ	Move sideshift to the right
⊢	Adjust fork arms: open
<u>≁II+</u>	Adjust fork arms: close
5	Rotate to the left
Ç	Rotate to the right

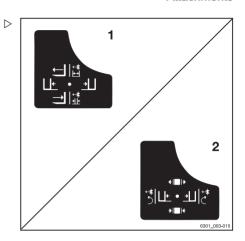

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.



Controlling attachments using a tri- ⊳ ple mini-lever

In this version, the attachments (variant) are controlled using the operating levers (1, 2). The adhesive label bearing the pictograms for the hydraulic functions (3) for the operating lever (2) and the adhesive label (4) for the operating lever (1) are affixed at the designated points.

- If the adhesive labels become illegible or are missing, please contact your authorised service centre.
- Observe the pictograms for the attachment functions on the adhesive labels (3, 4).

The pictograms on the operating levers show the respective functions that are activated by these levers.

The following applies:


- Move the operating lever (1) in the direction of the arrow (A) or (B).

The attachment moves accordingly in the directions (A) or (B) as shown in the pictogram.

 Move the operating lever (2) in the direction of the arrow (C) or (D).

The attachment moves accordingly in the directions (C) or (D) as shown in the pictogram.

Picto- gram	Attachment function
L	Move the side shift frame or fork for- wards
⇒	Move the side shift frame or fork backwards
∐+_	Move the sideshift to the left
≯	Move sideshift to the right
⊢	Adjust fork arms: open
<u>≁ال</u> د	Adjust fork arms: close
<u> </u>	Release load retainer
i	Clamp load retainer
+ ■ →	Open clamps
*I II I+	Close clamps
5	Rotate to the left
Ċ	Rotate to the right

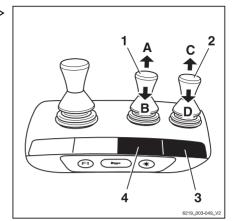



Picto- gram	Attachment function
۲.	Tip shovel over
₹.	Tip shovel back

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.

Clamp locking mechanism

- To release the clamp locking mechanism, push the operating lever (2) forwards.


The clamp locking mechanism is released. The LED for the "clamp release" (1) lights up and remains lit while the clamp locking mechanism is released.

The hydraulic function for opening the clamp is available for one second after the clamp locking mechanism is released. After one second, the clamp locking mechanism is automatically reactivated.

To open the clamp, push the operating lever (2) forwards again.

It is not necessary to release the clamp locking mechanism in order to close the clamp.

To close the clamp, pull the operating lever (2) backwards.

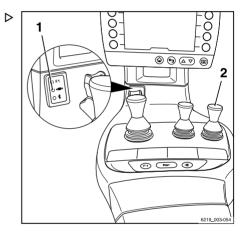



Controlling attachments using the triple mini-lever and the 5th function



For technical reasons, clamping attachments **must not** be controlled via the "5th function".

The function key for the "5th function" (2) and the operating lever (1) are used to control the "5th function".

The adhesive label bearing the pictograms for the hydraulic functions (3) is affixed at the designated point.

- If the adhesive label becomes illegible or is missing, please contact your authorised service centre.
- Observe the pictograms for the attachment functions on the adhesive label (3).

The pictograms on the operating lever show the respective functions that are activated by this lever.


The following applies:

 Actuate the function key for the "5th function" (2).

The LED for the "5th function" +* lights up.

Move the operating lever (1) in the direction (E) or (F).

The attachment moves accordingly in the directions (E) or (F) as shown in the pictogram.

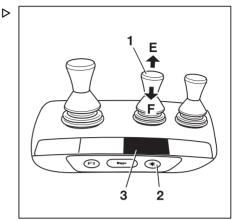




Example using the pictograms for configuration (1):

If the operating lever (1) is moved in the direction of the arrow (E), the sideshift moves to the left.

If the function key for the "5th function" (2) is actuated and the operating lever (1) is moved in the direction of the arrow (E), the fork arms open.

Picto- gram	Attachment function
+*	Auxiliary hydraulics "5th function"
L+	Move the sideshift to the left
≝⊔	Move sideshift to the right
⊨	Adjust fork arms: open
<u>≁ال</u> د	Adjust fork arms: close
5	Rotate to the left
C	Rotate to the right

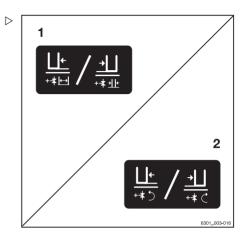

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.



Controlling attachments using a quadruple mini-lever

In this version, the attachments (variant) are controlled using the operating levers (1, 2). The adhesive label bearing the pictograms for the hydraulic functions (3) for the operating lever (2) and the adhesive label (4) for the operating lever (1) are affixed at the designated points.

- If the adhesive labels become illegible or are missing, please contact your authorised service centre.
- Observe the pictograms for the attachment functions on the adhesive labels (3, 4).

The pictograms on the operating levers show the respective functions that are activated by these levers.

The following applies:


- Move the operating lever (1) in the direction of the arrow (A) or (B).

The attachment moves accordingly in the directions (A) or (B) as shown in the pictogram.

 Move the operating lever (2) in the direction of the arrow (C) or (D).

The attachment moves accordingly in the directions (C) or (D) as shown in the pictogram.

Picto- gram	Attachment function
Ч	Move the side shift frame or fork for- wards
⇒	Move the side shift frame or fork backwards
∐+_	Move the sideshift to the left
≯	Move sideshift to the right
⊢	Adjust fork arms: open
∗Щد	Adjust fork arms: close
1	Release load retainer
ð	Clamp load retainer
+I II I>	Open clamps
+ +	Close clamps
5	Rotate to the left
Ċ	Rotate to the right

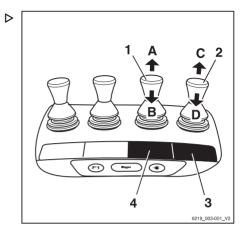



Picto- gram	Attachment function
۲.	Tip shovel over
₹.	Tip shovel back

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.

Clamp locking mechanism

- To release the clamp locking mechanism, push the operating lever (2) forwards.


The clamp locking mechanism is released. The LED for the "clamp release" (1) lights up and remains lit while the clamp locking mechanism is released.

The hydraulic function for opening the clamp is available for one second after the clamp locking mechanism is released. After one second, the clamp locking mechanism is automatically reactivated.

To open the clamp, push the operating lever (2) forwards again.

It is not necessary to release the clamp locking mechanism in order to close the clamp.

To close the clamp, pull the operating lever (2) backwards.

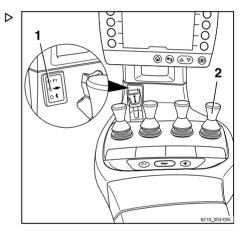



Controlling attachments using the quadruple mini-lever and the 5th function

For technical reasons, clamping attachments **must not** be controlled via the "5th function".

The function key for the "5th function" (2) and the operating lever (1) are used to control the "5th function".

The adhesive label bearing the pictograms for the hydraulic functions (3) is affixed at the designated point.

- If the adhesive label becomes illegible or is missing, please contact your authorised service centre.
- Observe the pictograms for the attachment functions on the adhesive label (3).

This essentially involves the following:

 Actuate the function key for the "5th function" (2).

The LED for the "5th function" +* lights up.

Move the operating lever (1) in the direction (E) or (F).


The attachment moves accordingly in the directions (E) or (F) as shown in the pictogram.


Example using the pictograms for configuration (1):

If the operating lever (1) is moved in the direction of the arrow (E), the sideshift moves to the left.

If the function key for the "5th function" (2) is actuated and the operating lever (1) is moved in the direction of the arrow (E), the fork arms open.

Picto- gram	Attachment function
+*	Auxiliary hydraulics "5th function"
∐+_	Move the sideshift to the left
→⊔	Move sideshift to the right
⊣	Adjust fork arms: open

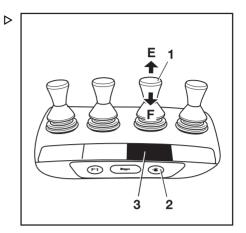

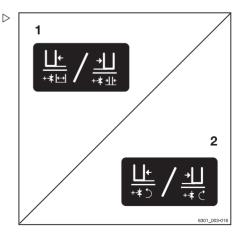



Picto- gram	Attachment function
<u>∗II+</u>	Adjust fork arms: close
5	Rotate to the left
C	Rotate to the right

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.

Controlling attachments using the Fingertip

In this version, the attachments (variant) are controlled using the operating levers (1) and (2). The adhesive label bearing the pictograms for the hydraulic functions (3) for the operating lever (2) and the adhesive label (4) for the operating lever (1) are affixed at the designated points.

- If the adhesive labels become illegible or are missing, please contact your authorised service centre.
- Observe the pictograms for the attachment functions on the adhesive labels (3, 4).

The pictograms on the operating levers show the respective functions that are activated by these levers.


The following applies:

 Move the operating lever (1) in the direction of the arrow (A) or (B).

The attachment moves accordingly in the directions (A) or (B) as shown in the pictogram.

 Move the operating lever (2) in the direction of the arrow (C) or (D).

The attachment moves accordingly in the directions (C) or (D) as shown in the pictogram.

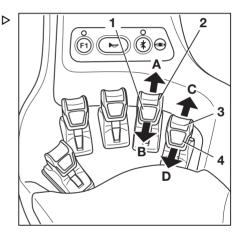



4

Attachments

Picto- gram	Attachment function
£	Move the side shift frame or fork for- wards
⇒	Move the side shift frame or fork backwards
<u>l</u> +	Move the sideshift to the left
→⊔	Move sideshift to the right
⊨	Adjust fork arms: open
<u>≯II</u> €	Adjust fork arms: close
	Release load retainer
ŧ.	Clamp load retainer
€ }	Open clamps
≯ ∭ €	Close clamps
5	Rotate to the left
Ċ	Rotate to the right
۲P	Tip shovel over
N .	Tip shovel back

i NOTE

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.

Clamp locking mechanism


- To release the clamp locking mechanism, push the operating lever (2) forwards.

The clamp locking mechanism is released. The LED for the "clamp release" (1) lights up and remains lit while the clamp locking mechanism is released.

i NOTE

The hydraulic function for opening the clamp is available for one second after the clamp locking mechanism is released. After one second, the clamp locking mechanism is automatically reactivated.

To open the clamp, push the operating lever (2) forwards again.

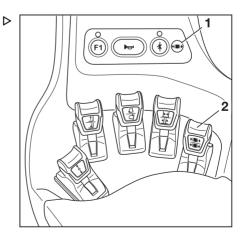



It is not necessary to release the clamp locking mechanism in order to close the clamp.

To close the clamp, pull the operating lever (2) backwards.

Controlling attachments using the Fingertip and the 5th function

For technical reasons, clamping attachments **must not** be controlled via the 5th function.

The function key for the "5th function" (2) and the operating levers (1, 6) are used to control the "5th function".

The pictograms (1, 5) behind the operating levers show the functions that are activated by the respective levers.

 If the adhesive labels become illegible or are missing, please contact your authorised service centre.

The following applies:

 Actuate the function key for the "5th function" (2).

The LED for the "5th function" ** (3) lights up.


Move the operating lever (4) or (6) in the direction of the arrow (E) or (F).

The attachment moves accordingly in the directions (E) or (F) as shown in the pictogram.

The place where the adhesive label bearing the pictograms (1) or (5) is affixed shows which operating lever is intended to operate the "5th function". The pictograms show the functions that are activated by switching with the function key (2).

Picto- gram	Attachment function
+*	Auxiliary hydraulics "5th function"
Цŧ	Move the sideshift to the left
₹Ц	Move sideshift to the right



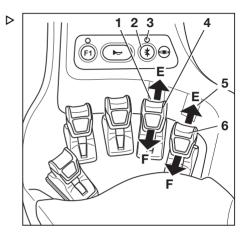

Picto- gram	Attachment function
⊨	Adjust fork arms: open
<u>+ +</u>	Adjust fork arms: close
5	Rotate to the left
Ċ	Rotate to the right

i NOTE

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.



Controlling attachments using the Joystick 4Plus

In this version, the attachments (variant) are controlled via the Joystick 4Plus (1) and the slider (4). The adhesive label bearing the pictograms for the hydraulic functions (2) for the Joystick 4Plus (1) and the adhesive label (3) for the slider (4) are affixed at the designated points.

- If the adhesive labels become illegible or are not present, please contact your authorised service centre.
- Observe the pictograms for the attachment functions on the adhesive labels (2, 3).

The pictograms on the adhesive labels regarding operation of the Joystick 4Plus show the respective functions that are activated by the individual operating devices of the Joystick 4Plus.

The following applies:


 Move the Joystick 4Plus (1) in the direction of the arrow (A) or (B).


The attachment moves accordingly in the directions (A) or (B) as shown in the pictogram.

Move the slider (4) in the direction of the arrow (C) or (D).

The attachment moves accordingly in the directions (C) or (D) as shown in the pictogram.

Picto- gram	Attachment function	
L	Move the side shift frame or fork for- wards	
⇒	Move the side shift frame or fork backwards	
Цŧ	Move the sideshift to the left	
Ł	Move sideshift to the right	
⊢	Adjust fork arms: open	
<u>+ +</u>	Adjust fork arms: close	
1	Release load retainer	
ð	Clamp load retainer	
<i∎i></i∎i>	Open clamps	
*I II I¢	Close clamps	

 

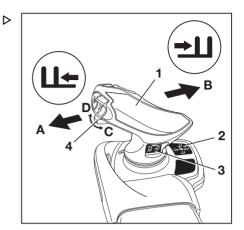

Attachments

Picto- gram	Attachment function	
5	Rotate to the left	
C	Rotate to the right	
۲	Tip shovel over	
₹.	Tip shovel back	

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.

Clamp locking mechanism

- To release the clamp locking mechanism, push the slider (1) to the left.


The clamp locking mechanism is released. The LED for the "clamp release" (2) lights up and remains lit while the clamp locking mechanism is released.

 To open the clamp, push the slider (1) to the left again.

The hydraulic function for opening the clamp is available for one second after the clamp locking mechanism is released. After one second, the clamp locking mechanism is automatically reactivated.

It is not necessary to release the clamp locking mechanism in order to close the clamp.

 To close the clamp, push the slider (1) to the right again.

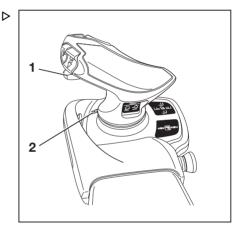



Attachments

Controlling attachments using the Joystick 4Plus and the 5th function



For technical reasons, clamping attachments **must not** be controlled via the 5th function.

Use shift key "F" (4) and the Joystick 4Plus (2) and the horizontal rocker button (1) to control the "5th function".

The adhesive label bearing the pictograms for the hydraulic functions (3) for the Joystick 4Plus (2) and for the horizontal rocker button (1) is affixed at the designated point.

 If the adhesive label becomes illegible or is missing, please contact your authorised service centre.


The pictograms on the adhesive label regarding operation of the Joystick 4Plus show the respective functions that are activated by the individual operating devices of the Joystick 4Plus.


Note the following attachment functions and ▷ pictograms.

	Operating device	Function of the at- tachment
1	Shift key "F" and Joystick 4Plus	Adjust fork arms: close/open
2	Shift key "F" and horizontal rocker button	Adjust fork: back- wards/forwards
3	Shift key "F" and horizontal rocker button	Swivel lift mast or fork: left/right
4	Shift key "F" and horizontal rocker button	Additional fork car- riage: lift/lower

The following applies:

- Press and hold shift key "F" (4).
- Move the Joystick 4Plus (2) in the direction (E) or (F).

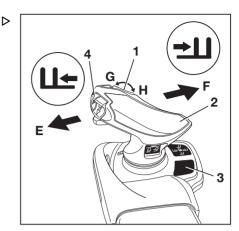

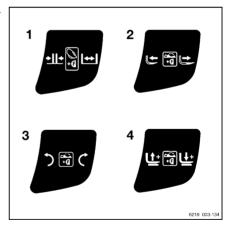



Attachments

The attachment moves accordingly in the directions (E) or (F) as shown in the pictogram.

Push the horizontal rocker button (1) in the direction (G) or (H).

The attachment moves accordingly in the directions (G) or (H) as shown in the pictogram.

- Release shift key "F" (4).

The pictograms are affixed according to the attachment fitted at the factory. If an attachment with different functions is fitted, the authorised service centre must check that the pictograms bear the correct representation and must change them if necessary.

Clamp locking mechanism (variant)

This truck can be fitted with a clamp locking mechanism for clamping attachments. The clamp locking mechanism prevents the clamp from opening unintentionally if the operating function is inadvertently triggered.

A DANGER

If the correct function of the clamp locking mechanism is not guaranteed, there is a risk to life from a falling load!

If other attachments in addition to the clamp are used on this truck, the clamp locking mechanism must be reassigned to the corresponding operating device every time the clamp is reassembled.

- Make sure that the authorised service centre reassigns the function of the clamp locking mechanism to the corresponding operating device.
- Make sure that the additional clamp locking mechanism function is available.
- Observe the section entitled "Fitting attachments".

For technical reasons, clamping attachments **must not** be controlled via the "5th function".

The sections entitled "Controlling attachments using ..." describe how the clamp locking mechanism is operated.



See the section concerning the relevant operating device.

Picking up a load using attachments ▷

WARNING

Risk of accident!

Attachments must only be deployed for their intended use as described in the relevant operating instructions.

Drivers must be taught how to operate the attachments.


WARNING

Risk of accident!

Loads may only be picked up and transported with attachments if the loads are securely grasped and attached. Where necessary, loads must also be secured against slipping, rolling, falling over, swinging or tipping over. Note that any change to the position of the load centre of gravity will affect the stability of the truck.

Check the capacity rating plates for the attachments or combination of attachments.

- The rating plates show the permissible values for:
- 1 Load capacity Q (kg)
- 2 Load distance C (mm)
- 3 Lift height h (mm)
- 4 Permissible sideshift s (mm)

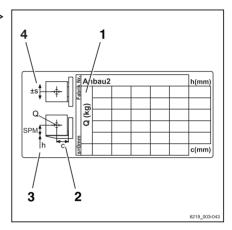



Auxiliary equipment

FleetManager (variant)

FleetManager is an equipment variant and can be fitted to the truck in different versions. The description and operation information can be found in the separate operating instructions for the corresponding FleetManager versions.

Shock recognition (variant)

The shock recognition is an equipment variant of the FleetManager (variant) in which an acceleration sensor is installed in the truck. The acceleration sensor records data arising from rapid accelerations or decelerations of the truck, e.g. in the event of an accident. This data can be electronically read out and evaluated.

 If you have any questions, please contact your authorised service centre.

Driver restraint systems (variants)

Different driver restraint systems are available as variants for this truck. The description and operation for these systems can be found in the separate "Driver restraint systems" operating instructions.

Actuating the windscreen wipers and windscreen washers (variant)

Pressing the Softkey switches between the operating stages in the sequence shown below.

Pressing the Softkey	Operating stage	
	Off	
1st time	On	
2nd time	Interval	
3rd time	Off	
Hold (possible in all operating stages)	Washer	



Front windscreen wiper and washer

 To activate the "On" operating stage, press the corresponding Softkey for the symbol (1) on the display-operating unit.

The "On" operating stage is activated. The symbol (3) appears

 To activate the "Intermittent mode" operating stage, press the Softkey again.

The symbol (2) is shown with an orange background.

 To activate the "Washer" operating stage, press and hold the Softkey.

The "Washer" operating stage is activated. The symbol (4) is displayed for as long as the Softkey is pressed.

 Once the window is clean, release the Softkey.

The previous operating stage is reactivated.

 To switch this operating stage off, press the Softkey repeatedly until the symbol (1) appears again on the display. The activation bar next to the symbol goes out.

Rear window wiper and washer

 To activate the "On" operating stage, press the corresponding Softkey for the symbol (5) on the display-operating unit.

The "On" operating stage is activated. The symbol (7) appears

 To activate the "Intermittent mode" operating stage, press the Softkey again.


The symbol (6) is highlighted with an orange point.


 To activate the "Washer" operating stage, press and hold the Softkey.

The "Washer" operating stage is activated. The symbol (8) is displayed for as long as the Softkey is pressed.

 Once the window is clean, release the Softkey.

The previous operating stage is reactivated.

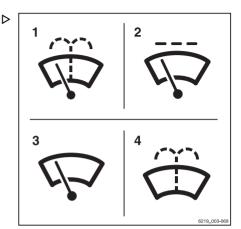

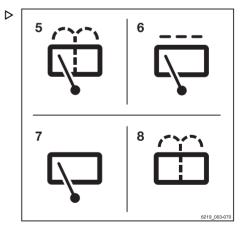



Auxiliary equipment

 To switch this operating stage off, press the Softkey repeatedly until the symbol (1) appears again on the display.

Roof panel wiper and washer

 To activate the "On" operating stage, press the corresponding Softkey for the symbol (9).

The "On" operating stage is activated. The symbol (10) appears

 To activate the "Washer" operating stage, press and hold the Softkey.

The "Washer" operating stage is activated. The symbol (11) is displayed for as long as the Softkey is pressed.

 Once the window is clean, release the Softkey.

The previous operating stage is reactivated.

 To switch this operating stage off, press the Softkey again.

Filling the washer system

- Open the filler cap (1) of the washer system.
- Fill the washer reservoir (2) with washer fluid as described in the "Maintenance data table".


A CAUTION


Damage due to the effects of frost!

When water freezes, it expands. If the washer system is not filled with fluid that is suitable for use in winter, ice can form in the washer system and cause damage.

- If there is a risk of frost, use fluid that is suitable for winter use.
- Close the filler cap.
- Operate the screen washer system until washer fluid is discharged from the spray nozzles.

56378011501 EN - 12/2019 - 04

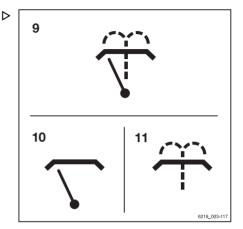

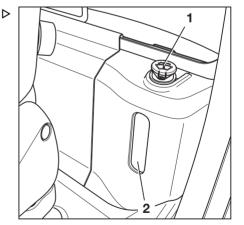



Operating the rear window heating

⊳


 To switch on the rear window heating, push the associated Softkey on the display-operating unit.

The rear window heating is switched on.

 To switch off the rear window heating, push the Softkey again.

The rear window heating is switched off.

The screen heating will switch off automatically after approx. 10 minutes.

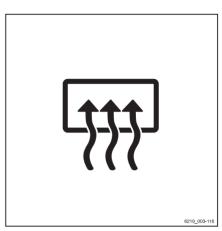


Ceiling sensor (variant)

Description

The ceiling sensor (1) on the overhead guard is an assistance system that automatically reduces the driving speed of the truck within halls. However, this assistance system does not release the driver from the responsibility of observing the speed limits on company premises.

Depending on the system setting, the ceiling sensor can detect overhead structures above the truck at a height of 2 m to 24 m above the sensor.

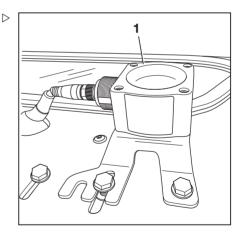



If the truck is equipped with a ceiling sensor, this decal information is located on or near the display-operating unit.

 If this decal information is lost or damaged, contact the authorised service centre.

Operating the ceiling sensor system

The drivers must be instructed on the use of the ceiling sensor system by the operating company.

When the driver enters a hall for the first time after starting work, they must be certain that the ceiling sensor system is working correctly. Despite the ceiling sensor system being installed, the driver must also check the speed indicator on the display-operating unit on a regular basis to ensure that they do not exceed the maximum speed permitted for the environment.

· Entering a hall


The ceiling sensor system automatically detects when the truck enters a hall. The system then automatically slows the truck to the maximum speed that is set for the hall.

Leaving a hall

If the truck leaves the hall again, the ceiling sensor system enables the maximum speed set for areas outside the hall. Due to the range of the sensor, this may not happen until the truck is a few metres away from the hall exit. Before the truck is able to accelerate to the maximum speed permitted for outdoor areas, the speed limitation must still be unlocked. To do this, release the accelerator briefly and then operate the accelerator again.

Switching on the truck in a hall

If the truck is switched on inside a hall, the ceiling sensor system detects the hall ceiling and reduces the driving speed to the maximum speed that is set for halls.

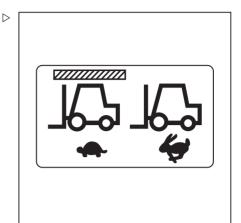



Possible limitations for object recognition

- If the truck moves under larger overhead structures outdoors, e.g. a pedestrian bridge, the ceiling sensor system may interpret this overhead structure to be a hall ceiling and reduce the maximum speed.
- In rare cases, it may occur that the ceiling sensor system does not recognize a ceiling and does not then reduce the speed. This can happen if the signals from the ceiling sensor are insufficiently reflected due to the ceiling geometry; for example, if there are large window areas at a 45° angle.

In these cases, the sensitivity and the range of the ceiling sensor system must be adjusted. See the following section.


Changing the sensor settings

The ceiling sensor system is supplied by STILL with the following factory settings:

Sensitivity: High

Ceiling height: 24 m


- Park the truck securely and switch it off.
- Turn the union nut (4) anti-clockwise to loosen it. Disconnect the electrical connection assembly by pulling out the plug.
- On the underside of the assembly baseplate on the overhead guard, hold four nuts (3) in place.
- Unscrew four socket head screws (2).

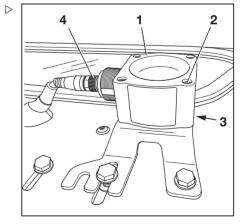



The key (5) is secured with a nut under the as- \triangleright sembly baseplate.

- Carefully remove the ceiling sensor (1).

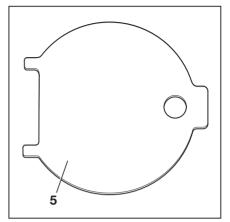

The sensor is adjusted using DIP switches (6) \triangleright

 To access the DIP switches, open the cover on the underside of the sensor housing with the key (5).

During this process, the two tabs of the key (5) fit into the recesses of the cover.

 Using the DIP switches "1 to 5" (6), adjust the range and the sensitivity of the sensor. The DIP switches can be adjusted using a small screwdriver.

A CAUTION


The settings for DIP switches "6 to 8" are the factory settings of the manufacturer.

Do **not** change the factory settings of the manufacturer!

Factory settings of the manufacturer

DIP switch			
6	7	8	
1	1	0	

The possible settings for DIP switches "1 to 5" are shown in the following tables:

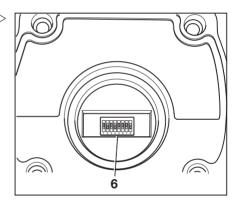




DIP switch		1	
1	2	3	Range
0	0	0	2 m
0	0	1	3 m
0	1	0	4 m
0	1	1	6 m
1	0	0	8 m
1	0	1	12 m
1	1	0	16 m
1	1	1	24 m

4	5	Sensitivity
0	0	Very high
0	1	High
1	0	Medium
1	1	Low

Representation of the beam angle depending on the sensitivity of the sensor that has been set, from (1) "low" to (4) "very high".

The sensor has different beam angles depending on the combination of range and sensitivity that has been set. See the following table:

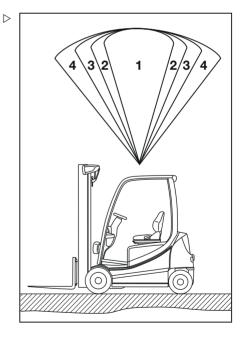



Sensitivity	Range	Beam angle
	2 m	22.5°
	4 m	22.5°
Low (1)	8 m	20°
	16 m	15°
	24 m	5°
	2 m	35°
	4 m	30°
Medium (2)	8 m	25°
	16 m	22.5°
	24 m	10°

Sensitivity	Range	Beam angle
	2 m	42°
	4 m	33°
High (3)	8 m	22.5°
	16 m	20°
	24 m	15°
	2 m	45°
	4 m	43°
Very high (4)	8 m	30°
	16 m	22.5°
	24 m	18°

- After the adjustment, refit the cover.

- Refit the ceiling sensor and connect it.
- Check that it is working correctly.




Optical lift height measuring system (variant)

Functional description

This truck can be fitted with an optical lift height measuring system as a variant. The system is immediately ready for use with all of the functions described here as soon as the truck is switched on. This system consists of an LED lift height sensor on the side at the bottom of the lift mast (1) and a reflector (2) on the fork carriage.

The LED/sensor unit and reflector are adjusted at the factory. Follow-up adjustments are carried out by the authorised service centre.

The LED lift height sensor constantly emits a light signal that is reflected by the reflector. The truck control unit calculates the current lift height based on the travel time of the light signal.

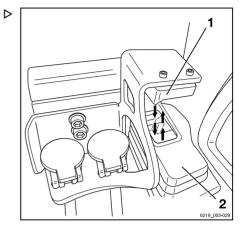


The infrared light from the LED lift height sensor is not harmful to the human eye. Nevertheless, you should avoid looking directly into the light source.

The current lift height(1) is displayed on the display-operating unit at all times.

The displayed lift height corresponds to the height of the upper edge of the fork arms. If desired, the authorised service centre can set a different value. If a different attachment is installed, the authorised service centre must adjust this value.

The system functions across the entire lift height, from ground level up to the maximum lift height of the truck. The maximum measurement deviation of the system is ± 5 cm.

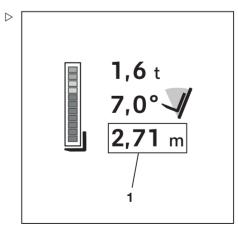



Cleaning

It is recommended that the LED sensor glass (1) and the reflector (2) are checked before starting work and, if required, cleaned. The cleaning frequency depends on the application conditions of the truck. The quality of the light signal may also be reduced as a result of heavy rain or fogging up of the sensor.

If the light signal is too weak, the LED sensor glass (1) and the reflector (2) must be cleaned. Three dashes are shown on the display-operating unit instead of the lift height display.

 \triangleright

The message Clean lift height sensor appears in the display.

- Clean the sensor glass (2) and the reflector (1) using a soft cloth and water.
- Also clean the dust protection cover (3), if necessary.

A small amount of cleaning agent can be added to the water.

A CAUTION


Risk of component damage.


The sensor glass and the reflector can be damaged as a result of incorrect cleaning procedures.

- The components must never be cleaned using dry materials.
- Do not use agents containing hydrocarbons.

Agents containing hydrocarbons include:

- Acetone
- Methanol
- Ethanol
- · Propanol

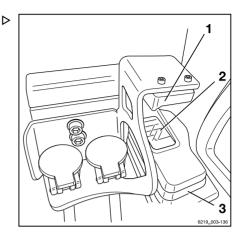

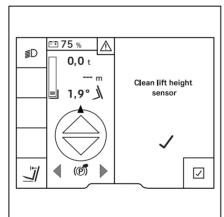



A CAUTION

Risk of damage to the LED lift height sensor through high-pressure cleaning!

A high-pressure cleaner can damage the LED lift height sensor due to the penetration of water. This can result in incorrect measurements.

 Never direct the spray from a high-pressure cleaner at the LED lift height sensor.

Resolving malfunctions

A misaligned LED lift height sensor or bent reflector must be adjusted only by the authorised service centre.

The driver can resolve a temporary interruption of the light signal due to contamination or foreign objects in the signal path. See the section entitled "Cleaning".

 If the malfunction in the system persists, please contact the authorised service centre.

If a malfunction occurs, the message "Check lift height sensor and reflector" appears in the display-operating unit. If the malfunction no longer exists or has been rectified, the system is automatically available again.

Truck functions that are dependent on the lift height are restricted in the event of a malfunction in the height measurement system. Malfunctions must therefore be rectified immediately.

Emergency operation in the event of malfunctions

In the event of a malfunction in the height measurement system, the truck switches to emergency operation.

In emergency operation, the below functions that are dependent on the lift height are not available:

- · Lift height display
- · Fork wear protection
- Lift mast transition damping



Due to the lack of a measured value, the functions that are dependent on the lift height will instead use calculated values for the lift height.

For safety reasons, the calculated value is always below the actual lift height value.

The following assistance functions can continue to be operated, but with the restrictions of emergency operation:

- Intermediate lift cut-out
- Release the lifting operating device so that it can return to the zero position.

The fork carriage can then continue lifting at a reduced speed.

 Cancel the intermediate lift cut-out using the "Confirm" softkey ☑.

The fork carriage can continue lifting at normal speed.

- · Lift mast end-stop damping
- Release the lifting operating device so that it can return to the zero position.

WARNING

Risk of collision with the hall ceiling.

The fork carriage can now be lifted to the maximum lift height without limitation.

- Take note of the height of the ceiling.
- Speed reduction when the fork carriage is raised

The speed reduction activates at a lower lift height than in normal operation.



Cab

Opening and closing the cab door

A CAUTION

Risk of component damage.

If the cab door opens while driving, there is risk of damage from a collision.

 The cab door must be latched securely in the engaged position.

Opening the cab door from the outside:

- Insert the key in the door lock (5), unlock the door and remove the key.
- Pull the handle (4). Unlock the door lock.
- Open the cab door (3) by pulling it outwards.

Opening the cab door from the inside:


- Take hold of the handle (2) and the latch (1).
- Push in the latch. Push the cab door outwards.

Closing the cab door from the outside:

 Take hold of the door by the door handle (4). Close the cab door by pushing.

Closing the cab door from the inside:

- Take hold of the handle (2).
- Pull the cab door inwards and close it.

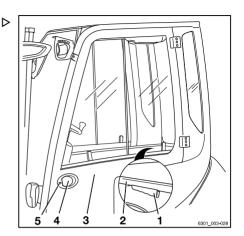



Cab

Opening and closing the side window

WARNING

There is a risk of crushing between the window frame and side window due to the side windows slipping inadvertently during travel.

 Make sure that the handle engages securely in the corresponding stop slot.

Opening the front side window:

Squeeze the handle (3). Slide the front side window (1) backwards.

Opening the rear side window:

The rear side window (2) can be opened in the same way as the front side window.

Closing the front side window:


Slide the front side window (1) forwards using the handle (3) until it snaps into place.


Closing the rear side window:

The rear side window (2) can be closed in the same way as the front side window.

Turning the interior lighting on or off \triangleright (variant)

 To turn the interior lighting on or off, press the push button switch (1) in the middle of the interior lighting.

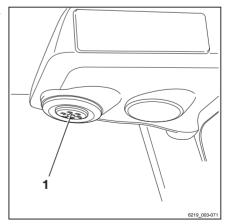

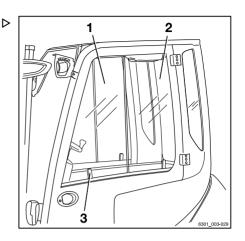



Radio (variant)

The radio and the loudspeakers are an equipment variant. If the truck is equipped with a radio and loudspeakers, they are integrated into the roof lining.

The description and operation can be found in the separate operating instructions for the radio.

A WARNING

The driver's attention is adversely affected by operating the radio or listening to it at excessive volumes while driving or handling loads. Risk of accident!

- Do not operate the radio when driving or when handling loads.
- Adjust the radio volume so that you can still hear warning signals.

Heating system (variant)



DANGER
There is a risk of poisoning if heavily

polluted surrounding air is aspirated into the closed cab!

 Do not operate the heating system in the vicinity of storage areas or similar areas in which fuel vapours or fine dust (e.g. coal, wood or grain dust) can build up.



A DANGER

Risk of explosion due to heat!

The heat can cause gases to expand considerably or to ignite.

 Do not expose spray cans or gas cartridges to the flow of hot air.





Risk of fire due to overheating!

The heating system can overheat if the hot air cannot escape from it.

The heating system may only be switched on if the blower is running and the heating system is not covered by objects (such as a jacket or cover).

- Always switch the blower on first.
- Do not switch the heating system on until the blower is switched on.
- Move any objects away from the heating system or air distributors.



A DANGER

The heating system housing can become very hot during heating operation. There is a risk of burns if it is touched!

- Do not touch the heating system housing during operation.
- Only touch the switches provided.

Operating devices of the heating system

The operating devices of the heating system include:

- 1 Heating level control knob
- 2 Fan control knob
- 3 Air vent control knob

Switching on the blower and heating system


 Turn the fan control knob (2) to the desired blower position.

The blower runs at the speed level selected via the fan control knob (2).

 Turn the heating level control knob (1) to the desired heating level.

The heater warms the air to the heating level selected via the heating level control knob (1)

 Turn the air vent control knob (3) to the desired position.

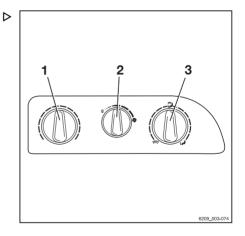



Selecting blower settings

- To select a lower fan output, turn the fan control knob (2) anticlockwise.
- To select a high blower output, turn the fan control knob (2) clockwise.

Setting heating levels

- To set a lower heater power, turn the heating level control knob (1) anticlockwise.
- To set a higher heater power, turn the heating level control knob (1) clockwise.

Setting the air vent control knob

- To direct the air flow to the footwell, turn the air vent control knob (3) in an anticlockwise direction to position (1).
- To direct the air flow to the windscreen, turn the air vent control knob (3) in a clockwise direction to position ⁽³⁾.

The centre position \mathbb{P} directs the air flow to the footwell and the windscreen.

Switching off the heating system and blower

 Turn the heating level control knob (1) in an anticlockwise direction until it reaches the stop.

The heating system is shut off.

 Turn the fan control knob (2) in an anticlockwise direction until it reaches the stop.

The blower is shut off.



Adjusting the air distributors

The air distributors for the driver are always supplied with air. It is not necessary to adjust the heating system using the operating devices.

 To open the air distributor, push the indentation (1) on the disc.


The discs open.

- Grasp the discs to align the air flow:

The discs can be adjusted to the desired angle. The air distributor can be rotated.

- Press down again to close the discs.

A DANGER

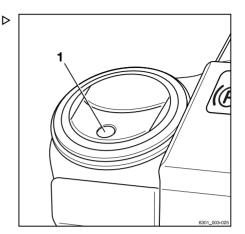

Changing fuses



Risk of fire as a result of short circuits!

Using the wrong fuses can result in short circuits.


 Use only fuses with the prescribed nominal current.

Air conditioning (variant)

The air conditioning dries the air in the cab to prevent the glass panes misting up. The temperature of the air that is blown out is based on the heating level that has been set. The defrost function can be used to de-ice the windscreen quickly.

The operating devices of the air conditioning include:

- 1 Heating level control knob
- 2 Fan control knob
- 3 Air vent control knob
- 4 Defrost switch
- 5 On/off switch
- To adjust the air distributors and to control the blower positions, the heat settings and the air vent control knob, see the section entitled "Heating system (variant)".

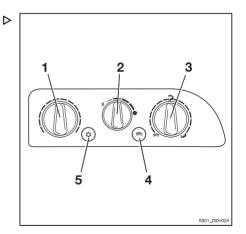



Switching the air conditioning on and off

- Push the on/off switch (5).

The LED on the switch lights up green. The air conditioning is switched on.

- Press the on/off switch (5) again.

The LED on the switch goes out. The air conditioning is switched off.

Defrost function

The defrost function can be used to de-ice and dehumidify the windscreen quickly. To do this, turn the air vent control knob (3) clockwise to the m position. Open the air distributors and direct them onto the windscreen.

- Switch on the air conditioning.
- Push the defrost switch (4).


The LED on the switch lights up green. The air conditioning operates at full power. The highest heating level is selected. This feature operates for a limited period only. To save energy, it switches itself off automatically.

- Press the defrost switch (4) again.

The defrost function is switched off.

Clipboard (variant)

The clipboard (1) with reading lamp (2) is an equipment variant.

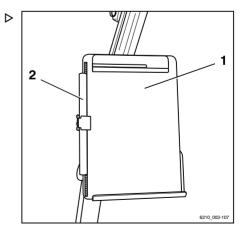




Cab

Sun visor and sun blind

The truck can be equipped with a sun visor (2), a sun blind for the roof (1) and a sun blind for the driver's view to the front (4).

- To adjust the sun visor (2), grasp it and move it to the desired position.
- To move the sun blind (4) up and down, grasp the tab (3) and move the sun blind.
- If necessary, fully unroll the sun blind for the roof (1) and attach the ends (5) in the extended position.
- To roll up, slowly roll the blind (1) back up.

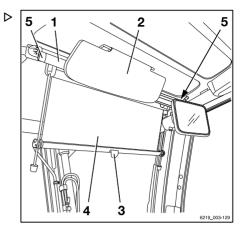



Towed load

A DANGER

There is an increased risk of accident when using a trailer.

Using a trailer changes the truck handling characteristics. When towing, operate the truck such that the trailer train can be safely driven and braked at all times. The maximum permissible speed when towing is 5 km/h.

- Do not exceed the permissible speed of 5 km/h.
- Do not couple the truck in front of rail vehicles.
- The truck must not be used to push any kind of trolley.
- It must be possible to drive and brake at all times.

A CAUTION

Risk of damage to components!

The maximum towed load for occasional towing is the rated capacity specified on the nameplate. Overloading can lead to component damage on the truck. The sum of the actual towed load and the actual load on the fork must not exceed the rated capacity. If the towed load present corresponds to the rated capacity of the truck, it is not permitted to transport a load on the fork at the same time. The load can be distributed between the fork and the trailer.


- Check the load distribution and adjust it to correspond to the rated capacity.
- Observe the permissible rigidity value of the tow coupling.

A CAUTION

Risk of damage to components!

The maximum towed load only applies when towing unbraked trailers on a level surface (maximum deviation +/-1%) and on firm ground. The towed load must be reduced if towing on gradients. If necessary, notify the authorised service centre of the application conditions. The service centre will provide the required data.

- Inform the authorised service centre.

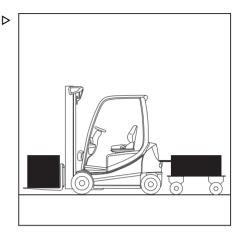



A CAUTION

Risk of damage to components!

A support load is not permitted.

Do not use trailers with tillers supported by the tow coupling.

This truck is suitable for the occasional towing of trailers. If the truck is equipped with a towing device, this occasional towing must not exceed 2% of the daily operating time. The manufacturer must be consulted if the truck is to be used for towing on a more regular basis.

Coupling pin in the counterweight


Coupling the trailer

A DANGER

There is a risk of fatal injury if the truck rolls away

If you briefly leave the truck to couple or uncouple it, there is a risk of fatal injury from being run over if the truck rolls away.

- Apply the parking brake.
- Lower the fork to the ground.
- Switch off the truck. Remove the switch key or block access to the truck.
- Take measures to prevent the trailer from rolling away, e.g. using wedges (1).

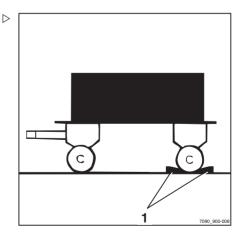



- Push the coupling pin (1) downwards, turn the pin by 90° and pull the pin out.
- Adjust the tiller height.

A DANGER

People can become trapped between the truck and trailer.

When coupling, ensure that there are no persons present between the truck and the trailer.

- Slowly move the truck backwards.
- Moving the truck back allows you to insert the tiller into the recess (2) in the counterweight.

A DANGER

Risk of accident due to damaged or lost clutch components!

If the coupling pin or securing bush are lost or destroyed during towing, the trailer will work loose and become uncontrollable.


- Only use original coupling pins that have been checked.
- Ensure that the coupling pin is correctly inserted and secured.
- Insert the coupling pin into the counterweight, press the pin downwards against the spring pressure and rotate the pin by 90°.

The coupling pin is locked in this position.

Remove any items used to prevent the trailer from rolling away.

Uncoupling the trailer


- Take measures to prevent the trailer from rolling away, e.g. using wedges.

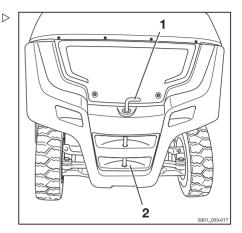



- Push the coupling pin (2) downwards, turn the pin by 90° and pull the pin out.
- Slowly move the truck forwards and guide the tow-bar eye completely out of the recess (2) in the counterweight.
- Insert the coupling pin into the counterweight, press the pin downwards against the spring pressure and rotate the pin by 90°.

The coupling pin is locked in this position.

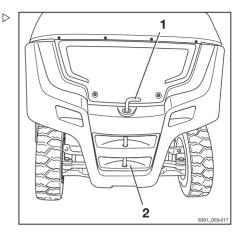

Tow coupling RO*244

A DANGER

People can become trapped between the truck and trailer.

When coupling, ensure that there are no persons present between the truck and the trailer.

A DANGER

Never jack up the truck on the tow coupling or use it for crane lifting. The tow coupling is not designed for this and could be deformed or damaged. This could cause the truck to fall, with potentially fatal consequences!

- Use the tow coupling only for towing.
- For jacking up and crane loading, use only the designated lifting points.

A DANGER

The tow coupling is not designed for support loads and could be deformed or destroyed. This could cause the supported load to fall, with potentially fatal consequences!

- The tow coupling should be subjected only to horizontal loads, i.e. the tiller must be horizontal.



A DANGER

If you briefly leave the truck to couple or uncouple the trailer, there is a risk to life caused by the truck rolling away and running you over.

- Apply the parking brake.
- Lower the forks to the ground.
- Switch off the key switch and remove the key.

A WARNING

Never reach between the coupling pins and the towing jaws. If the component moves suddenly there is a risk of injury!

- To release the coupling pin, actuate the corresponding lever or use a suitable device (e.g. assembly lever).
- When not in use, close the automatic tow coupling.

A WARNING

Risk of damage due to component collision.

A truck with tow coupling needs more room for manoeuvring due to its overhang. The tow coupling can damage the racking or the tow coupling itself when manoeuvring. If there is a collision with the tow coupling, check the tow coupling for damage such as cracks. A damaged tow coupling must not be used again.

- Always manoeuvre carefully and with sufficient room.
- In the case of a collision, check the tow coupling for damage.
- Replace tow coupling if damaged, if necessary contact the authorised service centre.

A WARNING

Risk of damage to the tow bar eye or tiller!

Due to the truck's rear wheel steering, the side slewing angle of the tiller may not be adequate. The coupling or the tiller may be damaged! The tow bar eye of the tiller must fit the tow coupling in terms of shape and size.

- Ensure that the tow bar eye and tiller fit correctly.
- Avoid sharp cornering.
- Exercise care when travelling and manoeuvring in reverse.



WARNING

Risk of component damage if the tiller in the tow coupling is tilted!

The tiller should be kept as horizontal as possible when towing. This ensures that the rotation range is sufficient at the top and bottom. The authorised service centre can adjust the assembly height for the tow coupling to the tiller height if necessary.

- Make sure that the tiller is level.
- To change the coupling height, contact the authorised service centre.

When manoeuvring in restricted areas, take into account the projection of the coupling.

Coupling the trailer

Tow coupling RO*244 is intended for a towbar eye in accordance with DIN 74054 (bore diameter 40 mm) or DIN 8454 (bore diameter 35 mm).


- Take measures to prevent the trailer from rolling away, e.g. using wedges.
- Adjust the tow bar eye of the tiller so that it is at the centre of the towing jaws.
- Push the hand lever (2) upwards until it snaps into place.

The tow coupling is opened.

A CAUTION

When being coupled, the tow-bar eye must engage in the middle of the coupling jaw. Failure to follow these instructions could result in damage to the coupling jaw or to the tow-bar eye!

- Ensure that the tow-bar eye enters the coupling jaw centrally.
- Move the truck back slowly until the tow bar eye is inserted centrally into the coupling jaw of the tow coupling and the coupling pin engages.

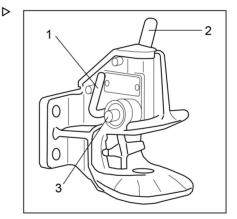



The coupling pin is correctly engaged if the control pin (3) does not protrude out of its guide.

A DANGER

If the coupling pin drops out during towing, the trailer will work loose and can no longer be controlled. Risk of accident!

The control pin (3) must not protrude out of its guide.

- Ensure that the coupling pin is engaged correctly.

If the coupling pin is not correctly engaged:

- Remove any items used to prevent the trailer from rolling away.
- Move the truck with the trailer forwards approx.
 1 m and then move it back slightly.
- On the coupling pin, check again that the control pin does not protrude out of its guide.
- Remove any items used to prevent the trailer from rolling away.
- Tow the trailer.

Closing the coupling

A DANGER

Risk of injury from hand becoming trapped!

Do not reach into the coupling pin area. If, for example, a tow rope is to be secured in the tow coupling, only actuate the tow coupling via the closing lever (1).

 Press the closing lever (1) downwards as far as it will go.


The tow coupling is closed.

Uncoupling the trailer

- Take measures to prevent the trailer from rolling away, e.g. using wedges.
- Push the hand lever (2) upwards until it snaps into place.

The tow coupling is opened.

 Slowly drive the truck forwards until the towbar eye and towing jaws are disconnected.

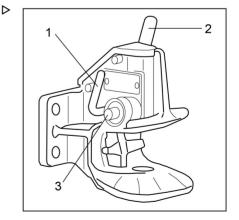



Trailer operation

- Close the tow coupling by actuating the closing lever (1).

Δ

To protect the lower coupling pin bush against contamination, always keep the tow coupling closed.


Towing trailers

- Drivers who are towing a trailer for the first time must practise driving with a trailer in a suitable area.
- When passing through narrow road areas (entrances, gates etc.), observe the dimensions of the trailer and load.
- When towing multiple trailers, ensure a sufficient minimum distance to fixed installations when turning and cornering.

The permissible length of the trailer trains depends on the roadways to be driven and may need to be determined during the test drive.

It is the responsibility of the operating company to instruct the drivers regarding the permissible number of trailers and, where required, any additional speed reductions on individual sections of the route.

Please observe the definition of the following responsible persons: "operating company" and "driver".

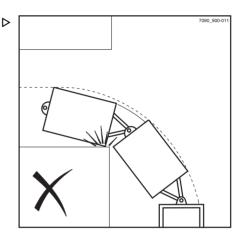



Cold store application

Cold store application

The truck is suitable for use in cold stores. Cold store equipment with low-temperature hydraulic oil may be required.

The truck is equipped for two different types of application.

The cold store symbol indicates the variant with cold store equipment that uses low-temperature hydraulic oil.

The display-operating unit is heated in this variant.

As another variant, the truck can be equipped with a driver's cab with a heating system.

Types of application

There are two different types of cold store application for the truck, distinguished by two different temperature ranges.


1 Constant use in the temperature range down to -5° C, short-term use at temperatures down to -10° C.

Operation possible with standard equipment and standard hydraulic oil

2 Alternating between indoor use down to -32°C and outdoor use up to +25°C, briefly up to +40°C.

Operation possible only with cold store equipment and low-temperature hydraulic oil

When changing to a different type of hydraulic oil, the authorised service centre must adjust the parameters of the truck control unit.

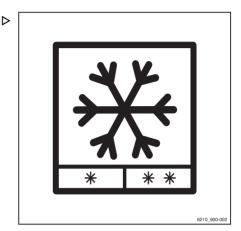



Operation

A CAUTION

Changing from a cold internal temperature to a warm outside temperature may result in the formation of condensation water. This water may freeze on re-entry to the cold store, blocking moving parts of the truck.

It is essential that close attention is paid to the duration of deployment in the different temperature ranges for both types of application.

Before being used in the cold store, the truck must be dry and warmed up.

The truck must not leave the cold store area for more than 10 minutes. By adhering to this rule, condensation water will not have time to form.

If the truck stays outside for more than 10 minutes, it must remain there at least until the condensation water has drained away and the truck has dried off. Depending on the weather, this will take at least 30 minutes.

A WARNING

Risk of injury!

If condensation water freezes in the cold store, do not try to free parts that have become stuck with your hands.

During the warm-up phase, the hydraulic power is limited to load program "1".

- To ensure operational safety, drive the truck for approximately 5 minutes and actuate the brake several times.
- Actuate all hydraulic lifting functions several times.

This warm-up phase is necessary to ensure that the oil reaches the operating temperature.

Always park the truck outside the cold store.



Risk of component damage!

The lead-acid batteries must not be left in the cold store overnight without power uptake or charging.



 Charge the battery outside the cold store and operate the truck using a replacement battery.

Using batteries in the cold store

To compensate for the reduction in capacity at low temperatures, it is advisable to use leadacid batteries with the maximum nominal capacity in the respective battery dimensions for the truck series.

Electric trucks must not be parked in a cold area for any longer than necessary. This also applies to unused batteries. The charging station and the parking area for trucks and batteries must be at normal room temperature (not below 10°C). Charging is extremely slow at low temperatures. At temperatures below 10°C, the battery cannot be fully charged with the usual charging parameters.

- Charge the battery fully before each shift.
- During the gassing phase, always top up with distilled water.

The distilled water will mix with the battery acid so that it does not freeze.

Water top-up systems must not be used at temperatures below 0°C, as this could cause the systems and the water present in the hose lines to freeze.

The battery voltage when discharged is thus generally lower at low temperatures. The final discharged voltage is reached earlier, i.e. the capacity is lower.



Display messages

Messages

Certain truck conditions may cause event-related messages to be shown on the display of the display-operating unit.

There are messages about operation and messages about the truck. If a message about operation appears, the display-operating unit will prompt you to perform an action. A message about the truck means that the truck control unit has detected a fault.

The following types of message may appear individually or in combination:

- A graphic symbol
- · The message
- A code consisting of a letter and a four-digit number

The message is displayed until either the cause has been corrected or the message has been acknowledged.

In the case of successive events, the respective messages are displayed one after another on the display.

Messages about operation

If messages about operation appear on the display-operating unit, an action must be performed.

Shown on display	Cause/action
Log in î	The access authorisation (variant) is preventing the use of the truck. - Enable the access authorisation.
Battery empty	The battery charge state is too low for truck use. - Charge the battery.
Battery: Emergency mode 🗊	The battery charge state is low. The truck experien- ces a power reduction. - Charge the battery.



Shown on display	Cause/action
Check the battery	This message about the on-board charger is triggered by different causes: A possible fault in the electrical connection between the battery and the on-board charger. The fuse for the on-board charger on the truck or the on-board charger is defective. The battery has a fault. The battery has exceeded its service life. The battery is incorrectly configured. - Contact the authorised service centre.
Check battery type	This message about the on-board charger is triggered by different causes: The battery is defective. The wrong battery is connected. - Contact the authorised service centre.
Check battery acid level 🖾	The acid level of the lead-acid battery is too low. - Check the acid level of the battery. Correct if neces- sary.
Battery temperature too high	The charging process has been automatically termi- nated due to the battery temperature being too high. This message about the on-board charger is triggered by different causes: The truck was heavily used before charging and the battery has become very hot. The ambient temperature is too high and the battery cannot cool down. The charging profile is configured incorrectly. - Allow the battery to cool down. - Allow the battery temperature symbol on the display- operating unit to flash. Change the "Start" symbol to "Pause".
Check battery door sensor 🗂	The battery door sensor does not detect that the bat- tery door is closed. - Make sure that the lock on the battery door is en- gaged. - If the message continues to appear, please contact the authorised service centre.
Close the battery door 🗇	The battery door is open. The truck will only move at a reduced speed. - Close the battery door.
Battery too cold 🛄	The lithium-ion battery is too cold. - Move the truck to a warmer environment.
Release brake pedal !	The desired action is only possible after releasing the brake pedal. - Release the brake pedal.
Curve Speed Control Ac- tive !	Curve Speed Control reduces the curve speed. - No action is required.



Shown on display	Cause/action
Data transmission re- quired !	If the truck is equipped with this variant, data trans- mission must be carried out. - See the associated instructions.
Diagnostic mode active Δ	This message is not displayed during normal opera- tion. - Contact the authorised service centre.
Set revolution speed 出	If an attachment is fitted and no pump speed has been set for its direction of movement, this message will be displayed. - Set the revolution speed with the access authorisa- tion.
Electrolyte circulation not working	The electrolyte circulation pump is not working. The charging process is continued without electrolyte circulation. Intermediate charging can cause damage to the battery. - Cancel the charging process. - Contact the authorised service centre.
Development mode active Δ	This message is not displayed during normal opera- tion. - Contact the authorised service centre.
Drive unit blocked !	This message follows earlier messages, e.g. overtem- perature. It is not possible to drive the truck. - Wait until the message disappears. If necessary, switch the truck off and on again. - If the message continues to appear, please contact the authorised service centre.
Sit on the driver's seat 省	The truck is equipped with a seat contact switch. If the driver's seat is not occupied, the drives are disa- bled. - Sit on the driver's seat.
Secure the truck to prevent it rolling away Δ	If the truck control unit detects a movement of the truck without the accelerator pedal being actuated, this message appears. - Apply the parking brake. - If necessary, secure the truck with wedges so that it cannot roll away.
Switch off truck? (D)	If the truck is switched off without having first applied the parking brake, this message appears. - Apply the parking brake.
Switch off truck anyway? (D)	If the truck is to be switched off although the parking brake is not applied, this message appears. - Secure the truck with wedges so that it cannot roll away.
Truck stop: Access system 🕯	The access authorisation (variant) is preventing the use of the truck. This can be caused by entry of an in- correct code. - Enable the access authorisation.



Shown on display	Cause/action
Fault: Battery 🔧	The truck control unit detects an error in the lithium- ion battery. - Switch the truck off and on again. - If the message continues to appear, please contact the authorised service centre.
Mains voltage error	This message about the on-board charger is triggered by different causes: The fuse for the power supply has been triggered. There is a defect in the power supply. There is a power failure. - Re-establish the power supply. When the power supply has been re-established, the charging process resumes automatically.
Apply parking brake	If the truck control unit detects a movement of the truck without the accelerator pedal being actuated, this message appears. - Apply the parking brake.
Release parking brake 🕼	The desired action is only possible after releasing the parking brake. - Release the brake pedal.
Check parking brake Δ	The truck control unit detects that the braking force of the electric parking brake is reducing. - Secure the truck with wedges so that the truck does not roll away. - Contact your authorised service centre.
Parking brake cannot be ap- plied (1)	The parking brake cannot be applied due to a techni- cal fault. - Apply the parking brake according to the section en- titled "Malfunctions in the electric parking brake". - Secure the truck with wedges so that it cannot roll away.
Apply parking brake via button (1)	The electric parking brake is not applying automatical- ly. - Apply the parking brake by pressing the button.
Release parking brake via button	The electric parking brake cannot be released auto- matically. - Release the parking brake by pressing the button.
Parking brake: Maintenance required 🍾	The truck control unit detects that the electric parking brake needs a service. - Secure the truck with wedges so that the truck does not roll away. - Contact your authorised service centre.
Lower forks !	This message appears e.g. for precision load meas- urement (variant). - Lower the fork carriage.
Lift height restriction ac- tive !	The lift height restriction (variant) is switched on. - Observe the heights of ceilings and entrances.



Shown on display	Cause/action
Close cab door or seat belt !	If the seat belt is not fastened and the cab door (var- iant) is not closed, the driving speed is limited to 4 km/h and this message appears. - Close the cab door or fasten the seat belt.
Close cab door !	If the cab door is opened while the truck is in motion, the truck brakes automatically to a speed of 4 km/h. - Close the cab door.
Configuration: Please wait 🖓	This message is not displayed during normal opera- tion. - Contact the authorised service centre.
Remove charging cable 🕫	If the truck is equipped with an integrated charger (variant) and charging is complete, this message ap- pears. - Disconnect the charger plug from the plug connec- tion on the truck.
Start charging? [_] G	If the truck is fitted with an integrated charger (variant) and the truck control unit detects that a charger plug is inserted, this message appears. - Press the relevant softkey to start charging.
Re-insert charging plug	The charging button on the truck plug of the charging cable has been held down too long. - Pull the truck plug out and re-insert it after approx. 2 seconds. The charger starts a new charging process.
Unsent data will be over- written !	If the truck is equipped with this variant, data trans- mission must be carried out. - See the associated instructions.
Emergency off active 🛥	If the truck is switched on and an operating device is actuated when the emergency off switch is pressed, this message appears. The desired action is only pos- sible once the emergency off switch is unlocked. - Unlock the emergency off switch.
Emergency operation !	If the truck experiences a power reduction, for exam- ple due to a battery charge state that is too low, this message appears. - Observe the previous message.
Emerg. direct. via drive direction lever Δ	If the truck control unit has detected a fault that af- fects the drive functions, it is possible to activate emergency running. - Set the direction selection lever to the desired direc- tion. - Drive the truck to a safe area and park it safely. - Contact your authorised service centre.



Shown on display	Cause/action
Emerg. direct. via drive direction switch Δ	If the truck control unit has detected a fault that af- fects the drive functions, it is possible to activate emergency running. - Set the drive direction switch to the desired direc- tion. - Drive the truck to a safe area and park it safely. - Contact your authorised service centre.
On-board charger power re- duction, service required	There is a fault with the charging program. The charg- ing process is performed with reduced power. - Contact the authorised service centre.
Parameter calibration $igtarrow$	This message is not displayed during normal opera- tion. - Contact the authorised service centre.
Seatbelt sequence !	If the configured sequence for applying the restraint systems is not observed, this message appears. - Fasten the seat belt.
Close restraint system 🖬	If, for example, the truck is equipped with a bracket as a restraint system and the accelerator pedal is actu- ated, this message appears. The truck will not move. - Close the restraint system.
Shaking blocked — over-load Δ	If the shaking function (variant) is overloaded by an excessive load, this message appears. The shake function will remain unavailable as long as this situation persists.
Switch on switch lock !	If the hazard warning system (variant) is switched on when the truck is switched off, the display-operating unit remains active. Then, when a truck function is called up, this message appears. - Switch on the truck.
Shock event detected !	If the truck control unit detects a very strong accelera- tion or deceleration, e.g. in the event of an accident, this message appears.
Service required 🍾	If the maintenance interval has been reached, this message appears. - Contact the authorised service centre.
Service mode active Δ	This message is not displayed during normal opera- tion. - Contact the authorised service centre.
Close seat belt 🐇	If the seat belt is not fastened, the driving speed is limited to 4 km/h and this message appears. - Fasten the seat belt.
Are you sure? ?	If the display-operating unit is expecting confirmation from the driver, this message appears. - Continue with or cancel the input prompt.
Software update Please wait	The on-board charger software is being updated. The update is complete when the charging process ends Wait until the charging process begins automatically.



Shown on display	Cause/action	
Enable sprint mode !	If the battery is charged after locking sprint mode or a normal temperature is reached, this message ap- pears. Sprint mode can be used again once the truck has been restarted.	
Sprint mode blocked — bat- tery 🗇	If the battery experiences under-voltage or too high a temperature, this message appears. Sprint mode is no longer available. - Observe the previous message.	
Sprint mode blocked — tem- perature	If the temperature at the drive units is too high, this message appears. Sprint mode is no longer available. - Observe the previous message.	
Dead man switch Δ	If the truck is equipped with a foot switch, and a truck function is called up when the foot switch is not actu- ated, this message appears. - Actuate the foot switch.	
Overload 🏜	With the "overload protection" variant, this message appears if an excessive load is picked up. - Set down the load.	
Battery overtemperature 🗂	If the truck control unit detects an excessive battery temperature, this message appears. - Allow the truck to cool down.	
Working mode active Δ	This message is not displayed during normal opera- tion. - Contact the authorised service centre.	
Access expired !	If the truck is equipped with this verient this measure	
Access denied !	If the truck is equipped with this variant, this message might appear.	
Access expires in < 1 month !	- See the associated instructions.	
Access expires in < 1 day !		
Access expires in < 1 week !	If the truck is equipped with this variant, this message	
Access expires in < 2 days !	might appear. - See the associated instructions.	
Access expires in < 3 days !]	

Messages about the truck

If messages with a code appear on the display-operating unit, the truck control unit has detected a fault. The message with a code is stored in the message list until the cause of the message is corrected. The saved messages can be called up from the "message list".



If, for example, the reflector or the lift-height sensor is contaminated, it usually helps to clean these components.

- Switch the truck off and on again.
- If the message still appears, please contact the authorised service centre.

The messages are sorted in ascending order according to their code:

Code	Shown on display	Description/possible solution
A2103	Parameter faulty 🕭	Collective fault of the parameters
A2305	Fault: Control unit 🛆	Collective fault on the control unit
A2545	Actuator error 9: 🛆	Actuator breakdown If no attachment is fitted, this message can be ignored. - If there is an attachment fitted, contact the au- thorised service centre.
A2801	Monitoring 🛆	Process monitoring, proc 1
A2802	Monitoring 🛆	Process monitoring, proc 2
A2803	Monitoring 🛆	Process monitoring, proc 3
A2804	Monitoring 🛆	Process monitoring, proc 4
A2805	Monitoring 🛆	Process monitoring, proc 5
A2806	Monitoring 🛆	Process monitoring, proc 6
A2807	Monitoring 🛆	Process monitoring, proc 7
A2808	Monitoring 🛆	Process monitoring, proc 8
A2809	Monitoring 🛆	Process monitoring, proc 9
A2810	Monitoring 🛆	Process monitoring, proc 10
A2811	Monitoring 🛆	Process monitoring, proc 11
A2899	Monitoring 🛆	Collective fault of the process monitoring
A3015	Fault: Brake sensor 🛈	Collective fault on the brake sensor
A3027	Fault: Seat switch 💾	The seat switch does not open - Stand up from the driver's seat and sit down again.
A3035	Fault: Brake fluid (1)	Brake fluid switch
A3143	Check lift height sensor and reflector Δ	Lift-height sensor measurement error
A3151	Plausibility of shift function hydraulics Δ	If no attachment is fitted, this message can be ignored. - If there is an attachment fitted, contact the au- thorised service centre.
A3230	Fault: Monitoring of steering \triangle	Collective fault on the steering
A3340	Monitoring: Electrics $igt \Delta$	Collective fault on the additional electrical instal- lation
A3345	Monitoring: Electrics 🛆	Collective fault on the powertrain



Code	Shown on display	Description/possible solution
A3346	Monitoring: Drive unit 🛆	Collective fault on the drivetrain
A3347	Hydraulics 🖞	If no attachment is fitted, this message can be ignored. - If there is an attachment fitted, contact the au- thorised service centre.
A5090	Overtemp.: Drive unit	Drive unit overtemperature collective fault - Switch off the truck and leave it to cool down.
A5091	Overtemp.: Hydraulic drive	Hydraulic drive overtemperature collective fault - Switch off the truck and leave it to cool down.
A5934	Fault: Internal charger \triangle	Error on the charging connector detection - Disconnect the connection assembly and re- connect it.
A5961	Battery overtempera- ture	Overtemperature of the lithium battery - Switch off the truck and leave it to cool down.
A5962	Battery too cold 🛄	Insufficient lithium battery temperature - Move the truck to a warmer environment.
A5986	Fault: Control unit 🛆	General battery current measurement
A5993	Fault: Internal charg- er 🛦	On-board charger collective fault
A6210	Fault: Battery 🖄	Lithium battery collective fault
A6502	Overtemp.: Parking brake (D)	Electric parking brake detects overtemperature
A6510	Fault: Parking brake	Electric parking brake detects fatal fault
A6511	Fault: Parking brake (D)	Brake cannot release
A6512	Fault: Parking brake	Brake cannot apply
A6701	Fault: Monitoring of as- sistance system 🛆	Collective fault on the assistance systems If this fault occurs during calibration, recalibrate the truck.
None	Error 🛆	General fault



Procedure in emergencies

Emergency shutdown

A WARNING

No electric braking assistance is available when the emergency off switch is actuated!

Actuating the emergency off switch (1) will disconnect the drives from the power supply. The truck will not be held on a slope by the regenerative brake.

- To brake, actuate the service brake.

A CAUTION

Actuating the emergency off switch (1) disconnects the drives from the power supply. Disconnecting the battery male connector (2) disconnects the entire truck from the power supply.

 Only use this safety system in an emergency or in order to safely park the truck.

A CAUTION

Potential for damage to the battery male connector!

If the battery male connector is disconnected while the key switch is on (under load), an arc will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.


- Switch off the key switch before disconnecting the battery male connector.
- Do not disconnect the battery male connector while the key switch is switched on, except in an emergency.

In an emergency, all functions of the truck can be shut down:

 Press the emergency off switch (1) or disconnect the battery male connector (2).

Pressing the emergency off switch (1) has the following effect in drive mode:

- No reduction in truck speed when the accelerator pedal is released, according to the drive programme selected. The truck will coast
- The parking brake is applied until the truck comes to a stop
- The regenerative brake does not function during the first part of brake pedal travel.

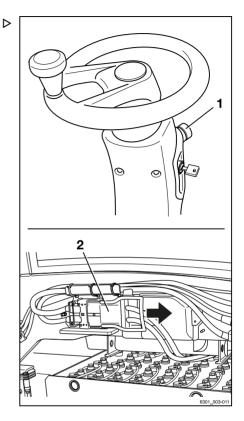



Procedure in emergencies

To decelerate the truck with the mechanical brake, the brake pedal has to be pressed down further

- No power steering effect; the steering forces are increased by the remaining emergency steering function
- The "Curve Speed Control" system (automatic reduction in truck speed when cornering) does not function. Decelerate the truck with the service brake by depressing the brake pedal
- · No hydraulic functions are available

Procedure if truck tips over

⊳

A DANGER


If the truck tips over, the driver could fall out and slide under the truck with potentially fatal consequences. There is a risk to life.

Failure to comply with the limits specified in these operating instructions, e.g. driving on unacceptably steep gradients or failing to adjust speed when cornering, can cause the truck to tip over. If the truck starts to tip over, do not leave the truck under any circumstances. This increases the danger of being hit by the truck.

- Do not release your seat belt.
- Never jump off the truck.
- You must adhere to the rules of behaviour if the truck tips over.

Rules of behaviour if truck tips over:

- Hold onto the steering wheel with your hands.
- Brace your feet in the footwell.
- Bend your upper body over the steering wheel.
- Bend your body against the direction of the fall.

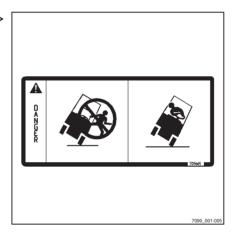



4

Procedure in emergencies

Emergency hammer

The emergency hammer is used to rescue the driver if he is shut inside the cab in a hazardous situation, for example if the truck has toppled over and the cab door cannot be opened.

Single-pane safety glass can be struck relatively safely using the emergency hammer in order for the driver to escape or be rescued from the danger area.

Using the emergency hammer

A WARNING

When glass is smashed there is a risk of injury caused by glass splinters!

When the cab glass is smashed, splinters of glass can shoot into the face and cause damage to skin and eyes through cuts. When a pane of glass is smashed, the face should be turned away and covered with the crook of the free arm.

- Protect the face when smashing a pane of glass.
- Pull the emergency hammer out of its support mounting at the handle.
- Using one of the two metal tips on the head of the emergency hammer, hit the pane of glass with force until it breaks.


Emergency lowering

If the hydraulic controller fails whilst a load is raised, emergency lowering can be performed. An emergency lowering screw designed for this purpose is located on the valve block.



There is a risk to life from falling loads or from truck components being lowered.

- Do not walk beneath the raised load.
- Adhere to the steps detailed below.

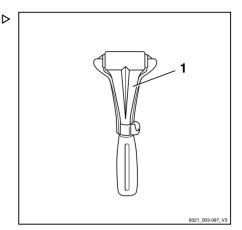





Operation

Procedure in emergencies

 Remove the lower lid (1) on the right-hand side of the footwell panelling next to the accelerator pedal.

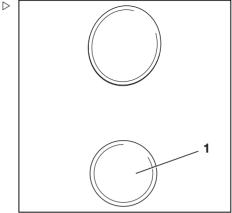

 Remove the hexagon socket wrench (2) from the compartment on the right next to the driver's seat.

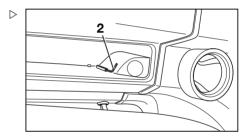

 Using the hexagon socket wrench, turn the emergency lowering screw (3) a maximum of 1.5 revolutions to loosen it.

WARNING

The load is lowered!

Unscrewing the emergency lowering screw regulates the lowering speed.

- Note the list of points below.

The following applies:


- Tightening torque: Max. 2.5 Nm
- Unscrewing the emergency lowering screw slightly:

The load lowers slowly

 Unscrewing the emergency lowering screw further:

The load lowers quickly

After lowering:

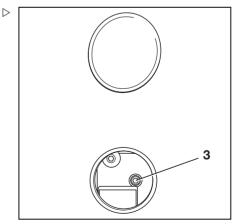



56378011501 EN - 12/2019 - 04

Procedure in emergencies

- Re-tighten the emergency lowering screw.
- Return the hexagon socket wrench to the support mounting in the compartment.
- Refit the lid.

A DANGER

If the truck is operated while the hydraulic controller is blocked, there is an increased risk of accidents.

- After the emergency lowering procedure, have the malfunction rectified.
- Notify the authorised service centre.

Emergency actuation of the electric parking brake



A DANGER

There is a risk of fatal injury from being run over if the truck rolls away.

The truck can roll away when the parking brake is released.

- In an emergency, secure the truck with wedges on the downhill-facing side to prevent it from rolling away.
- Manually release the parking brake only when the truck is at a standstill with the fork lowered.

The electric parking brake can be released and applied via an emergency actuation mechanism.

The electric parking brake must be manually actuated under the following conditions:

- The parking brake is not functioning properly.
- The truck is being transported without a battery.



Procedure in emergencies

If the parking brake is released via the emergency actuation mechanism, it is possible to drive the truck at a low speed.

- The truck can be moved out of the hazardous situation or to the repair location.
- Driving with a defective parking brake requires the driver to be especially vigilant.
- Lift the cover (1) and fold it up.

Release parking brake ←(P)→

- To release the mechanism, fully depress the brake pedal and hold it down.
- Remove and hold on to the emergency actuation mechanism (2).
- Release the brake pedal. Let go of the emergency actuation mechanism (2).

Once two grooves are visible (see arrow), the parking brake is released.

Apply parking brake → (P)+


- Fully depress the brake pedal.

The emergency actuation mechanism (2) returns to its initial position.

- Release the brake pedal.

Once only one groove is visible (see arrow), the parking brake is applied.

 If the status of the parking brake cannot be reliably determined from the position of the emergency actuation mechanism, secure the truck with wedges.

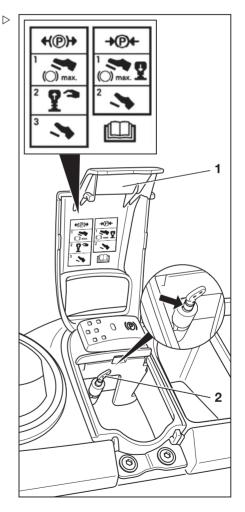



Towing

Safety information

A DANGER

The brake system on the towing vehicle may fail. Risk of accident!

If the brake system of the towing vehicle is not adequately sized, the vehicle may not brake safely or the brakes may fail. The towing vehicle must be able to absorb the pulling and braking forces from the unbraked towed load (total actual weight of the truck).

Check the pulling and braking forces of the towing vehicle.

A DANGER

The truck could drive into the towing vehicle when the towing vehicle brakes. Risk of accident!

If a rigid connection has not been used for power transmission in two directions during towing, the truck may drive into the towing vehicle when the towing vehicle brakes. For safety reasons, only a tested tow bar may be used.

- Use a tested tow bar.

A CAUTION

If the truck drive between the drive motor and the drive axle is not interrupted, the drive may be damaged.


Set the drive direction switch to the neutral position.

A CAUTION

Potential for damage to the battery male connector!

If the battery male connector is disconnected while the key switch is on (under load), an arc will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.

- Switch off the key switch before disconnecting the battery male connector.
- Do not disconnect the battery male connector while the key switch is switched on, except in an emergency.

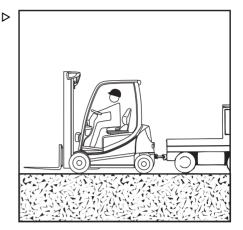



Procedure in emergencies

A DANGER

There is a risk of fatal injury during manoeuvring!

People can be crushed between the truck and towing vehicle during manoeuvring.

The towing vehicle may only be manoeuvred and the tow bar may only be attached using a second person as a guide. This ensures that the driver of the towing vehicle and the mechanic attaching the tow bar are aware of possible risks.

Only manoeuvre with a guide.

A WARNING

Risk of accident if the hydraulics fail!

If the hydraulics fail, the power steering will no longer work. The steering will be stiff.

 Select a towing speed that allows the truck and towing vehicle to be braked and controlled effectively at all times.

WARNING

Risk of accident if the truck is not steered!

If the truck is not steered while it is being towed, the truck may veer out in an uncontrolled manner.

The truck being towed must also be steered by a driver.

The driver of the truck being towed must sit in the driver's seat and fasten the seat belt before towing.

- Use the available restraint systems!

Procedure

- Set down the load and lower the fork arms close to the ground.
- Set the drive direction switch to the neutral position.
- Apply the parking brake.
- Switch off the truck.
- Disconnect the battery male connector.
- Check the pulling and braking forces of the towing vehicle.
- With the help of a guide, move the towing vehicle to the truck.
- Secure the tow bar to the tow coupling on the towing vehicle and the truck.



Procedure in emergencies

- Sit in the driver's seat in the truck being towed. Fasten the seat belt.
- Use the available restraint systems.
- Manually release the parking brake (refer to the previous section entitled "Emergency actuation of the parking brake".

The truck is now held in place only by the braking force of the towing vehicle.

- Select a towing speed that allows the truck and towing vehicle to be effectively braked and controlled at all times.
- Tow the truck.

i NOTE

If the service brake is actuated very strongly, the parking brake may apply. In this case, manually release the parking brake.

- Once the towing procedure is complete, allow the parking brake to apply by actuating the brake pedal.
- Make sure that the emergency actuation mechanism returns to the initial position or only one groove is visible.
- If the status of the emergency actuation mechanism is unclear, secure the truck after towing using wedges so that the truck cannot roll away.
- Remove the tow bar.



Connecting and disconnecting the battery male connector

Connecting and disconnecting the battery male connector

⊳

Connecting the battery male connector

- Open the battery door.

A CAUTION

Risk of component damage!

If the battery male connector is connected when the key switch is switched on (under load), a jump spark will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.

- Do not connect the battery male connectors with the key switch switched on.
- Make sure that the key switch is switched off before connecting the battery male connector.
- Ensure that the battery male connector (2) and the plug connection (1) are dry, clean and free of foreign objects.
- Insert the battery male connector (2) fully into the plug connection (1) on the truck.

The orange latch (3) must engage.



There is a risk of short circuit if the cables are damaged.

Do not crush the battery cable when closing the battery door.

 Ensure that the battery cable does not come into contact with the battery door.



The appearance of a lithium-ion battery differs from this illustration. The battery male connector also features additional contacts for communication between the battery and the truck control unit. However, the connection procedure is the same.

- Close the battery door.

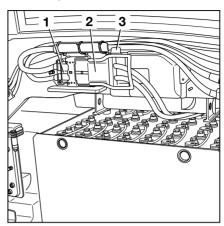


Illustration of a lead-acid battery



Disconnect the battery male connector

- Open the battery door.

A CAUTION

Risk of component damage!

If you disconnect the battery male connector while the key switch is switched on (under load), an arc will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.

- Do not disconnect the battery male connector with the key switch switched on.
- Make sure that the key switch is switched off before disconnecting the battery male connector.
- Press the orange latch (3).

The battery male connector (2) unlocks.

 Pull out the battery male connector (2) from the plug connection (1) on the truck and set it down safely.



A CAUTION

There is a risk of short circuit if the cables are damaged.

Do not crush the battery cable when closing the battery door.

 Ensure that the battery cable does not come into contact with the battery door.

The appearance of a lithium-ion battery differs from this illustration. The battery male connector also features additional contacts for communication between the battery and the truck control unit. However, the disconnection procedure is the same.

- Close the battery door.

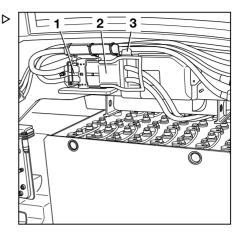


Illustration of a lead-acid battery



Safety regulations for handling the battery

 National statutory provisions for the country of use must be followed when setting up and operating battery charging stations.



A CAUTION

Potential for damage to the battery charger!

Incorrect connection or incorrect operation of the charging station or the battery charger may result in damage to components.

- Follow the operating instructions for the charging station or battery charger and for the battery.
- Observe the following safety regulations when maintaining, charging and changing the battery.

Maintenance personnel

Batteries may only be charged, maintained or replaced by properly trained personnel in accordance with the instructions from the manufacturers of the battery, battery charger and truck.

- The handling instruction for the battery and the operating instructions for the battery charger must be followed.
- Observe the following safety regulations when maintaining, charging and changing the battery.





Risk of crushing/shearing!

The battery is very heavy. There is a risk of serious injury if any parts of the body are caught under the battery.

There is a risk of injury if any parts of the body are wedged between the battery door and the edge of the chassis when the battery door is closed.

- Always wear safety shoes when replacing the battery.
- Only close the battery door if there are no parts of the body between the battery door and the edge of the chassis.

The battery must only be replaced in accordance with the directions in these operating instructions.

 When charging and maintaining the battery, observe the manufacturer's maintenance instructions for the battery and the battery charger.

Fire protection measures



Risk of explosion due to flammable gases!

During charging, the battery releases a mixture of oxygen and hydrogen (oxyhydrogen gas). This gas mixture is explosive and must not be ignited.

There must be no flammable materials or spark-forming operating materials within 2 m of either the truck when it is parked for charging or the battery charger.

- When working with batteries, take the following safety precautions.
- Keep away from open flames and do not smoke.
- Ensure that work areas are adequately ventilated.
- Disconnect the battery male connector before charging and only when the truck and battery charger are switched off.



- The battery door must remain open during charging.
- Expose the surfaces of the battery cells.
- Do not place any metal objects on the battery.
- Fully open any protective structures (e.g. fabric-covered cab).
- Have fire extinguishing equipment ready.

Battery weight and dimensions

A DANGER

Risk of tipping due to change in battery weight!

The battery weight and dimensions affect the stability of the truck. When replacing the battery, the weight ratios must not be changed. The battery weight must remain within the weight range specified on the nameplate.

- Do not remove or change the position of ballast weights.
- Note the battery weight.

Performing battery maintenance

The cell covers of the battery must be kept dry and clean.

Terminals and cable shoes must be clean, lightly coated with battery grease and screwed on tightly.

- Neutralise any spilt battery acid immediately.
- Observe the safety regulations for handling battery acid; see the chapter entitled "Battery acid".



Damage to cables and battery male connectors



A CAUTION

There is a risk of short circuit if the cables are damaged.

Do not crush the battery cable when closing the battery door.

- Check the battery cable for damage.
- When removing and reinstalling the battery, ensure that the battery cables are not damaged.
- Ensure that the battery cable does not come into contact with the battery door.

A CAUTION

Potential for damage to the battery male connector!

If the battery male connector is disconnected or connected while the key switch is switched on or while the battery charger is under load, an arc or a transition spark will be produced at the battery male connector. This can lead to erosion at the contacts and can considerably shorten the service life of the contacts.

- Switch off the key switch or the battery charger before the battery male connector is disconnected or connected.
- Do not disconnect the battery male connector while under load, except in an emergency.

Maintaining the battery

A DANGER

Danger to life and limb!


 Observe the instructions in the chapter entitled "Safety regulations when handling the battery".

WARNING

Battery acid is toxic and corrosive!

 Observe the safety regulations in the chapter entitled "Battery acid".

Handling the lead-acid battery

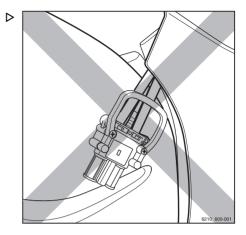



Battery maintenance is carried out in accordance with the battery manufacturer's operating instructions. The operating instructions for the battery charger must also be followed. Only the instructions that came with the battery charger are valid. If any of these instructions are missing, request the relevant instructions from the dealer.

The battery maintenance information is composed of the following sections: "Checking the status, acid level and acid density of the battery", "Checking the battery charge status", "Charging the lead-acid battery" and "Equalising charge to maintain the battery capacity".



Checking the battery condition, acid level and acid density



A WARNING

The electrolyte (dilute sulphuric acid) is poisonous and caustic!

- Observe safety regulations for handling battery acid; see chapter "Battery acid".
- Wear personal protective equipment (rubber gloves, apron and protection goggles).
- Rinse away spilt battery acid immediately with plenty of water!

A CAUTION

Risk of damage!


- Heed the information in the operating instructions for the battery.
- Remove the battery from the truck.
- Inspect battery for cracked housing, raised plate sand acid leaks.
- Have defective batteries repaired by the authorised service centre.
- Open filler cap (1) and check the acid level. \triangleright

For batteries with "caged cell plugs", the liquid must reach the bottom of the cage.

For batteries without "caged cell plugs", the liquid must reach a height of approx. 10 to 15 mm above the lead plates.

- Top up missing fluid with distilled water only.
- Clean the battery cell cover and dry if necessary.
- Remove any oxidation residues on the battery terminals and then apply acid-free grease to the terminals.
- Tighten the battery-terminal clips (2) to a torque of 22–25 Nm (depending on the size of the terminal screws used).
- Check acid density with an acid siphon.

After charging, the acid density must be between 1.28 and 1.30 kg/l.

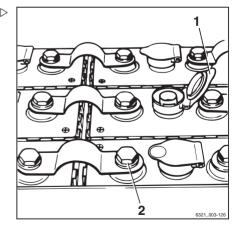



For a discharged battery, the acid density must be **no lower** than 1.14 kg/l.

Checking the battery charge status ▷

A CAUTION

Deep discharges shorten the service life of the battery.

Deep discharge begins when the battery charge display is red (3) (0% of the available battery capacity, i.e. approx. 20% of the nominal capacity).

- Deep discharge must be avoided (see the section entitled "Equalising charge to prevent a deep discharge of the battery").
- Stop working with the truck immediately.
- Charge the battery immediately.
- Do not leave batteries in a discharged or partly discharged state.
- Apply the parking brake.
- Switch on the truck.
- Read the charge status on the display of the display/operating unit.
- Charge a discharged or partly discharged battery.

Meaning of the colours in the display

1 Green:


The battery is sufficiently charged

2 Yellow:

Charge the battery soon.

3 Red:

Stop working. Charge the battery immediately. The battery is at risk of deep discharge.

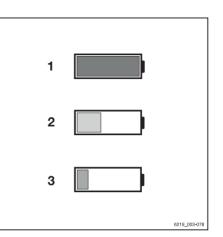



Charging the lead-acid battery



Risk of damage to the battery charger!

Incorrect connection or incorrect operation of the charging station or the battery charger may result in damage to components.

 Follow the operating instructions for the charging station or battery charger and for the battery.

A CAUTION

Potential for damage to the battery male connector!

If the battery male connector is disconnected while the key switch is on (under load), an arc will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.

- Switch off the key switch before disconnecting the battery male connector.
- Do not disconnect the battery male connector while the key switch is switched on, except in an emergency.
- Park the truck securely.
- Ensure that work areas are adequately ventilated.
- Fully open any protective structures (e.g. fabric-covered cab).
- Open the battery door completely.
- Disconnect the battery male connector.
- Do not place any metal objects or tools on the battery.
- Keep away from naked flames. Do not smoke.
- Check the battery cables for damage. If necessary, have the battery cables replaced by the authorised service centre.





A DANGER

Explosive gases are generated during charging.

- Ensure that work areas are adequately ventilated.
- For trucks with a cab (including fabriccovered cabs), ensure adequate ventilation in the cab (variant).

A DANGER

There is a risk of damage, short circuiting and explosions!

- Do not place any metal objects or tools on the battery.
- Keep away from naked flames.
- Do not smoke.

WARNING

Battery acid is toxic and corrosive!

- Observe the safety regulations in the chapter entitled "Battery acid".
- Connect the battery male connector to the plug on the battery charger.
- Start the battery charger.

Observe the information in the operating instructions for the battery and the battery charger.



A DANGER

Risk of explosion!

To ensure adequate ventilation, the battery door must be locked in the charging position using the support bracket during the charging process.



The battery door can be locked in the open position using a support bracket.

 \triangleright

- Pull the support bracket (1) upwards. Remove the support bracket from its support mounting (2) on the battery door.
- Swivel the support bracket (1) outwards in a clockwise direction.
- Clip the support bracket (1) into the support eyelet (3) on the truck.

The battery door will lock into a slightly open position.

 To close the battery door, swing the support bracket (1) back into position and lock it into the support mounting (2) on the battery door.

After charging

A CAUTION

Risk of component damage!


- Switch off the battery charger before you disconnect the charging cable.
- Switch off the battery charger.
- Open the battery door. Lock the battery door in the open position.
- Disconnect the battery male connector from the plug for the battery charger.
- Insert the battery male connector fully into the plug connection on the truck.



A WARNING

Risk of explosion!

• Do not disconnect the plug and socket until the truck and battery charger are switched off.

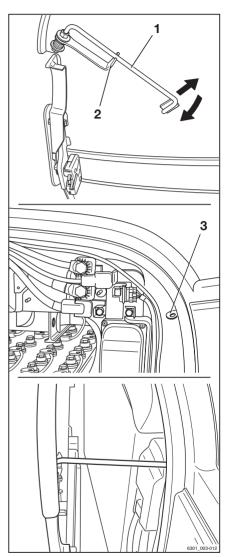





A CAUTION


There is a risk of short circuit if the cables are damaged.

Do not crush the battery cable when closing the battery cover.

- Ensure that the battery cable does not come into contact with the battery cover.
- Close the battery door. When doing so, ensure that no cables are crushed between the chassis and the battery door.

The battery door must be locked in place.

The truck is equipped with a door contact switch for the battery door. If the battery door is not fully closed, the Close battery door message appears on the display of the display-operating unit. The truck will then only move at a reduced speed.

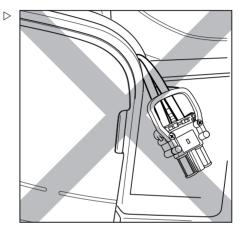

Equalising charging to preserve the battery capacity

Equalising charges ensure that unevenly charged battery cells are evenly charged again. This preserves the service life of the battery and the battery capacity.

An equalising charge should be carried out in accordance with the battery manufacturer's instructions several times a month after the normal charging process.

Depending on the battery charger used, the equalising charge may not begin until 24 hours have elapsed. A period when no shifts are running, such as the weekend, is therefore ideal for performing the equalising charge.



 Observe the information in the operating instructions of the battery charger regarding how to perform an equalising charge.

Starting the equalising charge

- Charge the battery.
- After charging, leave the battery in the charger.

The battery charger remains switched on. Depending on the type of battery charger, the equalising charge begins between 6 and 24 hours after the end of the actual charging process. The equalising charge takes up to 2 hours.

 Please refer to the operating instructions from the manufacturer of the battery charger.

Ending the equalising charge

The equalising charge ends automatically. If the battery is required during this process, you can interrupt the equalising charge by pushing the "stop button" on the battery charger.

 Please refer to the operating instructions from the manufacturer of the battery charger.

A CAUTION

Damage to the connection assembly is possible!

If you disconnect the charging cable while the battery charger is switched on, an arc will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.

- Switch off the battery charger before you disconnect the charging cable.
- Switch off the battery charger.
- Disconnect the battery male connector from the plug for the battery charger.
- Insert the battery male connector fully into the plug connection on the truck.



Handling the lithium-ion battery

Safety regulations for handling the lithium-ion battery

First-aid measures

WARNING

Risk of injury!

Escaping gases can lead to breathing difficulties.

Course of action required if gases or liquids escape

 Immediately ventilate the area or go out into the fresh air; in more serious cases, call a doctor immediately.

Skin irritation can occur in the event of contact with the skin.

Thoroughly wash the skin with soap and water.

Eye irritation can occur in the event of contact with the eyes.

 Immediately rinse eyes thoroughly with water for 15 minutes, then consult a doctor.

Maintenance personnel

The lithium-ion battery is virtually maintenance-free and can be charged by the driver.

- If you have any questions, please contact your authorised service centre.
- The handling instruction for the battery and the operating instructions for the battery charger must be followed.
- Observe the following safety regulations when maintaining, charging and changing the battery.





Risk of crushing/shearing!

The battery is very heavy. There is a risk of serious injury if any parts of the body are caught under the battery.

If parts of the body are wedged between the battery door and the edge of the chassis when the battery door is closed, this could lead to injuries.

- Always wear safety shoes when replacing the battery.
- Only close the battery door if there is no part of the body between the battery door and the edge of the chassis.

The battery must only be replaced in accordance with the directions in these operating instructions.

 When charging and maintaining the battery, observe the manufacturer's maintenance instructions for the battery and battery charger.

Fire protection measures

A DANGER

There is a risk of damage, short circuiting and explosion!

- Do not place any metal objects or tools on the battery.
- Keep away from naked flames and do not smoke.



A DANGER

Increased risk of fire!

Damaged lithium-ion batteries pose an increased fire hazard.

In the event of a fire, large quantities of water are the best option to cool the battery.

- Evacuate the location of the fire as quickly as possible.
- Ventilate the location of the fire well, as the resulting combustion gases are corrosive if inhaled.
- Inform the fire brigade that lithium-ion batteries are affected by the fire.



Handling the lithium-ion battery

 Observe the information provided by the battery manufacturer regarding the procedure in the event of a fire.

Battery weight and dimensions

A DANGER

Δ

Risk of tipping due to change in battery weight!

The battery weight and dimensions affect the stability of the truck. When replacing the battery, the weight ratios must not be changed. The battery weight must remain within the weight range specified on the nameplate.

- Do not remove or change the position of ballast weights.
- Observe the battery weight.


General safety regulations for lithiumion batteries

The following safety regulations generally apply to operating lithium-ion batteries.

- Comply with the specifications stated in the safety data sheets of the battery manufacturer.
- Protect the battery against mechanical damage to prevent internal short circuits.
- If batteries have even the slightest external damage, dispose of them in accordance with national regulations for the country in which they are being used.
- Do not expose batteries directly to continuously high temperatures or heat sources, such as direct sunlight.
- Train employees in how to handle lithiumion batteries correctly.



Lithium-ion batteries "GGS Li-ion 80 V" 24.1 kWh and 60 kWh

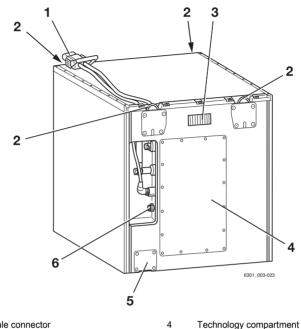

5

6

Safety valve

Diagnostic connector

- 1 Battery male connector
- 2 Lifting eyes
- 3 Display

Risk of accident due to weakened lifting eyes.

If bent lifting eyes are straightened, they lose their rigidity. The lifting eyes are then no longer able to support the weight of the battery. The battery may fall.

- Do not straighten bent lifting eyes.
- Have bent lifting eyes replaced by the authorised service centre.

i NOTE

When switching to lithium-ion batteries, have the truck electronics adapted by the authorised service centre.



Regulations for storing lithium-ion batteries

i] NOTE

Δ

Lithium-ion batteries are classified as dangerous goods according to class 9.

The following recommendations apply:

- Wherever possible, store batteries at ground level so that they cannot be damaged by falling
- Store the batteries in a segregated area suitable for fire protection (container or safety cabinet)
- Store the batteries at a temperature between +15°C and +30°C and air humidity from 0% to 80%

Observe the following regulations for safe storage of the batteries:

- Store batteries fixed onto pallets and secured against overturning.
- Observe the floor load capacity of the storage area; refer to the manufacturer's specifications regarding battery weight
- To protect batteries against moisture, do not store them directly on the floor
- Due to the fire risk, store batteries outside buildings
- Store in a cool, dry and well-ventilated area
- Never subject the battery to temperatures below -35°C and above 80°C.

Long-term storage below -10°C or above 50°C has a negative impact on the service life of the battery.

- After three months, check the charge state of the battery and recharge if necessary
- Cordon off the relevant area of the warehouse
- Only persons who are aware of the risks and safety regulations may access this area
- Protect against direct sunlight
- Protect against precipitation



- Store in a way that protects the batteries against short circuits
- Store batteries at a safe distance from flammable materials
- Do not store batteries together with metallic objects
- Store lithium-ion batteries separately from other types of batteries (no mixed storage)
- Maintain a safety margin of at least 2.5 m from other goods
- To avoid a deep discharge, observe the specifications of the battery manufacturer regarding the maximum permissible storage period
- If you have any questions, contact your authorised service centre.



Checking the battery charge status

The charge state of the lithium-ion battery can be read on the display-operating unit of the truck and on the display of the lithium-ion battery.

Reading the display-operating unit

- Apply the parking brake.
- Switch on the key switch.
- Read the charge state from the display.
- Charge a discharged or partly discharged battery.

Meaning of the colours in the display

1 Green:

The charge state is > 10%. The battery is sufficiently charged

2 Yellow:

The charge state is $\leq 10\%$. Charge the battery soon.

3 Red:

Stop working. Charge the battery immediately. The battery is at risk of deep discharge.

Reading from the battery indicator

The battery indicator is located at the side of the battery tray. Like the display-operating unit, the battery indicator shows the charge state of the lithium-ion battery. Warnings are issued only on this battery indicator.


 If you have any questions, contact your authorised service centre.


Charging state LEDs

When the battery is connected to the truck and the truck is switched on, the charge state LEDs (3) display the charge state in 10% increments. The charge state LEDs can light up in green and red.

 A charge state of 0% to 20% is indicated by a red bar.

If this bar flashes, the charge state is < 2%.

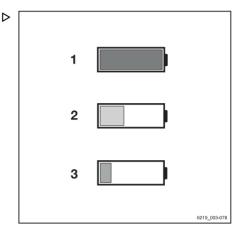

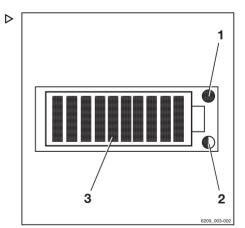

1 Service LED (red)

Temperature LED (yellow/red)

Charge state LEDs (red/green)



2

3

The truck can no longer be moved.

- A charge state of > 20% to 30% is indicated by yellow bars
- A charge state of > 30% to 100% is indicated by green bars

When charging, the charge state LEDs (3) light up green as a chase light.

Service LED

The service LED (1) lights up red if the battery function is significantly restricted or if operation is not possible.

- Contact your authorised service centre.

Temperature LED

The temperature LED (2) indicates an increased temperature. The power of the battery is reduced. The LED remains lit until the temperature drops to within the normal range. The LED goes out as soon as the temperature drops into the normal range.

Colour of LED	Cause	Consequence
Flashing yellow	Slightly increased temperature (> 60°C)	Power reduction
Solid yellow	Increased temperature (> 65°C)	Shut-off
Flashing red	Greatly increased temperature (> 70°C)	Shut-off
Solid red	Greatly increased temperature (> 75°C)	Shut-off

Procedure if a lithium-ion battery has a low charge state

To prevent deep discharge of the lithium-ion battery, performance limitations are imposed once the charge state of the battery is \leq 10%.

 If the charge state drops below 15%, drive to the charging station and charge the battery.



WARNING

No electric brake assistance when the battery is switched off!

The drives are de-energised when the battery is automatically switched off.

The truck will not be held on a slope by the electric brake.

- To brake, actuate the service brake.
- If the battery switches off, tow the truck to the charging station.
- Charge the battery.

Charging the lithium-ion battery

A CAUTION

Risk of component damage!

Incorrect connection or incorrect operation of the charging station or battery charger may result in damage to components!

 Follow the operating instructions for the charging station or battery charger and for the battery.

A CAUTION

Risk of component damage!

Using battery male connectors and battery charger plugs from different manufacturers can result in damage. They are not designed to be used together.

- Use battery male connectors and battery charger connectors from the same manufacturer.
- If the connectors are from different manufacturers, please contact the authorised service centre.

To prevent deep discharge of the lithium-ion battery, performance limitations are imposed once the discharge status of the battery drops to a certain level. The battery must be charged before the charge state drops below 15%.

To read the battery charge status, see the section entitled "Checking the battery charge status".

- Park the truck securely.
- Open the battery door completely.



- Disconnect the battery male connector.
- Keep away from naked flames. Do not smoke.
- Check the battery cables for damage. If necessary, have the battery cables replaced by the authorised service centre.

A DANGER

There is a risk of damage, short circuiting and explosions!

- Do not place any metal objects or tools on the battery.
- Keep away from naked flames.
- Do not smoke.
- Connect the battery male connector to the plug on the battery charger.
- Start the battery charger.

The charging process starts automatically. The display signals the charging process by illuminating the LEDS as a chase light.

The charger indicates when the battery is fully charged. Only disconnect the battery from the charger if no current is flowing.

The battery has no memory effect. Therefore, it can be charged in any charge state without the capacity of the battery being impaired.

At ambient temperatures below 0°C, the charging process will take much longer.

 Observe the information in the operating instructions for the battery and the battery charger.



The battery door can be locked in the open position using a support bracket.

- Pull the support bracket (1) upwards. Remove the support bracket from its support mounting (2) on the battery door.
- Swivel the support bracket (1) outwards in a clockwise direction.
- Clip the support bracket (1) into the support eyelet (3) on the truck.

The battery door will lock into a slightly open position.

 To close the battery door, swing the support bracket (1) back into position. Lock the support bracket into the support mounting (2) on the battery door.

After charging

The battery charger will switch off automatically.

- Open the battery door. Lock the battery door in the open position.
- Disconnect the battery male connector from the plug for the battery charger.
- Insert the battery male connector fully into the plug connection on the truck.




A CAUTION

There is a risk of short circuit if the cables are damaged.

Do not crush the charging cable when closing the battery cover.


 Make sure that the charging cable does not come into contact with the battery cover.

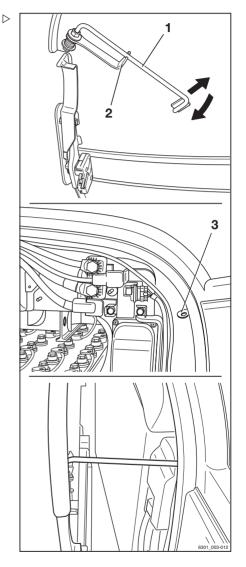



 Close the battery door. When doing so, en- ▷ sure that no cables are crushed between the chassis and the battery door.

The truck is equipped with a door contact switch for the battery door. If the battery door is not fully closed, the Close battery door message appears on the display of the display-operating unit. The truck will then only move at a reduced speed.

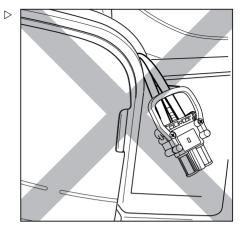



General information on replacing the battery

A CAUTION

Risk of components being damaged by the lifting accessory and battery rolling away!

The lifting accessory and battery may roll away in an uncontrolled manner if the battery is not removed on a level, smooth floor with sufficient load-bearing capacity.

- Follow the operating instructions for the lifting accessories used.
- Always remove the battery on a level, smooth floor with sufficient load capacity.

Batteries can be removed with a truck and with a battery change frame.

The load capacity of the lifting accessory used must at least match the battery weight (see the battery nameplate).

Wire cross-section of the battery cable on the "High Performance" variant

If the truck is fitted with the "High Performance" variant, the components have a higher current draw.

A CAUTION

Risk of overheating of the battery cable.

Due to the higher current draw, the wire cross-section of the battery cable must be at least 70 mm².

- Ensure that all batteries in use have a battery cable with a wire cross-section of at least 70 mm².

NOTE

If different batteries are used in alternating battery operation, always ensure that all batteries used have a battery cable with a wire cross-section of at least 70 mm².



Changing to a different battery type

The truck can be converted to a different battery type and capacity.

The new battery capacity and new battery type must be set in the display-operating unit.

- If this is not done, the actual battery discharge status cannot be determined. The battery charge level is not displayed correctly.
- In the worst case scenario, deep discharge can damage the battery.

Using his/her access authorisation, the fleet manager can set the new battery capacity and the new battery type in the display-operating unit.

When changing to TENSOR[®] batteries, the authorised service centre must limit the maximum speed of the truck to 17 km/h for technical reasons.

 Use only lithium-ion batteries that have been approved by STILL for use with this truck.

Setting the new battery capacity and the new battery type

- Stop the truck.
- Actuate the parking brake.
- Press the button I.
- Press the "Settings" softkey 💣.

The first menu level appears.

 Activate the "Access authorisation for the fleet manager".

The "Settings menu" opens on the display.

- Press the Truck settings softkey 🎉.
- Press the Battery softkey.
- Press the Battery type softkey.
- Press the back button 4.
- Press the Capacity softkey.



 Press the corresponding softkey for the battery capacity according to the nameplate of the battery.

The main display button takes you to the main display.

Converting to lithium-ion batteries

If the truck is fitted with a lead-acid battery at the factory, the truck can be converted to a lithium-ion battery. The conversion must be performed by the authorised service centre.

The authorised service centre adapts the truck electrics so that they will work with the lithiumion batteries.

This includes:

- · The cable harness
- The battery male connector and the plug connection
- · Adjusting the display-operating unit
- Only use lithium-ion batteries that have been approved by STILL for use with this truck.



The use of lead-acid batteries is only possible after the conversion to lithium-ion batteries if the truck is converted back again.




Opening/closing the battery door

Opening the battery door

 Grasp the door handle (1) on the battery door. Open the battery door by pulling it backwards.

The hinge of the battery door holds the battery door in the open position.

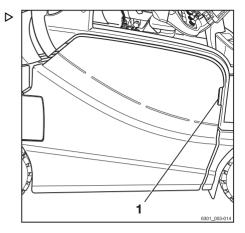



Locking the battery door into a slightly open position

The battery door can be locked in the open position using a support bracket.

- Pull the support bracket (1) upwards. Remove the support bracket from its support mounting (2) on the battery door.
- Swivel the support bracket (1) outwards in a clockwise direction.
- Clip the support bracket (1) into the support eyelet (3) on the truck.
- To close the battery door, swing the support bracket (1) back into position. Lock the support bracket into the support mounting (2) on the battery door.

Closing the battery door



A WARNING

When closing the battery door, limbs could become trapped. There is a risk of crushing!

When closing the battery door, nothing should come between the battery door and the edge of the chassis.

- Carefully close the battery door.
- Only close the battery door if there are no parts of the body in the way.




A WARNING

When closing the battery door, the battery cable could become trapped. There is risk of short circuit due to the battery cable being crushed or sheared off!

When closing the battery door, nothing should come between the battery door and the edge of the chassis.

- Carefully close the battery door.
- Only close the battery door if the battery cable is not in the way.

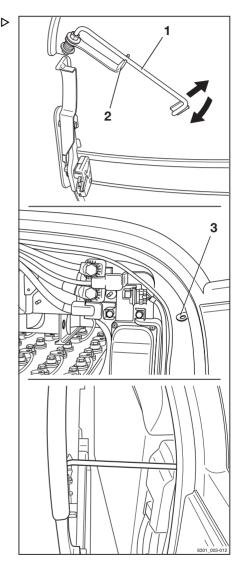



WARNING

Risk of accident due to the battery door opening!

An unlocked battery door may open if the truck decelerates sharply. If the battery door opens while driving, there is risk of damage from a collision.

- Ensure that the battery door is securely shut.
- Drive the truck only when the battery door is locked.

A DANGER

Risk of fatal injury from the battery sliding out!

The battery may fall out if the battery door is not locked and the truck tips over. The battery could fall on the driver!

- Ensure that the battery door is securely shut.
- Drive the truck only when the battery door is locked.

The apertures in the door are necessary for forced ventilation and must not be blocked.

 If the battery door is fully open, take hold of the battery door by its handle and close it in a forwards direction.

Doing so will release the latch in the hinge.

 Close the battery door by hand until it engages in the lock.

The battery door must be locked in place.

The truck is equipped with a door contact switch for the battery door. If the battery door is not fully closed, the Close battery door message appears on the display of the display-operating unit. The truck will then only move at a reduced speed.



Special notes for installing the lithium-ion battery

With the exception of the following special notes, lithium-ion batteries are replaced in the same way as lead-acid batteries.

 Push down the lifting eyes before inserting the battery into the battery compartment. Make sure that the lifting eyes **do not** protrude.

The lifting eyes may bend in the event of a collision with the truck chassis.

- Install the lithium-ion battery with the display facing the outside of the truck so that it can be read when the battery door or battery cover is open.
- Lay the battery cable on the battery. Make sure that the cable does not come into contact with the truck chassis during installation.

Replacing the battery using a truck

Preparing

A WARNING


Risk of accident!


The load capacity of the truck in use must at least match the battery weight (see the battery nameplate).

- Observe the nameplates of the battery and of the change frame.
- Before picking up the battery, the fork arms must be adjusted to match the opening in the chassis (A). Push the fork arms together, selecting the maximum possible distance.

The fork arms must not be moved under the battery any further than the length of the chassis opening (B = max. 850 mm).

It is useful to mark this measurement (B) (measured from the fork tips) on the fork arms.

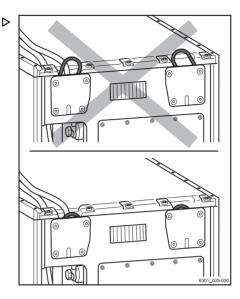

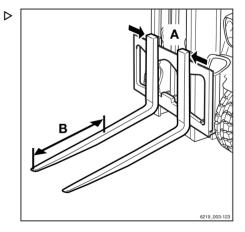



Removing the battery

- Park the truck securely and switch it off.
- Open the battery door.

A CAUTION

Risk of component damage!

If you disconnect the battery male connector while the key switch is switched on (under load), an arc will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.

- Switch off the key switch before disconnecting the battery male connector.
- Disconnect the battery male connector.



WARNING


Risk of crushing/shearing!

No one must stand directly next to the battery or between the battery and the truck when removing and inserting the battery.



Risk of damage!

 Position the battery cable on the battery in such a way that it cannot be crushed, either when removing or inserting the battery or when closing the battery door.

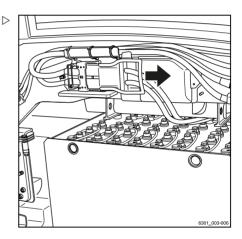



- Open the battery locks (1).

If the battery locks cannot be opened by hand, the coupling pin (2) from the counterweight can be used as a lever extension.

- Carefully drive the truck under the battery.
- Carefully lift the battery until it maintains a sufficient distance from the seating and from the chassis above.
- Position the fork arms horizontally.

A CAUTION

Risk of damage!

- Lower the battery immediately if it knocks against the chassis above.
- Slowly remove the battery from the battery compartment.

Transporting and setting down the battery

WARNING

Risk of crushing or shearing!

The battery must be transported very carefully, i.e. at low speed, using slow steering movement and careful braking.

- Do not use the methods described here to transport the battery over long distances.
- Transport the battery to the intended storage space.


A CAUTION

Risk of damage!

The battery must be stored on a suitable beam support or on suitable racking.

The battery must not be stored on a wooden beam or any similar object.

- Set down the battery.

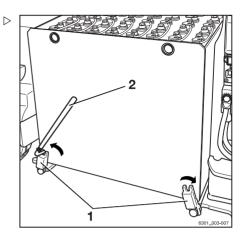



4

Installing the battery

Pick up the battery and transport it to the truck.

A CAUTION

Risk of component damage!

If the lifting eyes protrude from the lithium-ion battery (variant), they will strike the truck chassis and bend.

 Before inserting the lithium-ion battery (variant), push the lifting eyes down in the tray and make sure that they do **not** protrude.

Do **not** straighten any bent lifting eyes; have them replaced by the authorised service centre.

 Carefully insert the battery into the battery compartment.

When doing so, ensure that

- Before inserting, the battery cable is positioned on the battery in such a way that it will not become trapped when the battery is inserted
- The load-carrying equipment is at a right
 angle to the truck
- The gaps are maintained for the entire time that the battery is being inserted, and to ensure that the battery is inserted to a sufficient depth
- the display on the lithium-ion battery (variant) points towards the battery door.




Risk of crushing or shearing!

While inserting the battery, avoid putting your hands between the battery and the chassis.

Risk of damage!

 Position the battery cables on the battery in such a way that they cannot be crushed, either when removing or inserting the battery or when closing the battery door.



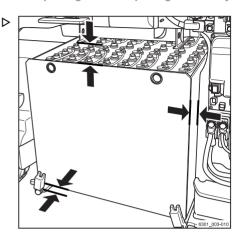

Once the battery is correctly positioned in the battery compartment:

- Carefully lower the battery.
- Carefully move the lifting accessories out from under the battery.


A CAUTION

Risk of component damage!

If the battery male connector is connected when the key switch is switched on (under load), a jump spark will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.


- Do not connect the battery male connectors with the key switch switched on.
- Make sure that the key switch is switched off before connecting the battery male connector.
- Ensure that the battery male connector and the plug connection are dry, clean and free of foreign objects.
- Close the battery locks.

The battery door will close only when the battery is locked.

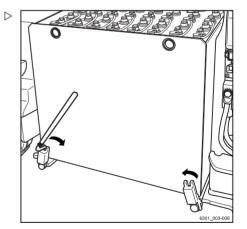



- Insert the battery male connector fully into the plug connection on the truck.
- Close the battery door.

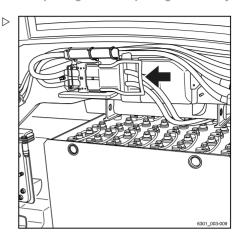

Replacing the battery using a change frame (variant)

A WARNING

Risk of accident!

The load capacity of the truck or lift truck in use must at least match the weight of the battery and the weight of the change frame.

 Observe the nameplates of the battery and of the change frame.

A CAUTION

Risk of damage!

Place the battery change frame along with the battery only on a firm surface with sufficient load-bearing capacity.

Do not place the battery change frame with the battery on a soft surface or in a rack.

The battery change frame (variant) features an advantageous design that allows a truck or pallet stacker to pick up the battery quickly. The battery remains on the change frame for charging and storage. The change frame fits between the battery holding fixtures in the battery compartment of the truck. Once the battery has been set down on its holding fixtures, the change frame is moved back out of the truck.



Removing the battery

- Park the truck securely.
- Open the battery door.

A CAUTION

Risk of component damage!

If you disconnect the battery male connector while the key switch is switched on (under load), an arc will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.

- Switch off the key switch before disconnecting the battery male connector.
- Disconnect the battery male connector.



WARNING

Risk of crushing/shearing!


No one must stand directly next to the battery or between the battery and the truck when removing and inserting the battery.



A CAUTION

Risk of damage!

 Position the battery cable on the battery in such a way that it cannot be crushed, either when removing or inserting the battery or when closing the battery door.

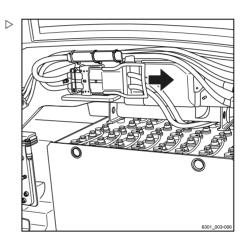



- Open the battery locks (1).

If the battery locks cannot be opened by hand, the coupling pin (2) from the counterweight can be used as a lever extension.

 Ensure that the maximum load capacity of the change frame is not exceeded.

The maximum load capacity of the change frame is specified on the identification plate.


- Before picking up the change frame, adjust the fork arm distance.
- Position the change frame (3) under the battery (2) so that the centre of the battery (1) is in line with the recess (4) in the change frame.


This alignment ensures that the battery is positioned centrally on the change frame. The battery must be positioned centrally on the change frame in order for the change frame to be moved into the truck and to reduce the risk of the battery tipping over when being moved. If multiple batteries are used, it is advisable to permanently mark the centre of the battery (1) (e.g. using a strip of adhesive tape).

A CAUTION

Risk of component damage!

- Move the change frame under the battery only up to the edge of the stop.
- Carefully move the change frame under the battery.
- Carefully lift the battery up and out of the truck. Pay attention to the distance to the chassis.
- Slowly remove the battery from the battery compartment.

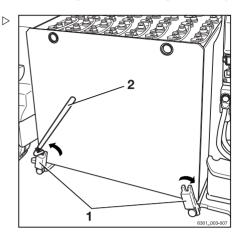

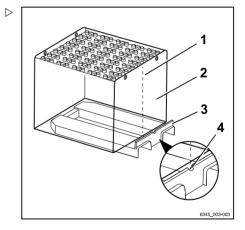



Transporting and setting down the battery


WARNING

Risk of crushing or shearing!

The battery must be transported very carefully, i.e. at a low speed, using slow steering movements and careful braking.

 Do not use the methods described here to transport the battery over long distances.


The battery (1) can remain on the change frame (2). The change frame can then be used to set down the battery.

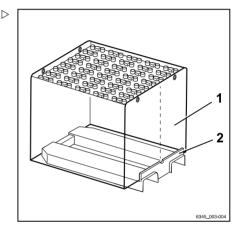

- If a substructure (3) is used to set down the battery (1), ensure that the change frame (2) does not protrude beyond the battery.
- Set down the battery on a stable base so that it is secure and position the battery against the stops on the base.

Installing the battery

- Remove the change frame.
- Pick up a charged battery using the change frame and transport the battery to the truck.
- Position the battery cable on the battery so that it will not become trapped when the battery is inserted.
- Position the battery at a right angle to the truck.

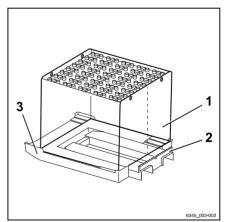



A CAUTION

Risk of component damage!

If the lifting eyes protrude from the lithium-ion battery (variant), they will strike the truck chassis and bend.

 Before inserting the lithium-ion battery (variant), push the lifting eyes down in the tray and make sure that they do **not** protrude.

Do **not** straighten any bent lifting eyes; have them replaced by the authorised service centre.

- Carefully insert the battery into the battery compartment.
- Ensure that the display on the lithium-ion battery (variant) points towards the battery door.
- Carefully place the battery onto the battery holding fixtures.
- Carefully remove the change frame from under the battery.
- Close the battery locks.


The battery door will close only when the battery is locked.

A CAUTION

Risk of component damage!


If the battery male connector is connected when the key switch is switched on (under load), a jump spark will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.

- Do not connect the battery male connectors with the key switch switched on.
- Make sure that the key switch is switched off before connecting the battery male connector.
- Ensure that the battery male connector and the plug connection are dry, clean and free of foreign objects.

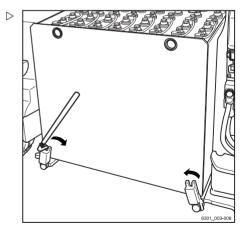



- Insert the battery male connector fully into the plug connection on the truck.
- Close the battery door.

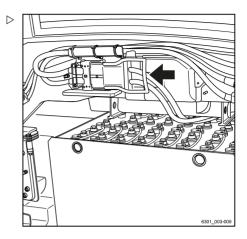

Transporting the lead-acid battery by crane



A DANGER

There is risk of fatal injury from being struck by falling loads!


 Never walk or stand underneath suspended loads.

The tray for the lead-acid battery (1) is equipped with four lifting eyes. The battery may only be transported by crane using a lifting gear and bridge piece (2) that are suitable in terms in size and load capacity.

- To avoid short circuits, cover batteries with open terminals or connectors with a rubber mat.
- Observe the operating instructions for the lifting gear.
- Attach the battery (1) to suitable lifting gear (2).
- Lift the battery carefully and ensure that it hangs straight on the lifting gear.

The lifting gear must be vertical when lifting, so that no lateral pressure is applied to the tray.

- Set the battery down carefully.

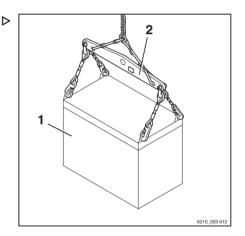



- Remove the lifting gear after the battery has been set down.
- Do not place slack lifting gear on the battery cells or allow it to fall on the battery cells.

Transporting the lithium-ion battery by crane



DANGER

There is risk of fatal injury from being struck by falling loads!

- Never walk or stand underneath suspended loads.
- **A** WARNING

Risk of accident due to weakened lifting eyes.

If bent lifting eyes are straightened, they lose their rigidity. The lifting eyes are then no longer able to support the weight of the battery. The battery may fall.

- Do not straighten bent lifting eyes.
- Have bent lifting eyes replaced by the authorised service centre.

The lithium-ion battery (1) is equipped with four extendable lifting eyes. The battery may only be transported by crane using a lifting gear and bridge piece (2) that are suitable in terms in size and load capacity.


 Pull out the two lifting eyes (1) on each side ▷ and tilt them towards each other.


The lifting eyes are locked in this position.

- Observe the operating instructions for the lifting gear.
- Attach the lifting gear to the four lifting eyes.
- Lift the battery carefully and ensure that it hangs straight on the lifting gear.

The lifting gear must be vertical when lifting, so that no lateral pressure is applied to the tray.

- Set the battery down carefully.
- Remove the lifting gear after the battery has been set down. Lift up and release the lifting eyes to lower them.

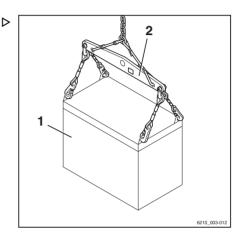

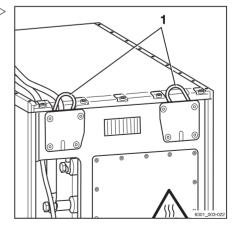



Cleaning the truck

Cleaning the truck



A WARNING

Risk of injury from falling off the truck!

When climbing onto the truck, there is a risk of getting stuck or slipping and falling. Use suitable equipment to reach higher points on the truck.

- Use only the steps provided to climb onto the truck.
- Use equipment such as stepladders or platforms to reach inaccessible areas.



WARNING

Risk of fire due to flammable cleaning materials!

Flammable cleaning materials can be ignited by hot components.

 Do not use any flammable cleaning materials.



A CAUTION

Risk of fire due to flammable materials!

Deposits and solids can be ignited by hot components, e.g. drive units.

Remove deposits and solids.

A CAUTION

Risk of damage to the battery male connector when disconnecting!

If the battery male connector is disconnected while the key switch is switched on under load, an arc will be produced. The arc can damage the contacts and considerably shorten the service life of the contacts.

- Switch off the key switch.
- Only disconnect the battery male connector while the key switch is switched off.

A CAUTION

If water penetrates the electrical system, there is a risk of short circuit!

- Adhere strictly to the following steps.



A CAUTION

Excessive water pressure or water and steam that are too hot can damage truck components.

- Adhere strictly to the following steps.

A CAUTION

Abrasive cleaning materials can damage the surfaces of components!

Using abrasive cleaning materials that are unsuitable for plastics can cause plastic parts to dissolve or become brittle. The screen on the display-operating unit could become cloudy.

- Adhere strictly to the following steps.
- Park the truck safely.
- Switch off the key switch.
- Disconnect the battery male connector.
- Do not spray electric motors and other electrical components or their covers directly with water.
- Use only high-pressure cleaners with a maximum output power of up to 50 bar and 85°C.
- If a high-pressure cleaner is used, maintain a distance of at least 20 cm between the nozzle and the object being cleaned.
- Do not aim the cleaning jet directly at adhesive labels or decal information.
- Remove all deposits and accumulations of foreign materials in the vicinity of hot components.
- Use only non-flammable fluids for cleaning.
- Note the manufacturer's guidelines for working with cleaning materials.
- Clean plastics only with cleaning materials intended for plastics.
- Note the manufacturer's guidelines for working with cleaning materials.
- Clean the truck exterior using water-soluble cleaning materials and water. Cleaning with a water jet, a sponge or a cloth is recommended.



- Clean all accessible areas.
- Before lubrication, clean the oil filling openings and the area around the oil filling openings, as well as the lubricating nipples.

Cleaning the electrical system

WARNING

Danger of electric shocks due to residual capacity!

 Never reach into the electrical system with your bare hands.



Cleaning electrical system parts with water can damage the electrical system.

Cleaning electrical system parts with water is forbidden!

- Do not remove covers etc.
- Only use dry cleaning materials according to the specifications in the section "Cleaning the truck".

The components of the electrical system are fitted underneath the cover sheet of the counterweight etc.

 Clean the electrical system parts with a metal-free brush and blow the dust off with low-pressure compressed air.

Cleaning load chains


WARNING

Risk of accident!

Load chains are safety elements.

The use of cold/chemical cleaners or fluids that are corrosive or contain acid or chlorine can damage the chains and is forbidden!

- Observe the manufacturer's guidelines for working with cleaning materials.
- Place a collection vessel under the lift mast.
- Clean with paraffin derivatives, such as benzine.

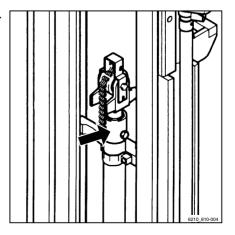



Þ

- When using a steam jet, do not use additional cleaning agents.
- Remove any water in the chain links using compressed air immediately after cleaning. Move the chain several times during this procedure.
- Immediately after drying the chain, spray it with chain spray. Move the chain several times during this procedure.

For chain spray specifications, see the "Maintenance data table" chapter.



ENVIRONMENT NOTE

Dispose of any fluid that has been spilled or collected in the collection vessel in an environmentally friendly manner. Follow the statutory regulations.


Cleaning the windows

Any glass, for example cab windows (variant), must always be kept clean and free of ice. This is the only means of guaranteeing good visibility.

A CAUTION

Do not damage the rear window heating (inside).

- Take great care when cleaning the rear window (1) and do not use any objects with sharp edges.
- Clean the windows with a soft cloth and commercial window cleaner.

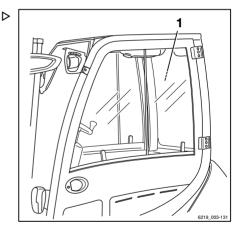





Cleaning the truck

After cleaning

A CAUTION


Risk of short circuit!

Ingress of moisture or dirt into the battery male connector and plug connection can lead to an electrical short circuit.

- Use compressed air to dry the battery male connector and the plug connection before connecting them.
- Use compressed air to remove any foreign objects that may be lodged in the battery male connector and the plug connection.
- Carefully dry the truck, e.g. using compressed air.
- Lubricate the joints and actuators.
- Lubricate the truck according to the "lubrication plan".

 \mathbf{i} NOTE

The more often the truck is cleaned, the more frequently the truck must be lubricated.

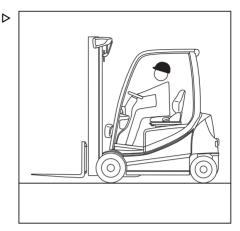



Transporting the truck

Transport

A CAUTION

Risk of material damage from overloading!

If the truck is driven onto a means of transport, the load capacity of the means of transport, ramps and loading bridges must be greater than the total actual weight of the truck. Components can be permanently deformed or damaged due to overloading.


- Determine the total actual weight of the truck.
- Only load the truck if the load capacity of the means of transport, ramps and loading bridges is greater than the total actual weight of the truck.

Determining the total actual weight

- Park the truck safely.
- Determine the unit weights by reading the truck nameplate and, if necessary, the attachment nameplate (variant).
- Add together the determined unit weights to obtain the total actual weight of the truck:

Net weight (1)

- + Maximum permissible battery weight (2)
- + Ballast weight (variant) (3)
- + Net weight of attachment (variant)
- + 100 kg allowance for driver
- = Total actual weight

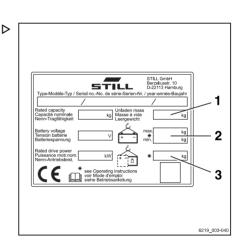



A DANGER

Risk of accident from the truck crashing!

Steering movements can cause the rear of the truck to veer off the loading bridge towards the edge. This may cause the truck to crash.

- Before driving across a loading bridge, ensure that the loading bridge is properly attached and secured.
- Ensure that the transport vehicle onto which the truck is to be driven has been sufficiently secured to prevent it from shifting.
- Maintain a safe distance from edges, loading bridges, ramps, working platforms etc.
- Drive slowly and carefully onto the transport vehicle.

Wedging the wheels

- Park the truck securely.
- Secure the truck against rolling away by placing a wedge (1) in front of each front wheel and behind each back wheel.


A CAUTION

Potential for damage to the battery male connector!

If the battery male connector is disconnected while the key switch is on (under load), an arc will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.

- Switch off the key switch before disconnecting the battery male connector.
- Do not disconnect the battery male connector while the key switch is switched on, except in an emergency.
- Ensure that the key switch is switched off.
- Disconnect the battery male connector.

If the parking brake cannot be applied by pressing the push button, refer to the section entitled "Emergency actuation of the parking brake" in the chapter "Procedure in emergencies".

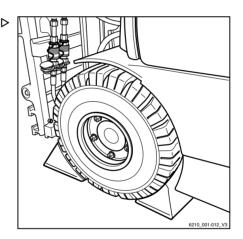



Lashing down

A DANGER

The load may slip if the harnesses slip!

The truck must be lashed securely so that it cannot move during transportation.

- Use only harnesses that are adequately sized in relation to the weight of the truck.
- Ensure that the harnesses are tightened securely and that the pads cannot slip off.

A CAUTION


Abrasive harnesses can rub against the surface of the truck and cause damage.

 Position slip-resistant pads (e.g. rubber mats or foam) underneath the lifting points.

Lashing at the front

There are two ways to connect the harness to the front of the truck.


- A Looping around the fork carriage If the fork carriage is attached, the harness must be attached to the truck here.
- To do this, loop the harness around the fork carriage as shown.
- Lash the truck at an angle towards the rear.
- B Looping around the mudguard If no fork carriage is fitted, the harness can be attached to the truck at the mudguard.
- To do this, loop the harness around the mudguard as shown.
- Lash the truck at an angle towards the rear.

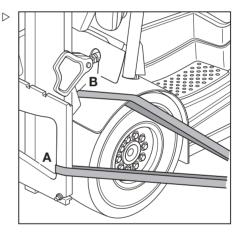



Lashing at the rear

- Position the harness for the coupling pin around the coupling pin as shown.
- Lash the truck at an angle towards the front.

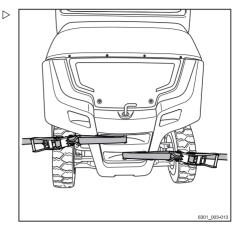

Crane loading

Crane loading is only intended for transporting the complete truck, including the lift mast, for its initial commissioning. This may be performed only by the authorised service centre with the harnesses expressly provided and approved for this purpose.

- Do not load the truck by crane!



Decommissioning

Decommissioning and storing the truck

A CAUTION

Damage to components due to incorrect storage!

Improper storage or decommissioning for a period of more than two months can result in corrosion damage to the truck. If the truck is parked in an ambient temperature of below -10°C for an extended period, the batteries will cool down. The electrolyte may freeze and damage the batteries.

- Store the truck in a dry, clean, frost-free and wellventilated environment.
- Implement the following measures before decommissioning.

Measures to be implemented before decommissioning

- Clean the truck thoroughly; see the chapter entitled "Cleaning the truck".
- Lift the fork carriage to the stop several times.
- Tilt the lift mast forwards and backwards several times and, if fitted, move the attachment repeatedly.
- To relieve the strain on the load chains, lower the fork onto a suitable supporting surface, e.g. a pallet.
- Check the hydraulic oil level.
- Apply a thin layer of oil or grease to all uncoated moving parts.
- Lubricate the truck according to the "lubrication plan".
- Lubricate the joints and actuators.



Decommissioning

A CAUTION

Potential for damage to the battery male connector!

If the battery male connector is disconnected while the truck is switched on (under load), an electric arc will be produced. This can lead to erosion of the contacts, which considerably shortens the service life of the contacts.

- Switch off the truck before the battery male connector is disconnected.
- Do not disconnect the battery male connector while the truck is switched on, except in an emergency.
- Disconnect the battery male connector.
- Check the battery condition, acid level and acid density.
- Service the battery.

Only store batteries that are fully charged.

 Spray all exposed electrical contacts with a suitable contact spray.

A CAUTION

Tyre deformation as a result of continuous loading on one side!

Have the truck raised and jacked up by the authorised service centre so that all wheels are off the ground. This prevents permanent deformation of the tyres.

 Only have the truck raised and jacked up by the authorised service centre.

A CAUTION

Risk of corrosion damage due to condensation on the truck!

Many plastic films and synthetic materials are watertight. Condensation water on the truck cannot escape through these covers.

- Do not use plastic film as this facilitates the formation of condensation water.
- Cover with vapour-permeable material, e.g. cotton.
- Cover the truck to protect it from dust.
- If the truck needs to be shut down for even longer periods, contact the authorised



service centre to find out about additional courses of action.

Use after storage or decommissioning

If the truck has been decommissioned for longer than six months it must be checked carefully before being used again. As with the annual safety inspection, this inspection must also include all safety-related aspects of the truck.

- Clean the truck thoroughly; see the chapter entitled "Cleaning the truck".
- Lubricate the joints and actuators.
- Check the battery condition, acid level and acid density.
- Check the hydraulic oil for condensation water. Change the hydraulic oil if necessary.
- Arrange for the authorised service centre to perform the same inspections and tasks that were carried out before initial commissioning.
- The explosion protection inspection must be performed by the authorised service centre.
- Perform the "visual inspections and functional checks".

The following points in particular must be checked:

- Drive
- Controller
- Steering
- · Brakes (service brake, parking brake)
- Lifting system (lifting accessories, load chains, mounting)

For further information, see the workshop manual for the truck or contact the authorised service centre.





5

Maintenance

Safety regulations for maintenance

General information

To prevent accidents during maintenance and repair work, all necessary safety measures must be taken, e.g.:

- Apply the parking brake.
- Turn off the key switch and remove the key.
- Disconnect the battery male connector.
- Ensure that the truck cannot move unintentionally or start up inadvertently.
- If required, have the truck jacked up by the authorised service centre.
- Have the raised fork carriage or the extended lift mast secured against accidental lowering by the authorised service centre.
- Insert an appropriately sized wooden beam as an abutment between the lift mast and the cab, and secure the lift mast to prevent it tilting backwards unintentionally.
- Observe the maximum lift height of the lift mast, and compare the dimensions from the technical data with the dimensions of the hall into which the truck is to be driven. These steps are taken to prevent a collision with the ceiling of the hall and to avoid any damage caused as a result.

Working on the hydraulic equipment

The hydraulic system must be depressurised prior to all work on the system.

Working on the electrical equipment

Work may only be performed on the electrical equipment of the truck when it is in a voltagefree state. Function checks, inspections and adjustments on energised parts must only be performed by trained and authorised persons, taking the necessary precautions into account. Rings, metal bracelets etc. must be removed before working on electric components.



To prevent damage to electronic systems with electronic components, such as an electronic driving regulator or lift control, these components must be removed from the truck prior to the start of electric welding.

Work on the electrical system (e.g. connecting a radio, additional headlights etc.) is only permitted with approval from the authorised service centre.

Safety devices

After maintenance and repair work, all safety devices must be reinstalled and tested for operational reliability.

Set values

The device-dependent set values must be observed when making repairs and when changing hydraulic and electrical components. These are listed in the appropriate sections.

Lifting and jacking up

A DANGER

There is a risk to life if the truck tips over!

If not raised and jacked up properly, the truck may tip over and fall off. Only the hoists specified in the workshop manual for this truck are allowed and are tested for the necessary safety and load capacity.

- Only have the truck raised and jacked up by the authorised service centre.
- Only jack the truck up at the points specified in the workshop manual.

The truck must be raised and jacked up for various types of maintenance work. The authorised service centre must be informed that this is to take place. Safe handling of the truck and the corresponding hoists is described in the truck's workshop manual.



Working at the front of the truck

A DANGER

Risk of accident due to an unsecured lift mast.

If the lift mast or fork carriage is raised, no work may be performed on the lift mast or at the front of the truck unless the appropriate safety measures are put in place.

- When securing, only use chains with sufficient load-bearing capacity.
- Contact the authorised service centre regarding this matter.

A CAUTION

Possibility of damage to the ceiling!

- Note the maximum lift height of the lift mast.

Securing the lift mast against tilting backwards

A DANGER

Risk of accident!

This work must only be performed by an authorised service technician.

 To secure the lift mast against tilting back, contact the authorised service centre.

Removing the lift mast

A DANGER

Risk of accident!

This work must only be performed by an authorised service technician.

 Commission the authorised service centre to remove the lift mast.

Securing the lift mast against falling off

A DANGER

Risk of accident!

This work must only be performed by an authorised service technician.

 To secure the lift mast against falling, contact the authorised service centre.



Personnel qualifications

Only qualified and authorised personnel are allowed to perform maintenance work. Regular safety checks and checks after unusual incidents must be performed by a competent person. The competent person must conduct their evaluation and assessment from a safety standpoint, unaffected by operational and economic conditions. The competent person must have sufficient knowledge and experience to be able to assess the condition of a truck and the effectiveness of the protective devices in accordance with technical conventions and the principles for testing trucks.

Maintenance personnel for batteries

Batteries may only be charged, serviced, and replaced by personnel who have received appropriate training in accordance with the instructions from the manufacturers of the battery, battery charger and truck.

 Follow the handling instructions for the battery and the operating instructions for the battery charger.

Maintenance work without special qualifications

Simple maintenance work, such as checking the hydraulic oil level, may be carried out by untrained personnel. A qualification such as those held by a competent person is not required to carry out this work. The required tasks are described in the chapter entitled "Remaining ready for operation".

Information for carrying out maintenance

This section contains all the information required to determine when the truck requires maintenance. Carry out maintenance work within the time limits according to the hour meter and using the maintenance check lists



below. This ensures that the truck remains ready for operation and provides optimal performance and service life. It is also a precondition for any warranty claims.

Maintenance timeframe

If maintenance is required, the symbol \checkmark appears on the display.

- Arrange for the authorised service centre to perform the maintenance work on the truck.
- The maintenance check lists indicate the maintenance work that is due.

The intervals are defined for standard use. Shorter maintenance intervals can be defined in consultation with the operating company, depending on the application conditions of the truck.

The following factors may necessitate shorter maintenance intervals:

- Dirty, poor-quality roadways
- · Dusty or salty air
- · High levels of air humidity
- Extremely high or low ambient temperatures and extreme changes in temperature
- Multi-shift operation with a high duty cycle
- Specific national regulations for the truck or individual components

Service menu

The date when the truck requires maintenance is stored in the Service menu.



Access to the settings menu is only available if the truck is at a standstill and the parking brake is applied. If the parking brake is released prematurely, the settings menu will close. Access is only granted when the password is entered by the fleet manager.

- Stop the truck.
- Actuate the parking brake.
- Press the button I.
- Press the "Settings" softkey &.



The first menu level appears.

 Activate the "Access authorisation for the fleet manager".

The display changes to the "Settings menu".

- Press the Service softkey 🔧.

The "Service menu" opens on the display.

- Press the Maintenance interval softkey.

This menu shows the operating hours remaining before the next scheduled maintenance interval.



Maintenance - 1000 hours/annually

At operating hours										Carried	
1000		2000		4000		5000		7000		out	
8000		10000		11000		13000		14000		 Image: A start of the start of	×
Chassis, bod	ywor	k and fitti	ngs								
Check the ch	assis	for crack	s.								
Check the ov age.	erhea	ad guard,	plus t	he cab and	glass	panes whe	re rele	evant, for da	am-		
Variant: Check that the cab door sensor is working correctly and check for damage.								age.			
Check the co	ntrols	s, switche	s and	joints for da	amage	e, and apply	greas	se and oil.			
Check that th	e driv	ver's seat	is woi	king correc	tly an	d check for	dama	ge.			
Check that th and clean.	e driv	ver restrai	nt sys	tem is work	ing co	prrectly and	check	for damag	e,		
Check the signal horn.											
Variant: Check the dual-pedal variant for damage and that it is working correctly, and lubricate.							у,				
Battery compartment											
Check that the battery door and the sensor are working correctly and check for dam- age.							dam-				
Check the ba	ttery	lock for da	amag	e.							
Variant: Cheo ness. Check							chec	k for leak tiç	ght-		
Tyres and wh	neels	i									
Check tyres f	or we	ear and ch	eck th	ne air press	ure if	necessary.					
Check the wh	neels	for damag	ge and	d check the	tighte	ning torque	s.				
Drive axle											
Check the mo	ountir	ng, check	for lea	aks and clea	an the	cooling fine	S.				
Check that th tions are mou				ween the p	ower	modules an	d the	motor conn	ec-		
Check the oil	level	in the dri	ve wh	eel unit and	the r	nulti-disc br	ake.				
Change the g	earb	ox oil (ond	ce afte	er the first 1	000 h	ours).					
Steering systems											
Check the steering system for leaks and check that it is working correctly.											
Check that th damage.	e ste	ering whe	el is s	ecurely atta	ached	and check	the ro	tary handle	for		



At operating he	1			r	Carri	ed
1000	2000	4000	5000	7000	out	
8000	10000	11000	13000	14000	✓	×
Check the mou ness.	inting of the stee	ing axle and che	ck the steering a	de for leak tight-		
Grease all lubri	icating nipples or	the steering axl	е.			
Check the stee	ring stop.					
Brake system						
Check the conc correctly.	dition of all mech	anical brake part	s and check that t	hey are working		
Check the actu	ation distance of	the brake pedal	and adjust if nece	essary.		
Check the filling	g level in the bral	ke reservoir.				
Check that the	electrical filling le	evel monitoring fu	inction is working	correctly.		
Check that the	emergency actua	ation of the parki	ng brake is workir	ng correctly.		
Perform a brak	e test.					
Electrical syste	em					
Check all powe	er cable connection	ons.				
Check that the	switches, transm	itters and sensor	s are working co	rectly.		
Check the light	ing and indicator	lights.				
Cooling system	n (converter and	drive axle)				
Check that the	fans and the air	ducts are working	g correctly and ch	eck for damage.		
Clean the fans	and the air ducts					
Clean the cooli	ng fins in the coc	ling section.				
Battery and ac	cessories					
	-acid battery for maintenance ins	•	ck the acid densit	y; observe the		
Variant: Replaction.	ce the non-return	valve on lead-ad	id batteries with e	electrolyte circula	1-	
Variant : Obser ies.	ve the manufactu	irer's maintenanc	e instructions for	lithium-ion batter	r-	
Check the appl	iance plug and th	ne truck harness	for damage.			
Check the batte	ery male connect	or and the batter	y harness for dan	nage.		
Hydraulics						
Check the cond check for leak t	•	aulic system, che	ck that it is workir	ng correctly and		
Check the hydr	aulics blocking fu	unction (ISO valv	e).			



At operating hours								
1000	2000	4000	5000	7000		out		
8000	10000	11000	13000	14000		✓	×	
Check the oil le	evel.							
Lift mast								
RX60-25-35 : C que.	check the lift mas	t bearings for dar	mage and check t	he tightening	tor-			
	heck the lift mast tightening torque.	•	nage, lubricate the	e lift mast bea	arings			
Check the mas	t profiles for dam	age and wear. Lu	ubricate the mast	profiles.				
Check the guid	e in the lower (loa	ad reversal) mas	t profile for dama	ge and for we	ar.			
Check the load	chains for dama	ge and wear. Adj	ust and lubricate	the load chai	ns.			
Check the lift c	ylinders and conr	nections for dama	age and for leak ti	ghtness.				
Check the guid	e pulleys for dam	age and for wea	r.					
Check the supp	port rollers and ch	nain rollers for da	mage and for wea	ar.				
Check the play	between the fork	carriage stop ar	nd the run-out bar	rier.				
Check the tilt c	ylinders and conr	ections for dama	age and for leaks.					
Check the fork	carriage for dama	age and for wear	-					
Check the fork	arm interlock for	damage and che	ck that it is working	ng correctly.				
Check the fork	arms for wear an	d deformation.						
Check that the	re is a safety scre	w on the fork car	rriage or on the at	tachment.				
Special equipn	nent							
Check the cond	dition of the antist	atic belt or antist	atic electrode.					
Check the filter sary.	mat in the heatir	ig system or air c	conditioning, and i	eplace if nec	es-			
Check that the maintenance ir	• •	s working correct	ly; observe the m	anufacturer's				
Check that the maintenance ir	•	s working correct	ly; observe the m	anufacturer's				
Check the attaction tenance instruction		and for damage;	; observe the mar	ufacturer's m	nain-			
Check the traile maintenance in		ar and for damag	ge; observe the m	anufacturer's	5			
General								
Read out the e	rror numbers and	clear the list.						
Reset the main	tenance interval.							



At operating hours								Carried		
1000		2000		4000		5000		7000	out	
8000		10000		11000	1	3000		14000	1	×
Check that the labelling is complete.										
Perform a	test di	ive.								



Maintenance - 3000 hours/every two years

At operating hours								Carried out		
3000	3000 6000 9000 12000 15000							✓	×	
Note										
Perform all 1000-hour maintenance work.										
Power unit										
Change the gearbox oil in the drive wheel units.										
Brake										
Change the	e actu	ation oil for	the fo	ot brake.						
Hydraulics										
Change the hydraulic oil.										
Replace the return line filter and the breather filter.										
Variant: Replace the high-pressure filter.										
For RX60-	50 LS	P600 (6337	7) onl	y: Replace	the ac	cumulator.				

Ordering spare parts and wearing parts

Spare parts are provided by our spare parts service department. The information required for ordering parts can be found in the spare parts list.

Only use spare parts as per the manufacturer's instructions. The use of unapproved spare parts can result in an increased risk of accidents due to insufficient quality or incorrect assignment. Anyone using unapproved spare parts shall assume unlimited liability in the event of damage or harm.

Quality and quantity of the required operating materials

Only the operating materials specified in the maintenance data table may be used.

- The required consumables and lubricants can be found in the maintenance data table.

Oil and grease types of a different quality must not be mixed. This negatively affects the




lubricity. If a change between different manufacturers cannot be avoided, drain the old oil thoroughly.

Before carrying out lubricating work, filter changes or any work on the hydraulic system, carefully clean the area around the part involved.

When topping up working materials, use only clean containers!



Lubrication plan

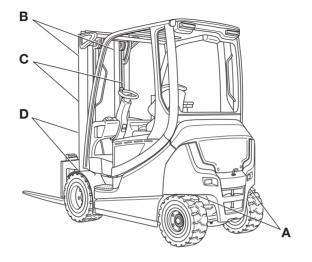

Code ¹	Lubrication point
(A)	Swing axle: four lubricating nipples on each side of the steering axle on the steering arm
(B)	Sliding surfaces on the lift mast
(C)	Load chains
(D)	One lubricating nipple on each of the two lift mast bearings
low, un This lut	espective lubricant specification can be found in the "Maintenance data table" section be- der this Code. prication plan describes the series-production truck with standard equipment. For mainte- points on variant trucks, see the relevant chapter and/or instructions provided by the man- er.



Maintenance data table

General lubrication points

Code	Unit	Operating materials	Specifications	Dimension
	Lubrication	High-pressure	ID no. 0147873	As required
		grease		

Battery

Code	Unit	Operating materials	Specifications	Dimension
	System filling	Distilled water		As required
	Insulation resistance		DIN 43539 VDE 0510	For further informa- tion, refer to the workshop manual for the truck in question.

Brake system

Code	Unit	Operating materials	Specifications	Dimension
	System filling	Mineral oil brake fluid	Shell Spirax S4 ATF	Up to the neck of the
			HDX	brake oil reservoir

Electrical system

Code	Unit	Operating materials	Specifications	Dimension
	Insulation resistance		DIN EN 1175	For further informa-
			VDE 0117	tion, refer to the
				workshop manual for
				the truck in question.

Controls/joints

Code	Unit	Operating materials	Specifications	Dimension
	Lubrication	High-pressure grease	ID no. 0147873	As required
		Oil	SAE 80 MIL-L2105 API-GL4	As required
	Dual-pedal opera- tion	High-pressure grease	ID no. 0147873	As required

Hydraulic system

Code	Unit	Operating materials	Specifications	Dimension
	System filling	Hydraulic oil	HVLP 68 DIN 51524, Part 3	
		Hydraulic oil for the food industry (var- iant)	USDA H1 DIN 51524	38.5 I to 50.0 I Dependent on the lift mast and lift height
		Hydraulic oil for cold store application	HVLP 68 DIN 51524, Part 3	



i NOTE

When changing to a different type of hydraulic oil, the authorised service centre must adjust the parameters of the truck control unit.

Tyres

Code	Unit	Operating materials	Specifications	Dimension	
	Superelastic tyres	Wear limit		To wear mark	
	Solid rubber tyres Wear limit			To wear mark	
	Pneumatic tyres	Minimum tread depth		Air pressure: see in- formation on truck Min. tread depth: 1.6 mm	

Steering axle

Code	Unit	Operating materials	Specifications	Dimension	
(A)	Axle stub bearing, spherical bearing	High-pressure grease	ID no. 0147873	As required	
	Wheel screws	Torque wrench		195 Nm	

Drive axle

Code	Unit	Operating materials	Specifications	Dimension	
	Wheel screws Torque wrench			195 Nm	
	Wheel gear	Gearbox oil	SAE 80W-90 API- GL4	0.6	

Lift mast

Code	Unit	Operating materials	Specifications	Dimension	
(B)	Lubrication	High-pressure grease	ID no. 0147873	As required	
	Stop	Play		Min. 2 mm	
(D)	Lift mast bearing	Grease	Aralub 4320 DIN 51825-KPF2N20 ID no. 0148659	Fill with grease until a small amount of fresh grease escapes	
	Screws for the lift mast bearing	Torque wrench		310 Nm	

Load chains

Code	Unit	Operating materials	Specifications	Dimension
(C)	Lubrication	High-load chain	Fully synthetic	As required
		spray	Temperature range: -35°C to +250°C ID no. 0156428	




Washer system

Code	Unit	Operating materials	Specifications	Dimension	
	System filling	Screen wash	Winter, ID	As required	
			no. 172566		



Lubricating the joints and controls

- Oil or grease bearings and joints according to the "maintenance data table".
- · Driver's seat guide
- · Cab door hinges (variant)
- Battery-door hinges or battery-cover hinges
- Actuating rod (1) for valves (with multi-lever operation)

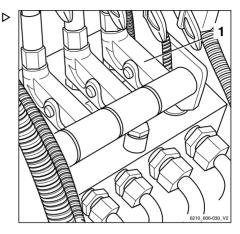



Checking the battery interlock and the battery door interlock


A DANGER

A malfunction of the battery interlock and the battery door interlock can cause the battery door to open and the battery could possibly fall out when the truck is tilted. If the battery falls out, there is a danger of being crushed to death.

- If the interlock is deformed, damaged or difficult to move, inform the authorised service centre immediately. Do not operate the truck.
- Check that the interlocks function correctly.
- The interlocks must be greased and must move easily.
- Always check the interlock after an accident.

The interval for greasing is influenced significantly by the application conditions and the environmental conditions affecting the truck. Visual inspections and function checking of the interlock must be carried out as required and after every 1000 hours. Grease all moving parts of the interlock as necessary.

- Open the battery door (1).
- Check that the door lock (2) and the battery lock (4) move easily and that they are not deformed or damaged.
- Check that the indexing bolt (3) on the door lock is seated correctly and that it is not deformed or damaged.
- Grease the mechanisms of the interlocks.
- Close the battery door again.

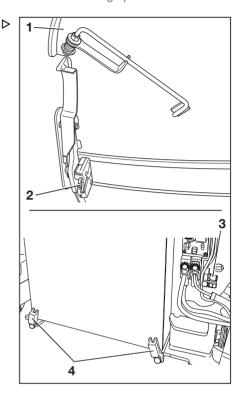

Preserving operational readiness



Maintaining the seat belt

A DANGER

There is a risk to life if the seat belt fails during an accident!

If the seat belt is faulty, it may tear or open during an accident and no longer keep the driver in the driver's seat. The driver may therefore be hurled against the truck components or out of the truck.

- Ensure operational reliability by continually testing.
- Do not use a truck with a defective seat belt.
- Only have a defective belt replaced by your service centre.
- Only use genuine spare parts.
- Do not make any changes to the belt.

Carry out the following checks on a regular basis (monthly). In the case of significant strain, a daily check is necessary.


Checking the seat belt

 Pull out the belt (3) completely and check for wear.

The belt must not be frayed or cut. The stitching must not be loose.

- Check whether the belt is dirty.
- Check whether parts are worn or damaged, including the attachment points.
- Check the buckle (1) to ensure that it locks in properly.

When the belt tongue (2) is inserted, the belt must be held securely.

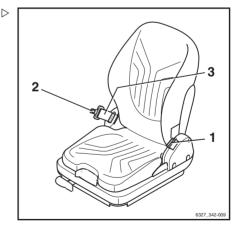



- The belt tongue (2) must release when the red button (4) is pressed.
- The automatic blocking mechanism must be tested at least once a year:
- Park the forklift truck on level ground.
- Pull out the belt with a jerk.

The automatic blocking mechanism must block extension of the belt.

- Tilt the seat at least 30 ° (if necessary, remove the seat).
- Slowly extend the belt.

The automatic blocking mechanism must block extension of the belt.

Cleaning the seat belt

 Clean the seat belt as necessary, but without using chemical cleaning materials (a brush will suffice).

Replacement after an accident

As a rule, the seat belt must be changed after an accident.

Checking the driver's seat

A WARNING

Risk of injury!


- After an accident, check the driver's seat with attached restraining belt and fastening.
- Check the controls for correct operation.
- Check the condition of the seat (e.g. wear on the upholstery) and secure fastening to the hood.

WARNING

Risk of injury!

- Have the seat repaired by the service centre if you identify any damage during the checks.



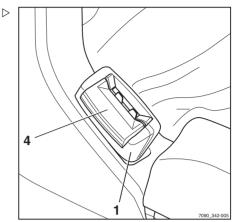

Preserving operational readiness

5


 \triangleright

6327 342-010

Servicing the heating system or air conditioning

Replacing the filter mat

- Loosen the screw (1).
- Remove the cover (2).

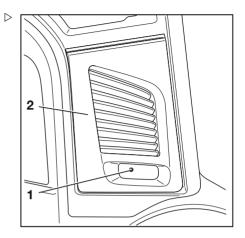


- Check the filter mat (1) for contamination.
- If the filter mat is grey in colour, replace it.

Change the filter mat at least every two months.

Cleaning the fresh-air inlet

The fresh-air inlet must be cleaned if the filter mat:


- · Is damaged,
- · Is incorrectly seated in the filter frame,
- · Has not been replaced every two months.
- Remove the filter mat.

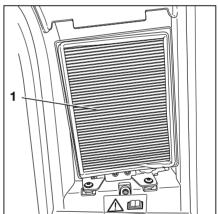




 \triangleright

- Loosen the screws (1) on the filter frame (2).
- Remove the filter frame (2).

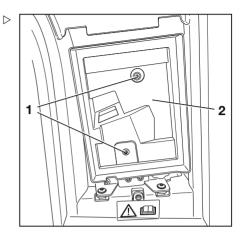

Remove any dust and dirt from the fresh-air ▷ inlet (1) beneath the filter mat carrier.

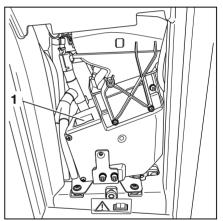



Servicing wheels and tyres

WARNING

Risk of accident!

The stability of the truck is reduced in the event of unequal tyre wear. The braking distance increases.

- Change worn or damaged tyres without delay.

A WARNING

Risk of tipping!

Tyre quality affects the stability of the truck.

If you wish to use a different type of tyre on the truck from the tyres approved by the truck manufacturer, or tyres from a different manufacturer, you must first obtain approval from the truck manufacturer.

A WARNING

Risk to stability!

When using pneumatic tyres or solid rubber tyres, rim wheel parts must never be changed and rim wheel parts from different manufacturers must not be mixed.

Checking the condition and wear of the \triangleright tyres

WARNING


Tyre quality affects the stability and handling of the truck.

Changes must only be made following consultation with the manufacturer.

When changing wheels or tyres, ensure that this does not cause the truck to tilt to one side (e.g. always replace right-hand and left-hand wheels at the same time).

 If necessary, remove any foreign bodies (1) embedded in the tyre tread.

The level of wear exhibited by tyres on the same axle must be approximately the same. Superelastic tyres and solid rubber tyres can be worn down to the wear mark (2).

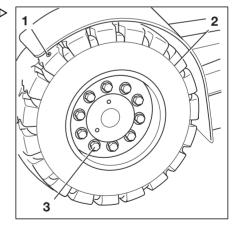



Checking wheel fastenings

- Check that the wheel-fastening screws (3) of the drive axle and the steering axle are securely in place and re-tighten as necessary.
- Observe the torques specified in the "maintenance data table".

Servicing the steering axle

- Park the truck securely.
- Check if any of the joints of the steering axle have been knocked out.
- Check the steering axle for bent parts.

Lubricating the steering axle



ENVIRONMENT NOTE

Dispose of old grease and contaminated devices in accordance with the national regulations for the country in which the truck is being used.

The joints of the steering axle each have four lubricating nipples per side.

 Apply grease to the lubricating nipples for the steering axle in accordance with the "maintenance data table" until old grease begins to escape.

WARNING

Risk of crushing!

Do not actuate the steering during lubrication.

If, after a few strokes, there is no old grease escaping, the steering must be actuated. This makes it easier for grease to escape from the joints.

- Switch the truck on.
- Actuate the steering.
- Park the truck safely again.
- Repeat the lubrication procedure.



Please note: The more often the truck is cleaned, the more frequently it must be lubricated.

Checking the battery

 For information on checking the battery, see the chapter entitled "Checking the battery condition, acid level and acid density".

Replacing the fuses



A DANGER

Danger from electrical current!

High voltages are present in the fuse box. There is a risk of electric shock.

- Do not open the fuse box.
- The fuses must be replaced only by the authorised service centre.

Checking the hydraulic system for leak tightness



WARNING

Hydraulic oil is hazardous to health!

Hydraulic oil under pressure can escape from leaking pipes and lines, and cause injuries.

 Wear suitable protective gloves, protection goggles etc.



A CAUTION

Hydraulic hoses become brittle!

- Do not store hydraulic hoses for more than two years.
- Do not use hydraulic hoses for more than six years if they are subject to normal wear.
- Do not use hydraulic hoses for more than two years if they are subject to a high level of wear.
- Comply with the specifications of DGUV 113-020 in Germany.
- Outside of Germany, observe the national regulations for the country of use.
- Check pipe and hose connection screw joints for leaks (traces of oil).

Replace hose lines if they display the following abnormalities:

- Outer layer has been damaged, or is brittle or cracked
- Leaking
- Deformation (e.g. with blisters or kinks)
- · A fitting has come loose
- A fitting is badly damaged or corroded

Replace pipes if they display the following abnormalities:

- Abrasion
- · Deformation and bending
- · Leaking





Check the hydraulic oil level

Hydraulic oils are hazardous to your health.

 Observe the safety regulations set out in the section entitled "Hydraulic fluid". ⊳

When changing to a different type of hydraulic oil, the authorised service centre must adjust the parameters of the truck control unit.


- Park the truck securely on a horizontal surface.
- Tilt the lift mast backwards until it reaches the stop.
- Lower the fork carriage; if attachments are fitted, retract the working cylinders.

A CAUTION

Potential for damage to the battery male connector!

If the battery male connector is disconnected while the key switch is on (under load), an arc will be produced. This can lead to erosion at the contacts, which considerably shortens the service life of the contacts.

- Switch off the key switch before disconnecting the battery male connector.
- Do not disconnect the battery male connector while the key switch is switched on, except in an emergency.
- Disconnect the battery male connector.
- Fold up the floor mat.
- Turn the bayonet catches on the bottom plate 90° to the left.
- Fold up the bottom plate with the floor mat and secure it in place.

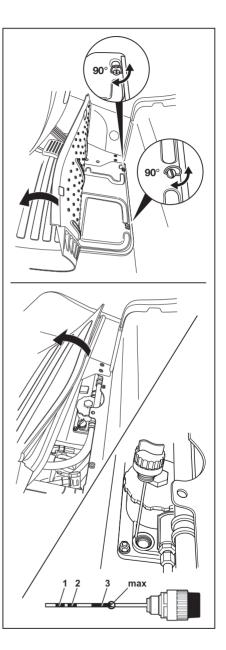



The components for dual-pedal operation are attached to the bottom plate from below. If the electric cable for dual-pedal operation is stretched out, disconnect the connection assembly from the drive potentiometer. After checking the oil level, reattach the connection assembly.

- Unscrew the breather filter with the dipstick in an anti-clockwise direction.
- Keep the breather filter and dipstick in a horizontal position.
- Check the oil level on the dipstick.

🕸 ENVIRONMENT NOTE

Carefully collect any spilt hydraulic oil. Dispose of this hydraulic oil in accordance with environmental regulations.

The marks (1), (2) and (3) indicate the required filling levels for the different lift mast versions. The uppermost mark (max) indicates the maximum filling quantity for a triple mast with a lift height \ge 3225 mm.

Assignment of the lift mast version to the mark on the dipstick and the oil filing quantity

	Lift height [mm]						
Marking	Telescopi	ic lift mast NiHo lift mast		ft mast	Triple mast		Oil filling
manning	2.5 t	3.0 t & 3.5 t	2.5 t	3.0 t & 3.5 t	2.5 t	3.0 t & 3.5 t	quantity [l]
1	≤ 3175	≤ 2775	≤ 3025	≤ 2475	≤ 2225	-	38.5
2	-	2825 etc. 3175	3075 etc. 3225	2525 etc. 3225	2275 etc. 3025	≤ 2575	45
3	-	-	-	-	3075 etc. 3225	2625 etc. 3225	50

A CAUTION

Risk of damage.

If the hydraulic oil level is too low, the steering is restricted and the pump may be damaged.

 If the oil level is too low, do not use the truck and contact the authorised service centre.



- Screw in the breather filter and the dipstick in a clockwise direction.
- Close the bottom plate again.
- Position the floor mat.
- Connect the battery male connector.


Lubricating the lift mast and roller track


- Remove dirt and lubricant residue from the roller track.
- Lubricate the roller tracks (1) of the outside, middle, and inside mast with a super-pressure adhesion lubricant to reduce wear.
 See ⇒ Chapter "Maintenance data table", Page 401.

Spray the roller track evenly from a distance of approx. 15-20 cm. Wait approx. 15 minutes until the equipment is ready to use again.

Preserving operational readiness for cold store application

 On trucks for cold store application (variant), check all rollers and chains in the lift mast for ease of movement once a week.

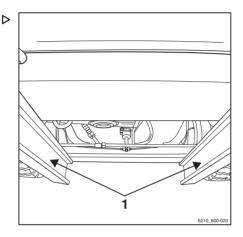

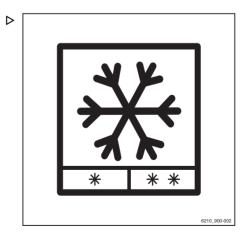



1000-hour maintenance/yearly maintenance

Other tasks

 Perform all tasks required to maintain full operability; see the chapter entitled "Remaining ready for operation".


Checking the lift cylinders and connections for leaks

A WARNING

Risk of injury

Observe safety regulations for working on the lift mast, see the "Working at the front of the truck" chapter.

- Check hydraulic connections and lift cylinders for leaks (visual inspection).
- Have leaking screw joints or leaking hydraulic cylinders repaired by the authorised service centre.

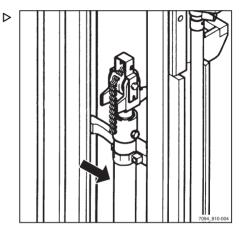



1000-hour maintenance/yearly maintenance

Checking the fork arms


 Check the fork arms (1) for any visible deformation. Wear must not amount to more than 10% of the original thickness.

A CAUTION

Risk of component damage!

Always replace worn fork arms in pairs.


- Check that the fork latch (3) is functioning correctly.
- Make sure that the locking screw (2) is present and cannot fall out.

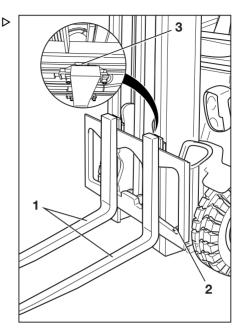

Checking the reversible fork arms

This check is only required for reversible fork arms (variant).

 Check the outside of the fork bend (1) for cracks. Contact your service centre.

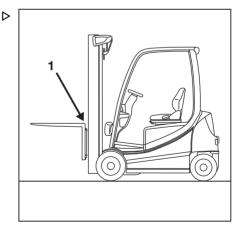




1000-hour maintenance/yearly maintenance

Checking the double pedal

- Remove the floorplate.
- Check that the support and springs of the double pedal mechanism are securely positioned.
- Check that all screws are sealed with locking varnish.

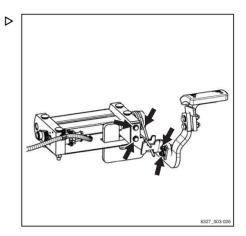

Checking the battery changeover frame

 The screw joints and welded seams of the battery changeover frame must be subjected to a visual inspection.



1000-hour maintenance/yearly maintenance



6

Technical data

Ergonomic dimensions

Ergonomic dimensions

WARNING

6

Danger of impact injuries to the head!


If the head of the operator is located too close to the underside of the roof, the suspension of the driver's seat or an accident may cause the head to strike the overhead guard.

To avoid head injuries, a minimum distance of **40 mm** must be ensured between the underside of the roof and the head of the tallest operator.

To determine the actual head clearance, the operator must sit in the driver's seat and the seat suspension must be set to this driver's requirements.

Due to the individual nature of height and body weight as well as the wide variety of types of driver's seat and overhead guard, the minimum head clearance must be ensured in every truck.


The driver's compartment has been designed taking ergonomics in the workplace into account and in accordance with EN ISO 3411. In general, from the seat position, the operator has sufficient space to reach the operating devices safely, to operate the truck and to view the outline of the truck. Operators whose body size deviates from the specified dimensions on which EN ISO 3411 is based must be individually considered by the operating company.

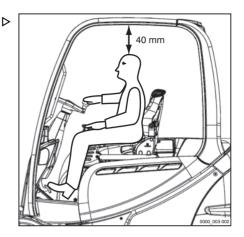




Dimensions

 Dimensions

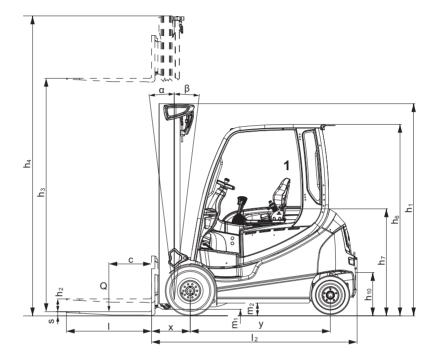



1 Seat is adjustable ± 90 mm

2 Fork spacing is adjustable



Dimensions



Measurements h_1 , h_3 , h_4 , h_6 and b_1 are customised and can be taken from the order confirmation.



VDI datasheet RX60-25, RX60-25/600 and RX60-25L/600



This VDI datasheet specifies only the technical values for trucks with standard equipment. Different tyres, lift masts, additional units etc. can produce different values.

Key data

Model		RX60-25	RX60-25/600	RX60-25L/600
Type number		6301	6302	6304
Manufacturer		STILL GmbH	STILL GmbH	STILL GmbH
Drive		Electric	Electric	Electric
Operation		Seat	Seat	Seat
Rated capacity/load	Q (kg)	2500	2500	2500
Load centre of gravity distance	c (mm)	500	600	600
Load distance	x (mm)	445	460	460
Wheelbase	y (mm)	1645	1645	1797

Weights

Model		RX60-25	RX60-25/600	RX60-25L/600
Type number		6301	6302	6304
Net weight including battery	kg	4599	4821	5019
Front axle load, laden	kg	6317	6421	6478
Rear axle load, laden	kg	782	900	1041
Front axle load, unladen	kg	2370	2315	2508
Rear axle load, unladen	kg	2229	2506	2511

Wheels, chassis frame

Model	RX60-25	RX60-25/600	RX60-25L/600
Type number	6301	6302	6304
Tyres	SE	SE	SE
Tyre size, front	225/75-10 (23x9-10)	225/75-10 (23x9-10)	225/75-10 (23x9-10)
Tyre size, rear	180/70-8 (18x7-8)	180/70-8 (18x7-8)	180/70-8 (18x7-8)
Number of front wheels (x = driven)	2x	2x	2x



VDI datasheet RX60-25, RX60-25/600 and RX60-25L/600

Model		RX60-25	RX60-25/600	RX60-25L/600
Type number		6301	6302	6304
Number of rear wheels (x = driven)		2	2	2
Track width, front	b10 (mm)	992	992	992
Track width, rear	b11 (mm)	900	900	900

Basic dimensions

Model		RX60-25	RX60-25/600	RX60-25L/600
Type number		6301	6302	6304
Forward tilt of lift mast/fork carriage	Degrees	7	7	7
Backwards tilt of lift mast/fork car- riage ¹	Degrees	7	7	7
Height with lift mast retracted	h1 (mm)	2225	2225	2225
Free lift	h2 (mm)	160	160	160
Lift ²	h3 (mm)	3600	3066	3066
Height with lift mast extended	h4 (mm)	3700	3700	3700
Height above overhead guard (low variant)	h6 (mm)	2226 (2135)	2225 (2135)	2225 (2135)
Seat height in relation to SIP (low variant)	h7 (mm)	1235 (1195)	1235 (1195)	1235 (1195)
Coupling height	h10 (mm)	484	484	484
Overall length	l1 (mm)	3410	3615	3767
Length including fork back	l2 (mm)	2410	2415	2567
Overall width	b1 (mm)	1199	1199	1199
Fork arm thickness	s (mm)	40	45	45
Fork arm width	e (mm)	100	100	100
Fork arm length	l (mm)	1000	1200	1200
Fork carriage	Standard; class; form	ISO 2328 II A	ISO 2328 II A	ISO 2328 II A
Fork carriage width	b3 (mm)	1150	1150	1150
Ground clearance with load below lift mast	m1 (mm)	116	116	116
Ground clearance at the middle of the wheelbase	m2 (mm)	127	126	126

² The specified nominal lift takes into account the tyre deflection and tolerances of the tyre diameter.



¹ Applies to telescopic, NiHo and triple masts.

VDI datasheet RX60-25, RX60-25/600 and RX60-25L/600

Model		RX60-25	RX60-25/600	RX60-25L/600
Type number		6301	6302	6304
Aisle width for pallet 1000 x 1200 crosswise ¹²	Ast (mm)	3700	3705	3905
Aisle width for pallet 800 x 1200 lengthwise ¹²	Ast (mm)	3890	3895	4116
Turning radius	Wa (mm)	2035	2035	2245
Smallest pivot point distance	b13 (mm)	428	428	593

Performance data

Model		RX60-25	RX60-25/600	RX60-25L/600
Type number		6301	6302	6304
Driving speed with load	km/h	20	20	20
Driving speed without load	km/h	21	21	21
Lifting speed with load	m/s	0.66	0.66	0.66
Lifting speed without load	m/s	0.60	0.60	0.60
Lowering speed with load	m/s	0.50	0.50	0.50
Lowering speed without load	m/s	0.45	0.45	0.45
Pulling force with load	kg	8140	8016	7985
Pulling force without load	kg	8100	8110	8110
Maximum pulling force with load	kg	17390	17370	17354
Maximum pulling force without load	kg	17120	17073	17071
Climbing capability with load	%	17.1	16.5	16.0
Climbing capability without load	%	26.6	27.4	24.2
Max. climbing capability with load	%	25.5	24.7	24
Max. climbing capability without load	%	29.5	27.5	29.2
15-m acceleration time with load	s	6.5	6.5	6.6
15-m acceleration time without load	s	5.5	5.5	5.6
Service brake		Hydraulically actuated multi- disc brake	Hydraulically actuated multi- disc brake	Hydraulically actuated multi- disc brake

Gradients

The values specified in the "Performance data" table as the maximum climbing capability can be used only to compare the performance

¹ Does not take the protruding fork arms into consideration.

² Applies to telescopic, NiHo and triple masts.



6

VDI datasheet RX60-25, RX60-25/600 and RX60-25L/600

of forklift trucks in the same category. The specified values in no way represent the normal daily operating conditions.

A WARNING

To use the truck safely – with or without a load – the maximum ascending or descending gradient permitted for travel is 15%.

If you have any questions, contact your authorised service centre.

Electric motor

Model	Model		RX60-25/600	RX60-25L/600
Type number		6301	6302	6304
Traction motor, power rating S2 60 min	kW	2x8.5	2x8.5	2x8.5
Lift motor, power rating at 15% ED	kW	20	20	20
Battery	Standard; circuit	DIN 43536 A	DIN 43536 A	DIN 43536 A
Battery voltage	U (V)	80	80	80
Nominal capacity K ₅	K ₅ (Ah)	560 - 620	560 - 620	560 - 620
Battery weight	kg	1558	1558	1863
Energy consumption in accordance with EN 16796	kWh/h	6.0	6.2	6.3

Other

Model		RX60-25	RX60-25/600	RX60-25L/600
Type number		6301	6302	6304
Handling performance	t/h	169	169	169
Energy consumption at handling performance	kWh/h	6.6	6.8	6.9
Working pressure for attachments	bar	250	250	250
Oil flow for attachments	l/min	46	46	46
Sound pressure level L_{pAZ} (driver's compartment) ¹	dB (A)	70	70	70
Human vibration: acceleration ac- cording to EN 13059	m/s ²	0.57	0.57	0.57
Tow coupling, DIN type/model		Bolt	Bolt	Bolt



¹ Without cab. Values are different with a cab.

VDI datasheet RX60-30, RX60-30/600 and RX60-30L/600



This VDI datasheet specifies only the technical values for trucks with standard equipment. Different tyres, lift masts, additional units etc. can produce different values.

Key data

Model		RX60-30	RX60-30/600	RX60-30L/600
Type number		6305	6307	6308
Manufacturer		STILL GmbH	STILL GmbH	STILL GmbH
Drive		Electric	Electric	Electric
Operation		Seat	Seat	Seat
Rated capacity/load	Q (kg)	3000	3000	3000
Load centre of gravity distance	c (mm)	500	500	600
Load distance	x (mm)	468	468	468
Wheelbase	y (mm)	1652	1797	1797

Weights

Model		RX60-30	RX60-35	RX60-30L/600
Type number		6305	6307	6308
Net weight including battery	kg	5040	5063	5308
Front axle load, laden	kg	7163	7257	7419
Rear axle load, laden	kg	877	806	889
Front axle load, unladen	kg	2411	2646	2641
Rear axle load, unladen	kg	2629	2417	2667

Wheels, chassis frame

Model		RX60-30	RX60-35	RX60-30L/600
Type number		6305	6307	6308
Tyres		SE	SE	SE
Tyre size, front		250/60-12 (23x10-12)	250/60-12 (23x10-12)	315/45-12
Tyre size, rear		180/70-8 (18x7-8)	180/70-8 (18x7-8)	180/70-8 (18x7-8)
Number of front wheels (x = driven)		2x	2x	2x



6

VDI datasheet RX60-30, RX60-30/600 and RX60-30L/600

Model		RX60-30	RX60-35	RX60-30L/600
Type number		6305	6307	6308
Number of rear wheels (x = driven)		2	2	2
Track width, front	b10 (mm)	950	950	1002
Track width, rear	b11 (mm)	900	900	900

Basic dimensions

Model		RX60-30	RX60-35	RX60-30L/600
Type number		6305	6307	6308
Forward tilt of lift mast/fork carriage	Degrees	7	7	7
Backwards tilt of lift mast/fork car- riage ¹	Degrees	7	7	7
Height with lift mast retracted	h1 (mm)	2225	2225	2225
Free lift	h2 (mm)	160	160	160
Lift ²	h3 (mm)	3066	3066	3066
Height with lift mast extended	h4 (mm)	3850	3850	3850
Height above overhead guard (low variant)	h6 (mm)	2225 (2135)	2225 (2135)	2225 (2135)
Seat height in relation to SIP (low variant)	h7 (mm)	1235 (1195)	1235 (1195)	1235 (1195)
Coupling height	h10 (mm)	484	484	484
Overall length	l1 (mm)	3430	3575	3775
Length including fork back	l2 (mm)	2430	2575	2575
Overall width	b1 (mm)	1199	1199	1299
Fork arm thickness	s (mm)	50	50	50
Fork arm width	e (mm)	100	100	100
Fork arm length	l (mm)	1000	1000	1200
Fork carriage	Standard; class; form	ISO 2328 III A	ISO 2328 III A	ISO 2328 III A
Fork carriage width	b3 (mm)	1150	1150	1150
Ground clearance with load below lift mast	m1 (mm)	114	114	116
Ground clearance at the middle of the wheelbase	m2 (mm)	126	125	126

² The specified nominal lift takes into account the tyre deflection and tolerances of the tyre diameter.



¹ Applies to telescopic, NiHo and triple masts.

VDI datasheet RX60-30, RX60-30/600 and RX60-30L/600

Model		RX60-30	RX60-35	RX60-30L/600	
Type number		6305	6307	6308	
Aisle width for pallet 1000 x 1200 crosswise ¹²	Ast (mm)	3742	3913	3941	
Aisle width for pallet 800 x 1200 lengthwise ¹²	Ast (mm)	3940	4124	4141	
Turning radius	Wa (mm)	2070	2245	2273	
Smallest pivot point distance	b13 (mm)	491	593	649	

Performance data

Model		RX60-30	RX60-35	RX60-30L/600
Type number		6305	6307	6308
Driving speed with load	km/h	20	20	20
Driving speed without load	km/h	21	21	21
Lifting speed with load	m/s	0.57	0.57	0.57
Lifting speed without load	m/s	0.51	0.51	0.51
Lowering speed with load	m/s	0.50	0.50	0.50
Lowering speed without load	m/s	0.43	0.43	0.43
Pulling force with load	kg	7740	7737	7695
Pulling force without load	kg	8100	8106	8055
Maximum pulling force with load	kg	17020	17020	16990
Maximum pulling force without load	kg	17140	17156	17117
Climbing capability with load	%	14.6	14.6	14.1
Climbing capability without load	%	24.2	24.1	22.8
Max. climbing capability with load	%	21.9	21.9	21.1
Max. climbing capability without load	%	27.4	30.6	29.1
15-m acceleration time with load	s	6.6	6.6	6.3
15-m acceleration time without load	s	5.6	5.6	5.4
Service brake		Hydraulically actuated multi- disc brake	Hydraulically actuated multi- disc brake	Hydraulically actuated multi- disc brake

Gradients

The values specified in the "Performance data" table as the maximum climbing capability can be used only to compare the performance of forklift trucks in the same category. The

¹ Does not take the protruding fork arms into consideration.

² Applies to telescopic, NiHo and triple masts.



specified values in no way represent the normal daily operating conditions.

A WARNING

To use the truck safely – with or without a load – the maximum ascending or descending gradient permitted for travel is 15%.

If you have any questions, contact your authorised service centre.

Electric motor

Model		RX60-30	RX60-35	RX60-30L/600
Type number		6305	6307	6308
Traction motor, power rating S2 60 min	kW	2x8.5	2x8.5	2x8.5
Lift motor, power rating at 15% ED	kW	20	20	20
Battery	Standard; circuit	DIN 43536 A	DIN 43536 A	DIN 43536 A
Battery voltage	U (V)	80	80	80
Nominal capacity K ₅	K ₅ (Ah)	560 - 620	700 - 775	700 - 775
Battery weight	kg	1558	1863	1863
Energy consumption: 60 VDI work- ing cycles/hour	kWh/h	6.5	6.6	6.7

Other

Model		RX60-30	RX60-35	RX60-30L/600
Type number		6305	6307	6308
Handling performance	t/h	222	222	222
Energy consumption at handling performance	kWh/h	7.3	7.3	7.5
Working pressure for attachments	bar	250	250	250
Oil flow for attachments	l/min	46	46	46
Sound pressure level L_{pAZ} (driver's compartment) ¹	dB (A)	70	70	70
Human vibration: acceleration ac- cording to EN 13059	m/s ²	0.57	0.57	0.57
Tow coupling, DIN type/model		Bolt	Bolt	Bolt



¹ Without cab. Values are different with a cab.

VDI datasheet RX60-35L

VDI datasheet RX60-35L

i NOTE

This VDI datasheet specifies only the technical values for trucks with standard equipment. Different tyres, lift masts, additional units etc. can produce different values.

Key data

Model		RX60-35L
Type number		6309
Manufacturer		STILL GmbH
Drive		Electric
Operation		Seat
Rated capacity/load	Q (kg)	3500
Load centre of gravity distance	c (mm)	500
Load distance	x (mm)	468
Wheelbase	y (mm)	1797

Weights

Model		RX60-35L
Type number		6309
Net weight including battery	kg	5308
Front axle load, laden	kg	7419
Rear axle load, laden	kg	889
Front axle load, unladen	kg	2641
Rear axle load, unladen	kg	2667

Wheels, chassis frame

Model	RX60-35L
Type number	6309
Tyres	SE
Tyre size, front	315/45-12
Tyre size, rear	180/70-8 (18x7-8)
Number of front wheels (x = driven)	2x
Number of rear wheels (x = driven)	2



VDI datasheet RX60-35L

Model		RX60-35L
Type number		6309
Track width, front	b10 (mm)	1002
Track width, rear	b11 (mm)	900

Basic dimensions

Model		RX60-35L
Type number		6309
Forward tilt of lift mast/fork carriage	Degrees	7
Backwards tilt of lift mast/fork carriage ¹	Degrees	7
Height with lift mast retracted	h1 (mm)	2225
Free lift	h2 (mm)	160
Lift ²	h3 (mm)	3066
Height with lift mast extended	h4 (mm)	3850
Height above overhead guard (low variant)	h6 (mm)	2225 (2135)
Seat height in relation to SIP (low variant)	h7 (mm)	1235 (1195)
Coupling height	h10 (mm)	484
Overall length	l1 (mm)	3775
Length including fork back	l2 (mm)	2575
Overall width	b1 (mm)	1299
Fork arm thickness	s (mm)	50
Fork arm width	e (mm)	100
Fork arm length	l (mm)	1200
Fork carriage	Standard; class; form	ISO 2328 III A
Fork carriage width	b3 (mm)	1150
Ground clearance with load below lift mast	m1 (mm)	115
Ground clearance at the middle of the wheelbase	m2 (mm)	126
Aisle width for pallet 1000 x 1200 crosswise ³¹	Ast (mm)	3941
Aisle width for pallet 800 x 1200 lengthwise ³¹	Ast (mm)	4141
Turning radius	Wa (mm)	2273
Smallest pivot point distance	b13 (mm)	649



¹ Applies to telescopic, NiHo and triple masts.

² The specified nominal lift takes into account the tyre deflection and tolerances of the tyre diameter.

³ Does not take the protruding fork arms into consideration.

Performance data

Model		RX60-35L
Type number		6309
Driving speed with load	km/h	20
Driving speed without load	km/h	21
Lifting speed with load	m/s	0.44
Lifting speed without load	m/s	0.51
Lowering speed with load	m/s	0.50
Lowering speed without load	m/s	0.43
Pulling force with load	kg	7590
Pulling force without load	kg	8015
Maximum pulling force with load	kg	16920
Maximum pulling force without load	kg	17170
Climbing capability with load	%	12.9
Climbing capability without load	%	21.9
Max. climbing capability with load	%	20.6
Max. climbing capability without load	%	28.2
15-m acceleration time with load	S	6.3
15-m acceleration time without load	s	5.4
Service brake		Hydraulically actuated multi-disc brake

Gradients

The values specified in the "Performance data" table as the maximum climbing capability can be used only to compare the performance of forklift trucks in the same category. The specified values in no way represent the normal daily operating conditions.

A WARNING

To use the truck safely – with or without a load – the maximum ascending or descending gradient permitted for travel is 15%.

If you have any questions, contact your authorised service centre.

Electric motor

Model		RX60-35L
Type number		6309
Traction motor, power rating S2 60 min	kW	2x8.5
Lift motor, power rating at 15% ED	kW	20



VDI datasheet RX60-35L

Model		RX60-35L
Type number		6309
Battery	Standard; circuit	DIN 43536 A
Battery voltage	U (V)	80
Nominal capacity K ₅	K ₅ (Ah)	700 - 775
Battery weight	kg	1863
Energy consumption: 60 VDI working cycles/hour	kWh/h	7.1

Other

Model		RX60-35L
Type number		6309
Handling performance	t/h	245
Energy consumption at handling performance	kWh/h	8.0
Working pressure for attachments	bar	250
Oil flow for attachments	l/min	46
Sound pressure level L _{pAZ} (driver's compartment) ¹	dB (A)	70
Human vibration: acceleration according to EN 13059	m/s ²	0.57
Tow coupling, DIN type/model		Bolt



¹ Without cab. Values are different with a cab.

Information about the lead-acid battery

A CAUTION

The battery weight and the battery dimensions affect the stability of the truck.

When replacing the battery, the weight ratios must not be changed. The battery weight must remain within the weight range specified on the nameplate. The location of ballast weights must not be changed. The bottom of the battery tray must be closed.

- Use batteries that meet DIN standards.
- Do not change the position of ballast weights.
- Check the battery weight against the information on the nameplate.
- Only use a battery tray that is closed at the bottom.

i NOTE

Battery specifications according to DIN 43536; cells in accordance with DIN EN 60254-2, 80-V circuit A

 The battery weight can be found on the nameplate of the battery.

Lead-acid batteries

Battery designa- tion	Capacity [Ah]	Tray	Weight/ ballast	Battery compart mensions [r			Circuit
			weight [kg]	Length	Width	Height	
4PzV 400	400						
4PzV 460	460	204	234		708		
4PzS 500	500			1026		627	
5PzV 500	500			1026		027	
5PzS 575	575	205	-		852		
5PzS 625	625						
4PzS 560	560	-					
4PzS 620	620						А
4PzV 480	480	234	234		711		A
4TCSM 640	640			4000	3 784		
4PzV 560	560					704	
5PzS 700	700			1028		/ 04	
5PzV 775	775						
5PzV 600	600	235	-		855		
5PzV 700	700						
5TCSM 840	840						



Information about the lead-acid battery



To convert to TENSOR[®] batteries, contact the authorised service centre.



Information about the lithium-ion battery

A CAUTION

The battery weight and the battery dimensions affect the stability of the truck.

When replacing the battery, the weight ratios must not be changed. The battery weight must remain within the weight range specified on the nameplate. The bottom of the battery tray must be closed.

Even though this truck has an operating voltage of 80 V, lithium-ion batteries with a nominal voltage of 90 V can be used.

- Use batteries that meet DIN standards.
- Check the battery weight against the information on the nameplate.
- Only use a battery tray that is closed at the bottom.
- The battery weight can be found on the nameplate of the battery.
- For more information, please refer to the nameplate and the operating instructions for the lithium-ion battery.

GGS Li-Ion 90 V BG6

Battery des-		Battery cor	mpartment dime	nsions [mm]			
ignation and nominal en- ergy [kW/h]	Capacity [Ah]	Depth	Width	Height	Weight [kg]	Tray	
24.1	268	4000	744	007	4550	0507	
60.3	670	1028	711	δ /11	687	1558	S507

 Contact the authorised service centre for further technical data.



Information about the lithium-ion battery



Α

Access authorisation for the fleet manag-	
er	107
Changing the fleet manager password.	108
Changing the PIN code for the driver.	109
Access authorisation with PIN code	106
Accessories.	. 7
Actuating the drive direction switch	
Fingertip version.	147
Joystick 4Plus version.	147
Mini-console version	148
Mini-lever version.	146
Multiple-lever version	146
Address of manufacturer.	. 1
Adjusting the armrest	89
Adjusting the fork.	198
Adjusting the steering column	90
Air conditioning.	298
Assistance functions	
Mast tilt angle display	218
Tilt end stop damping.	218
Attachments	251
Alternating operation.	252
Assembly	251
Connecting	253
Controlling using a double mini-lever.	260
Controlling using a quadruple mini-lev-	
er	268
Controlling using a triple mini-lever.	264
Controlling using multi-lever operation.	256
Controlling using the double mini-lever	
and the 5th function	262
Controlling using the joystick 4Plus	275
Controlling using the quadruple mini-	
lever and the 5th function	270
Controlling using the triple mini-lever	
and the 5th function.	266
Controlling with multi-lever operation	
and the 5th function	258
Controlling with multi-lever operation	050
and the 6th function.	258
Controlling with the fingertip.	271
Controlling with the fingertip and the	273
5th function.	273
General controlling	254 253
Load capacity	253
	10.5

Picking up a load	279
Safety information	251
Special risks	43
Automatic mast vertical positioning	
Calibrating	202
Checking for correct function	101
Operation.	201
Auxiliary equipment	280

В

Basic principles for safe operation Battery	31
Changing the battery type	357
Changing to lithium-ion batteries	358
Charging	339
Charging to equalise	342
Checking	412
Checking condition, acid level and acid	
density	337
Checking the changeover frame	419
Checking the charge status of the	338
Checking the interlock	405
Disposal	25
Information	437
Maintaining	335
Plug	330
Safety regulations	332
Battery acid	54
Battery door	
Checking the interlock	405
Battery male connector	
Connecting	330
Disconnecting	331
Battery specifications	
Lead-acid battery	437
Lithium-ion battery	439
Before picking up a load	196
Blue-Q	
Effects on additional consumers	133
Functional description	133
Switching on and off	135
•	

С

Cab	293
Opening/closing the door	293
Opening/closing the side window	294



Operating the rear window heating	283
Turning the interior lighting on or off.	294
Ceiling sensor	283
CE labelling	. 5
Changes to the truck	35
Changing the fork arms	187
Changing to lithium-ion batteries	358
Charging the lithium-ion battery	352
Checking the brake oil level	95
Checking the charge state of the lithium-	
ion battery	350
Checking the charge status of the	338
Checking the double pedal	419
Checking the driver's seat	407
Checking the emergency off function	94
Checking the fork arms	418
Checking the lift cylinders and connections	
for leaks.	417
Checking wheel fastenings	411
Clamp locking mechanism.	278
Releasing the mechanism with a double	
mini-lever.	261
Releasing the mechanism with a quad- ruple mini-lever	269
Releasing the mechanism with a triple	209
mini-lever.	265
Releasing the mechanism with the fin-	200
gertip.	272
Releasing the mechanism with the joy-	
stick 4Plus	276
Cleaning	374
Cleaning the electrical system.	376
Cleaning the truck.	374
Cleaning the windows	377
Clean the truck	
After cleaning	378
Climbing into the truck.	79
Climbing out of the truck.	79
Clipboard	299
Cold store application.	309
Batteries	311
Operation	310
Types of application	309
Commissioning.	14
Condition of the roadways.	141

Consumables	52
Disposal	55
Safety information for handling battery	
acid	54
Safety information for handling oils	52
Safety information for hydraulic fluid	53
Contact details.	. I
Copyright and trademark rights	20
Coupling pin in the counterweight	302
Crane loading.	382
Cup holder	63
Curve Speed Control	163

D

Damage	38
Danger area	198
Danger areas of lithium-ion batteries	34
Danger to employees.	48
Declaration of conformity	. 6
Declaring the use of lithium-ion batteries	32
Decommissioning the truck.	383
Defects	38
Definition of directions	23
Definition of responsible persons	28
Description of the truck	2
Dimensions of roadways	139
Display-operating unit	
Messages	312
Swivelling	90
Display/control unit	64
Main screen	103
Disposal	
Battery	25
Components	25
Double mini-lever	
Lifting/lowering the fork carriage. 175,	177
Tilting the lift mast 175,	177
Drive direction	
Changing	149
Neutral position.	145
Selecting	145
Selecting with the dual pedal version.	152
Drive modes	
Sprint mode	135
STILL Classic.	135

Drive programme	
Configuring A/B	143
Selecting 1 to 3	142
Selecting A/B.	143
Driver qualification for using lithium-ion	
batteries	32
Driver rights, duties and rules of behaviour	. 29
Drivers.	29
Driver's cab	
Use	95
Driver's seat	
Adjusting the backrest extension	84
Adjusting the lumbar support	83
Adjusting the seat backrest	82
Adjusting the seat suspension	
(MSG 65/MSG 75)	82
Adjusting the seat suspension	
(MSG 75 E)	83
adjustment80), 81
Switching the seat heater on and off	84
Swivelling for reverse travel	85
Driving	137
Ascending gradients	215
Descending gradients	215
Driving lights	
Switching on and off	126
Driving on loading bridges	217
Driving onto lifts	216
Dynamic Load Control 1	220
Dynamic Load Control 2	221

Е

EC declaration of conformity in accordance with Machinery Directive.	
Efficiency and drive modes	133
Electric parking brake	
Symbols in the display-operating unit.	154
Emergencies	
Emergency actuation of the parking	
brake	325
Truck tipping over	322
Using the emergency hammer	323
Emergency hammer	323
Emergency lowering.	323
Emergency shutdown	321

Emissions	56
Battery	58
Noise emissions	56
Radiation	58
Vibrations.	57
Environmental considerations	25
Ergonomic dimensions	422

F

Filling the washer system	282
Fingertip switch	
Lifting/lowering the fork carriage	181
Tilting the lift mast	181
First-aid measures for working with lithium-	-
ion batteries	
Maintenance personnel	344
Fitting attachments	251
FleetManager	280
Shock recognition	280
Fork arms	
Length	41
Fork extension.	189
Fork wear protection.	185
Function checking.	76
Fuses	
Replacing	412

G

General.																													5	
----------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	---	--

н

Handling gas springs and accumulators	40
Handling loads.	195
Hazard assessment.	32
Hazardous areas	141
Hazards and countermeasures	46
Hazard warning system	
Switching on and off	129
Heating system	295
High Performance variant.	356
Hydraulic blocking function.	193
Hydraulic fluid	53
Hydraulic system	
Checking for leak tightness	412
Checking the oil level	414
Depressurising using a double mini-lev	-
er	239



Depressurising using a quadruple mini	- 243
Depressurising using a triple mini-lev- er.	241
Depressurising using multi-lever operation.	237
Depressurising using multi-lever operation and the 5th and 6th function	- 238
Depressurising using the double mini- lever and the 5th function	240
Depressurising using the fingertip	245
Depressurising using the fingertip and the 5th function.	246
Depressurising using the Joy- stick 4Plus	247
Depressurising using the Joystick 4Plu	IS
and the 5th function	248
Depressurising using the quadruple	~ ~ ~
mini-lever and the 5th function	244
Depressurising using the triple mini-lever and the 5th function	/- 242
Exiting the wizard.	250
Need to depressurise.	234
Special feature for clamping attach-	
ments	249
Wizard for depressurising	235

I

Illustration of lithium-ion batteries	347
Impermissible use	15
Information about the documentation	18
Information for carrying out maintenance.	391
Maintenance timeframe	392
Next maintenance interval	392
Information symbols	20
Insulation testing	50
Drive battery test values	51
Test values for the truck	51
Insurance cover on company premises	31
Interior lighting	294
Issue date of the operating instructions	20

J

Jacking up	389
Joystick 4Plus	
Fork carriage sideshift	183
Lifting/lowering the fork carriage	182
Tilting the lift mast	183

L

Labelling points.	. 8
Lashing down	381
Lift height-dependent functions	
Speed reduction when the fork carriage	
is raised	164
Lift height measuring system	289
Lifting	389
Lifting system	
Controlling using a double mini-lever.	175
Controlling using a quadruple mini-lev-	
er	179
Controlling using a triple mini-lever	177
Controlling using the joystick 4Plus	182
Controlling with the fingertip	181
Dynamics	184
Multi-lever.	173
Operating devices.	171
Lift mast	
Lubricating the roller track	416
Removing	390
Securing against falling off	390
Securing against tilting backwards	390
Lift mast versions.	170
NiHo lift mast	171
Telescopic lift mast	170
Triple mast.	171
Lighting.	125
Meaning of the symbols	125
STILL SafetyLight.	131
Warning zone light.	132
List of abbreviations.	21
Lithium-ion batteries	
Battery weight and dimensions.	346
Changing the battery type	357
Charging.	352
Checking the charge state	350
Danger areas.	34
Declaring the use of.	32
Display.	65
Driver qualification.	32
Fire protection measures.	345
	345 344
First-aid measures	344
Hazard assessment	347
Illustration.	347 439
	439



Installing	362
Maintenance personnel	344
Nameplate	13
Permissible batteries.	32
Procedure in the event of a fire	32
Product-specific dangers	34
Regulations for storing.	348
Safety regulations	346
Special features.	31
Transport outside the premises	33
Lithium-ion battery display	65
Load	
Driving	208
Picking up	205
Setting down	213
Load-dependent functions	
Precision load measurement	226
Load capacity	196
Load chains	
Cleaning	376
Load programs	
Selecting 1 to 3	185
Load weight-dependent functions	
Calibrating the load measurement	224
Dynamic Load Control 1	220
Dynamic Load Control 2	221
Load measurement	223
Overload detection	219
Tare function	229
Total load	231
Lubricating the joints and controls	404

Μ

Main display	103
Maintenance	
General information	391
Safety regulations.	388
Maintenance data table	401
Battery	401
Brake system	401
Controls/joints	401
Drive axle.	402
Electrical system.	401
General lubrication points	401
Hydraulic system.	401
Lift mast	402

Load chains	402
Steering axle	402
Tyres	402
Washer system	403
Maintenance personnel for batteries	391
Maintenance work without special qualifi-	
cations	391
Malfunctions during lifting mode	192
Malfunctions in the parking brake	157
Manual tow coupling	
Coupling	302
Uncoupling	303
Mast tilt angle display	218
Medical equipment	40
Messages	
About operation.	312
About the truck	318
Introduction	312
Mini-console	73
Misuse of safety systems.	38
Multi-lever	
Lifting/lowering the fork carriage	173
Tilting the lift mast.	173

Ν

Nameplate	11
Nameplate of a lithium-ion battery	13
Neutral position	145

Oils	52
Opening/closing the battery door	359
Opening/closing the cab door	293
Opening/closing the side window	294
Operating company	28
Operating devices and display elements	64
Operating devices for hydraulic and driving	3
functions	
Double mini-lever	68
Fingertip switch	71
Joystick 4Plus	72
Multi-lever operation	67
Quadruple mini-lever	70
Triple mini-lever	69
Operating materials	
Quality and quantity	398
Operating procedures	23



12

Operating the signal horn	93
•	116
	398
Overhead guard	
Drilling	37
Roof loads.	37
Welding	37
Overview	57
Accessories.	7
Overviews	'
	63
Cup holder	63 64
Display/control unit.	64 62
Driver's compartment.	
Emergency off switch.	66
Shelf.	63
Truck	60
Р	
Packaging.	25
Parking	67
Parking brake	
-	153
Actuation when the truck is in motion. 1	56
Actuation when the truck is stationary. 1	54
Emergency actuation mechanism.	325
5,	57
	159
c ,	67
Permissible lithium-ion batteries	32
	391
-	97

Permissible lithium-ion batteries.	32	Roadways 139,	141
Personnel qualifications		Aisle widths	139
•		Descending gradients.	140
Picking up loads.		Gradients	140
Place of use.	15	Rotating beacon	
Pre-Shift Check		Switching on and off.	120
All questions	113	-	
Description	111	Rules for roadways and the working area.	141
History	117	S	
Process	112	Safety devices	389
Question sequence.	115	Safety inspection.	
Shift start	119	Safety regulations for handling consuma-	50
Truck restrictions.	122	bles	52
Procedure if truck tips over	322	Safety regulations for handling lithium-ion	02
Procedure in emergencies	321	batteries.	344
Procedure in the event of a fire when usin	g	Battery weight and dimensions	346
lithium-ion batteries	32	Fire protection measures.	345
Product-specific dangers of lithium-ion bat	t-	Maintenance personnel	344
teries	34		

Prohibition of use by unauthorised persons Proper usage.	30 s. 14
Q	
Quadruple mini-lever	
Lifting/lowering the fork carriage	179
Tilting the lift mast.	179
R	
Radio	295
Rear window heating	
Switching on and off	283
Reducing speed when turning	163
Regular inspections.	50
Regulations for storing lithium-ion batter-	
ies	348
Replacing the battery	
General information	356
High Performance variant	356
Lithium-ion battery	362
Using a change frame	367
Using a truck	362
Residual dangers	42
Residual risk	42
Residual risks	42
Retrofitting	35
Reversible fork arms	191
Checking	418
Roadways 139,	141
Aisle widths	139
Descending gradients	140
Gradients	140
Rotating beacon	
Switching on and off	130

Production number....

s

Safety inspection	50
Safety regulations for handling consuma-	
bles	52
Safety regulations for handling lithium-ion	
batteries 34	14
Battery weight and dimensions 34	16
Fire protection measures 34	15
Maintenance personnel 34	14



Safety regulations for handling the bat-	
tery	332
Battery weight and dimensions.	334
Damage to cables and battery male	
connectors	335
Fire protection measures	333
Maintenance personnel.	332
Performing battery maintenance.	334
Safety regulations for maintenance	
General information.	388
Safety devices.	389
Set values	389
Working on the electrical equipment.	388
Working on the hydraulic equipment.	388
Safety regulations for working on the lift	
mast	390
Safety regulations for working with lithium-	
ion batteries	346
Safety regulations when driving	137
Safety regulations when handing loads	195
Safety tests	50
Schematic views	23
Scope of the documentation	18
UPA solutions	19
Seat belt	86
Checking	406
Cleaning	407
Fastening	86
Fastening on a steep slope	88
Maintaining	406
Malfunction due to cold weather condi-	
tions	88
Releasing	88
Replacement after an accident	407
Service brake	
Actuating	152
Servicing the heating system or air condi-	
tioning.	408
Cleaning the fresh-air inlet.	408
Replacing the filter mat.	408
Set values.	389
Shake function.	209
	212
Fingertip switch.	213
Joystick 4Plus.	211
Quadruple mini-lever	212
Triple mini-lever	212

Shelf	63
Shock recognition.	280
Special risks	43
Speed reduction when the cab door is	
open	164
Speed restriction	
Configuring	165
Switching on and off	165
Sprint mode	
Automatic switch-off	136
Switching on and off	135
Stability	43
Starting drive mode	148
Dual pedal version	150
Steering	162
Steering axle	
Lubricating	411
Servicing	411
Steering system	
Checking for correct function	101
Storing the truck.	383
StVZO (Road Traffic Licensing Regula-	
tions) information	12
Sun blind	300
Sun visor	300
Switching off the truck	167
Switching on	
using the key switch	103
via the push button	104

Т

Technical data	
Dimensions	423
Tilt end stop damping	218
Topicality of the operating instructions	20
Tow coupling RO*244	304
Closing	307
Coupling	306
Uncoupling	307
Towed load	301
Towing	
Procedure	328
Proper use	14
Safety information	327
Trailer operation.	301
Trailers	
Towing	308



Transport	379
Transporting pallets	199
Transporting suspended loads	200
Transporting the battery by crane	
Lead-acid battery	372
Lithium-ion battery	373
Transporting the lithium-ion battery	33
Turn indicators	
Switching on and off	128
Tyres	
Safety principles	38

U

Unlock the emergency off switch	92
Use after storage or decommissioning	385
Using the truck.	14
Using working platforms	17

V

Variant	
Ceiling sensor	283
Variants	
Access authorisation for the fleet man- ager	107
Access authorisation with PIN code	106
Air conditioning	298
Automatic mast vertical positioning	
101,	201
Blue-Q	133
Clamp locking mechanism	278
Clipboard	299
Dynamic Load Control 1	220
Dynamic Load Control 2	221
FleetManager	280
Fork extension.	189
Fork wear protection	185
Heating system	295
Interior lighting.	294
Lifting systems.	170
Load measurement.	223
NiHo lift mast	171
Optical lift height measuring system.	289
Overload detection.	219
Pre-Shift Check.	111
Precision load measurement	226
Radio	295
Reversible fork arms	191

Shake function	209
Shock recognition.	280
Speed reduction when the fork carriage	÷
is raised	164
Speed restriction	165
Sun blind	300
Sun visor	300
Switching on via the push button (var-	
iant)	104
Tare function	229
Total load	231
Triple mast	171
Wheel chock	169
Windscreen wipers and washers	280
VDI datasheet	
RX60-25	425
RX60-25/600	425
RX60-25L/600	425
RX60-30	429
RX60-30/600	429
RX60-30L/600	429
RX60-35L	433
View of functions and operating proce-	
dures	23
View of operating procedures	23
Views of the display and operating unit	24
Visual inspections	76
W	

Warming up the hydraulic oil	100
Warning regarding non-original parts	37
Warning zone light	
Operating	132
Wedging the wheels.	380
Wheel chock.	169
Wheels and tyres	
Checking the condition and wear of the	;
tyres	410
Checking wheel fastenings	411
Servicing	410
Windscreen wipers and washers	
Switching on and off	280
Working at the front of the truck	390
Working on the electrical equipment	388
Working on the hydraulic equipment	388
Working spotlight for reverse travel	
Switching on and off	128

Working spotlights Switching on and off. 127

Y Yo

'our truck	2
------------	---



STILL GmbH

56378011501 EN - 12/2019 - 04